



-INSTALLATION- INSTRUCTIONS




LP ADVENTURE BUMPER GUARD




SUBARU FORESTER 2014-2018

**CONGRATULATIONS FOR YOUR NEW
LP AVENVENTURE BUMPER GUARD!**

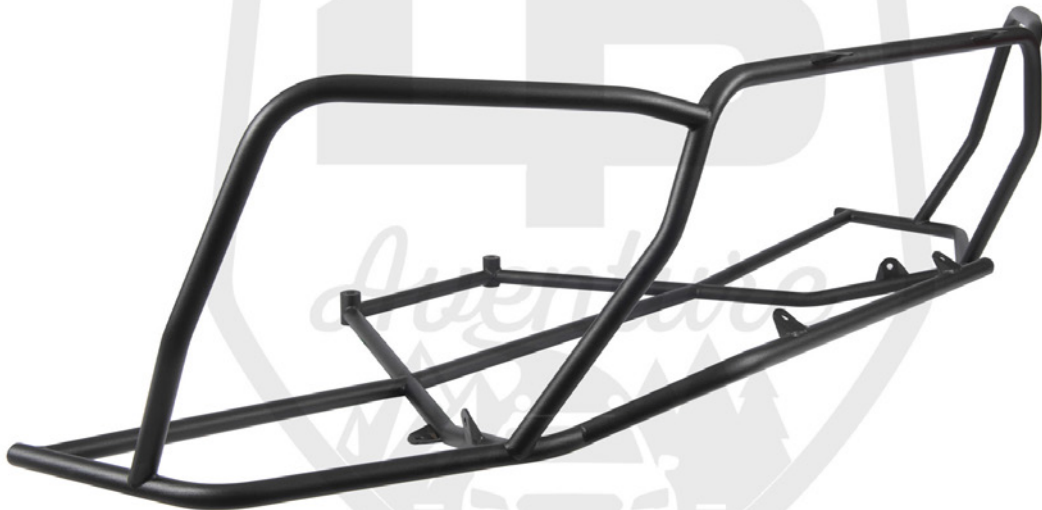

IN THE BAG

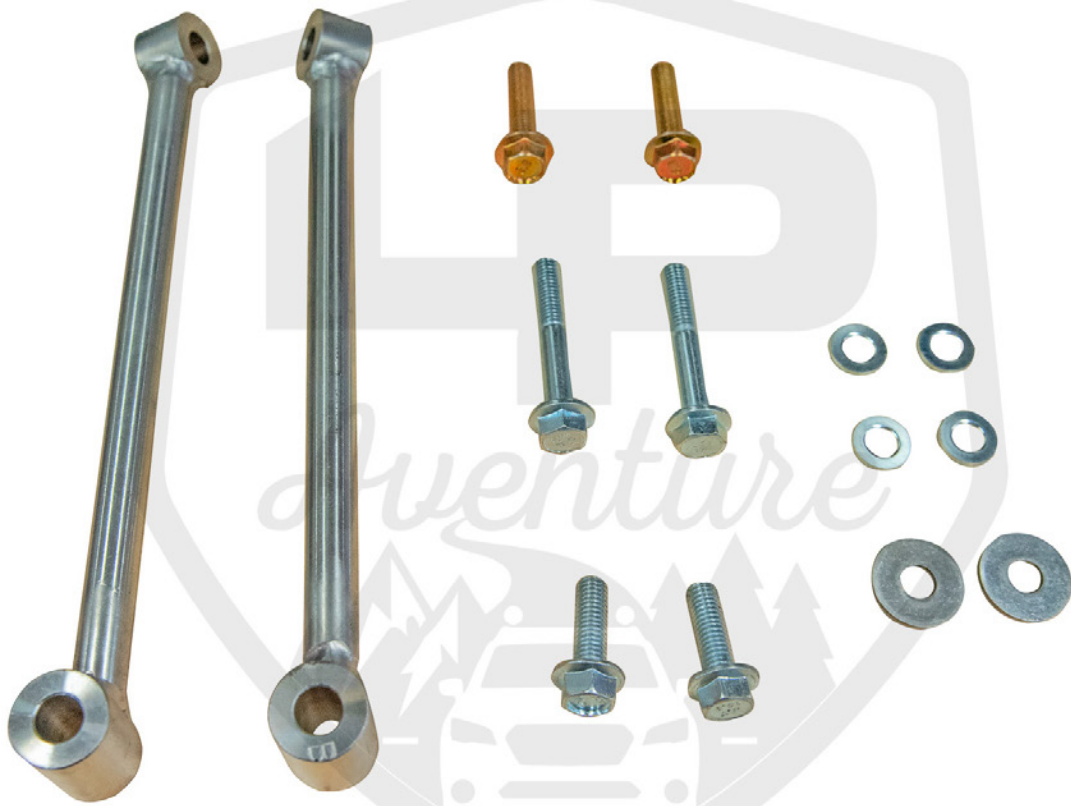



NECESSARY TOOLS

- We recommend the use of a liftv
- Jack
- Ratchet
- 14mm Socket
- 19mm Socket
- 22mm Socket

1

INSTALL BUMPER GUARD SUPPORT RODS



REMOVE BOLT






2


INSTALL BUMPER GUARD SUPPORT RODS WITH SUPPLIED HARDWARE



MAKE SURE YOU INSTALL THE CORRECT SUPPORT ROD ON THE CORRECT SIDE OF THE VEHICLE

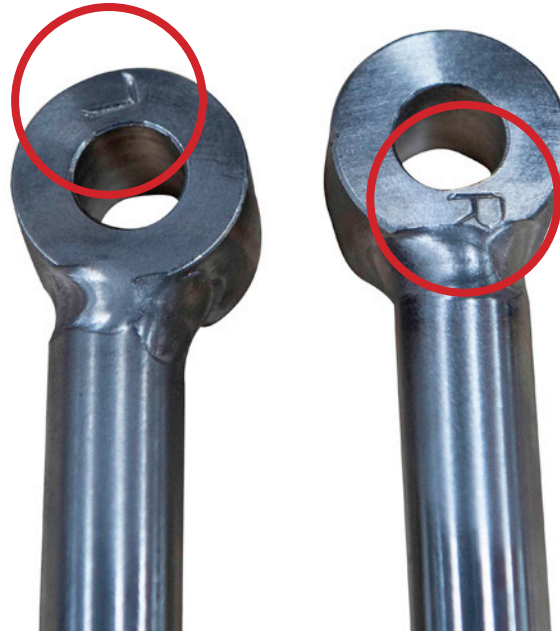


WIDE END POINTS TOWARDS THE CENTER OF THE VEHICLE

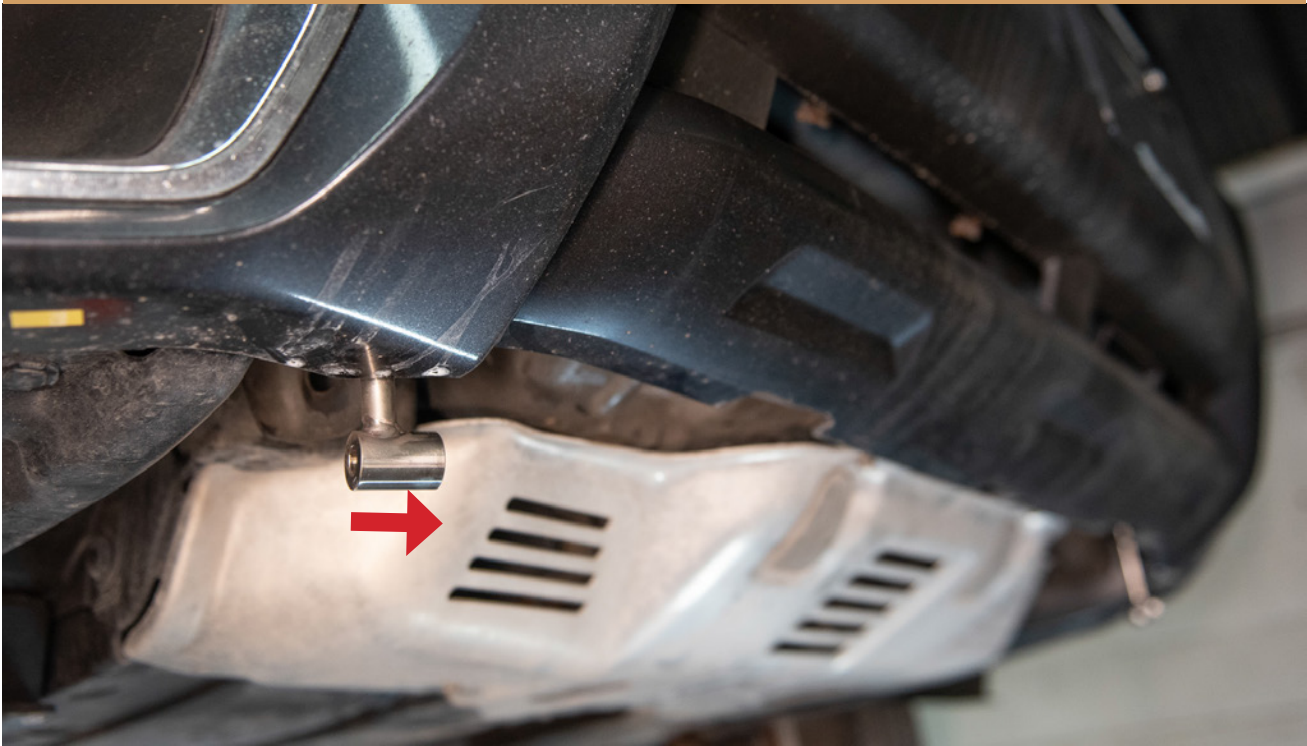

3

REMOVE TRANSMISSION SUPPORT BOLTS

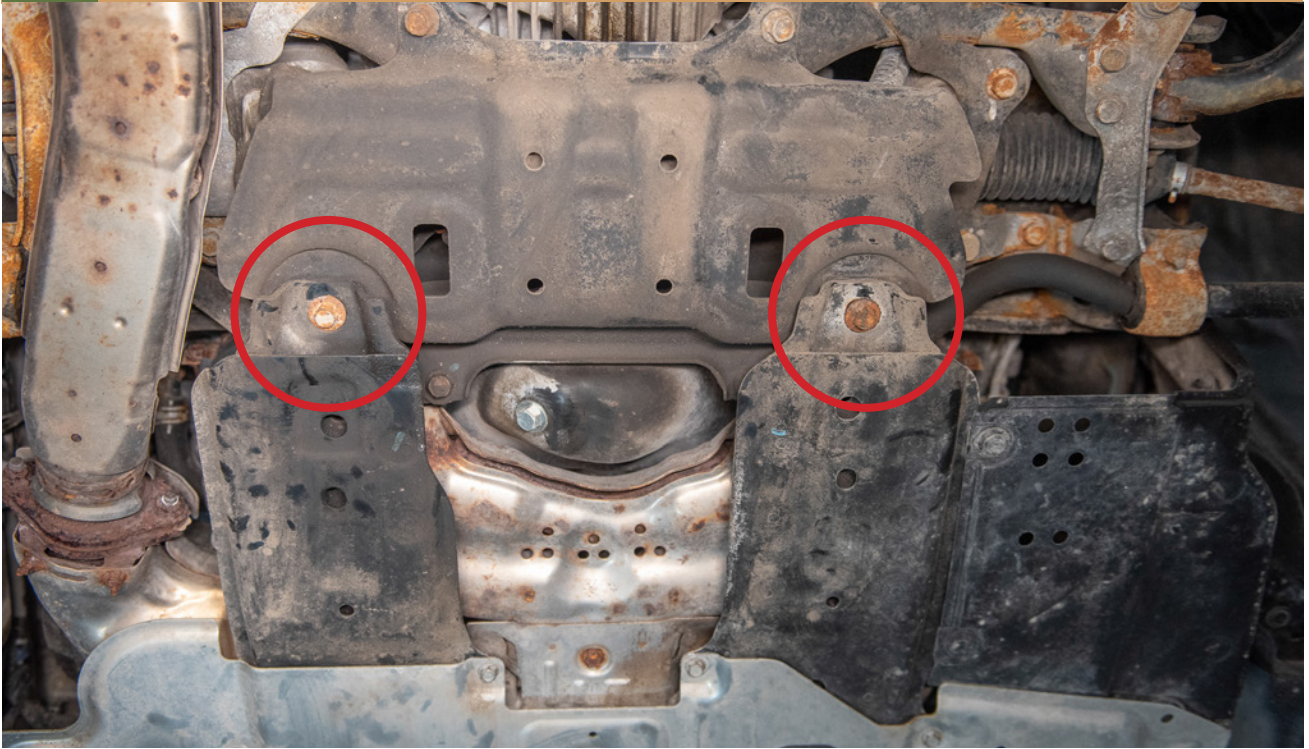

4

USE A JACK WITH A PIECE OF WOOD TO HELP SUPPORT THE BUMPER GUARD DURING INSTALLATION



5

RAISE BUMPER GUARD INTO PLACE



6

FASTEN THE REAR OF THE BUMPER GUARD WITH THE SUPPLIED HARDWARE



7

ALIGN THE BUMPER GUARD WITH ITS SUPPORTS RODS



8

USE SUPPLIED HARDWARE TO ATTATCH BUMPER GUARD TO SUPPORT ROD



9

MAKE SURE THE BUMPER GUARD IS PLACED OVER THE FENDER COVER



10

TIGHTEN ALL THE BOLTS



INSTALLATION COMPLETE!



Looking for grille guards & bull bars? Visit our website.