



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE MAIN SKID PLATE ◀

SUBARU FORESTER 2014-2018

CONGRATULATIONS FOR YOUR NEW
LP AVENVENTURE SKID PLATE!



IN
THE
BOX



IN THE BAG





NECESSARY TOOLS

- We recommend the use of a lift
- Ratchet
- 17mm Wrench
- 17mm Socket

1

WITH A LP AVENTURE BUMPER GUARD INSTALLED LOCATE THE SKID PLATE FRONT MOUNTING LOCATIONS



2

REMOVE THESE TWO BOLTS





3

RAISE THE SKID PLATE INTO PLACE



4

ATTACH THE REAR OF THE SKID PLATE BY PLACING THE PROVIDED ALUMINUM SPACERS BETWEEN THE FRAME AND THE SKID PLATE



5 USE THE PROVIDED HARDWARE TO SECURE THE SKID PLATE




6 ATTACH THE FRONT OF THE SKID PLATE USING THE INCLUDED HARDWARE USING A WASHER AND LOCK NUT





INSTALLATION COMPLETE! MAKE SURE ALL THE HARDWARE IS TIGHT!

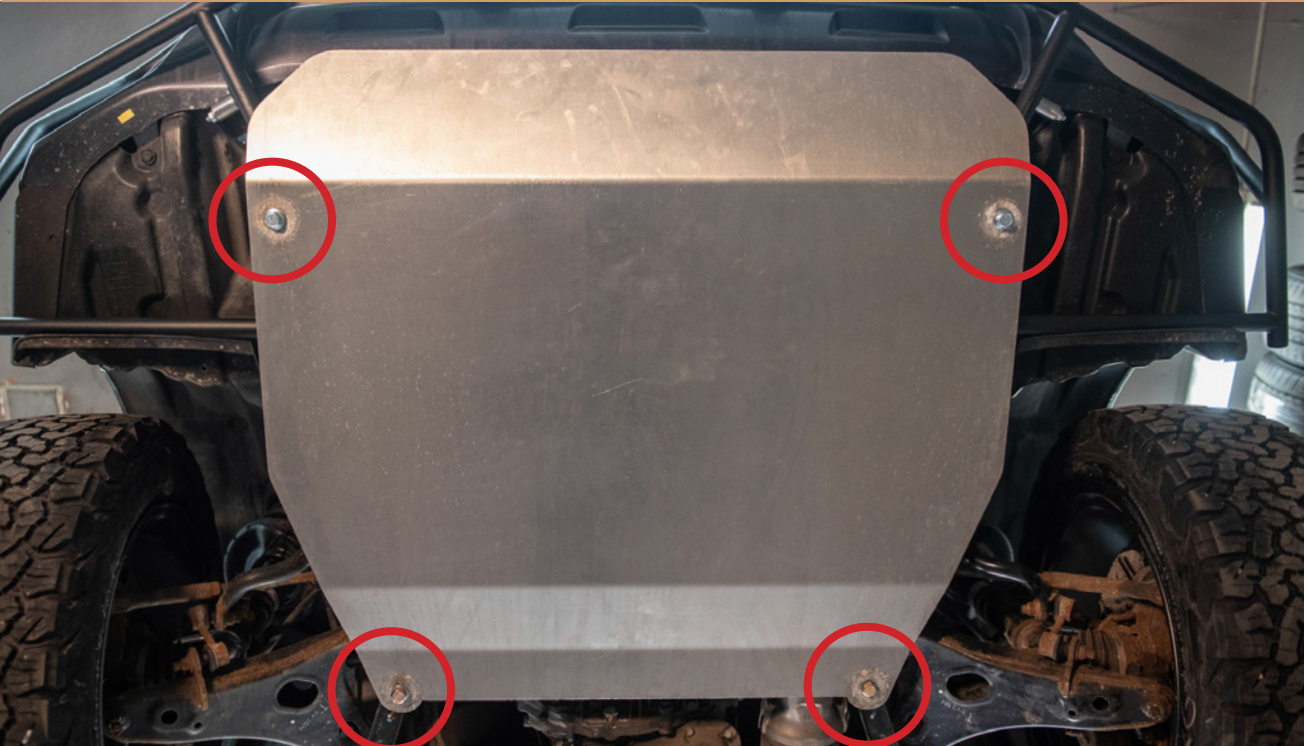

FOR ADDED STYLE AND PROTECTION OUR OPTIONAL RALLY WASHERS CAN BE USED



Rely only on high-grade performance suspension parts offered on our virtual shelves.