

SUBARU FORESTER 2.51 2017-2018







IN THE BAG




NECESSARY TOOLS

- 1. We recommend the use of a lift
- 2. Jack stand to support the bumper guard
- 3. Ratchet
- 4. -12mm Socket
- 5. -12mm Wrench







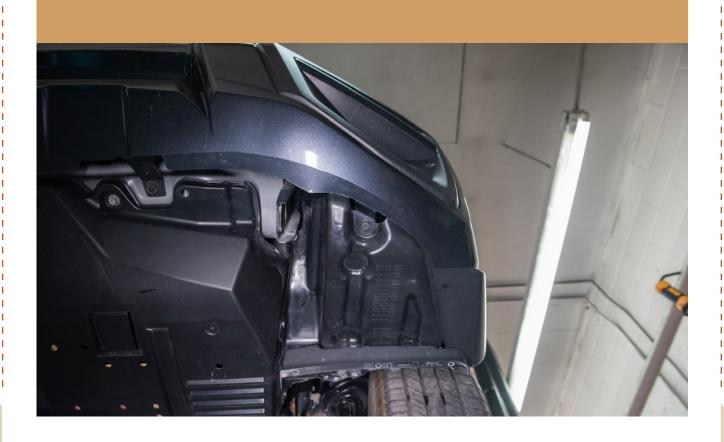







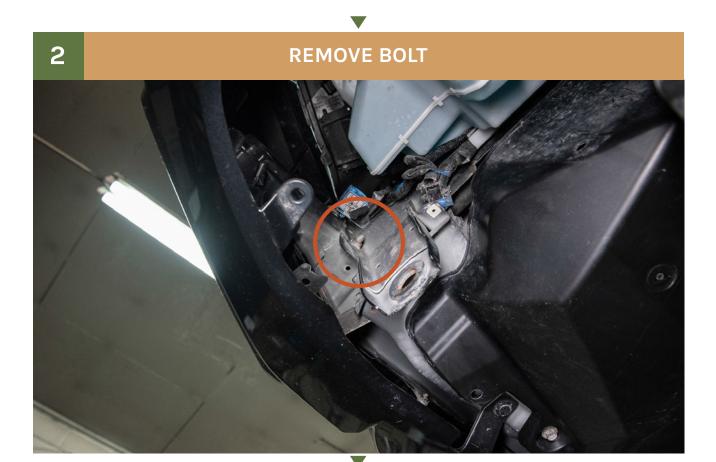

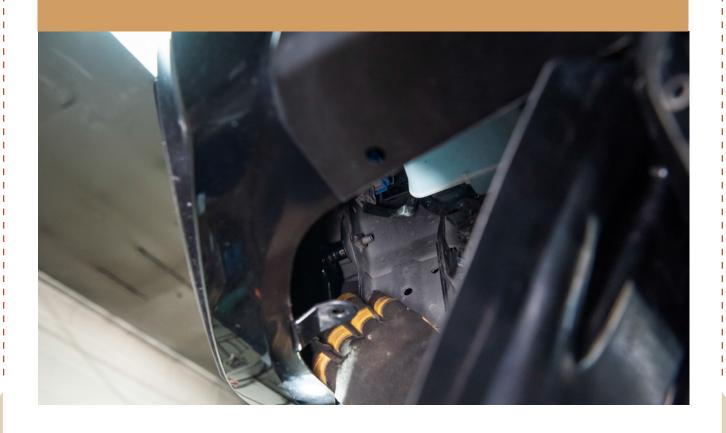

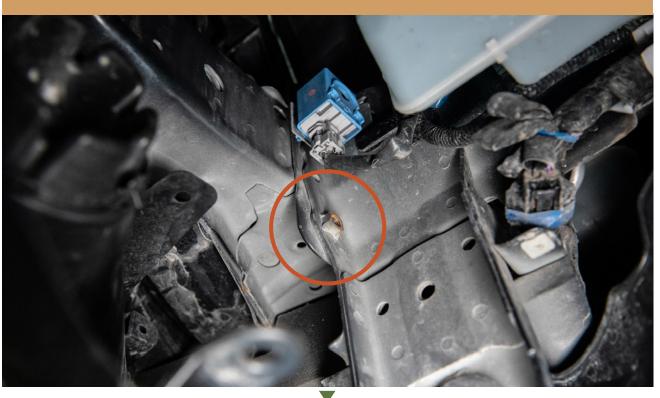



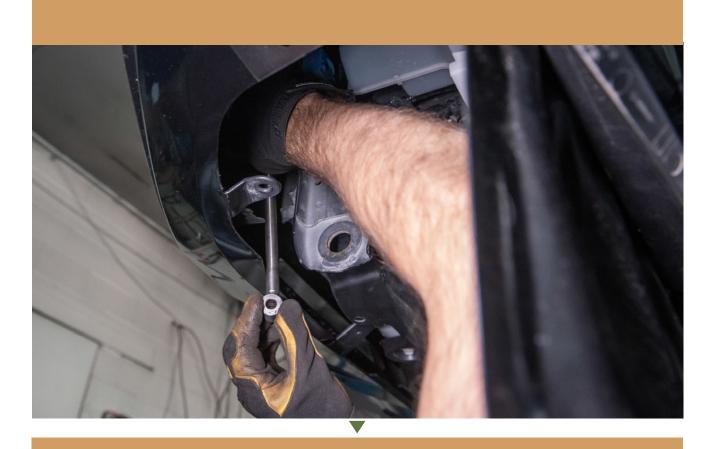

DO NOT TIGHTEN ALL THE WAY YET




4 REMOVE BOLTS FOR THE REAR OF THE BUMPER GUARD




WITH THE BOLTS REMOVED, PLACE THE TABS OF THE UNDERTRAY OVER THE BRACE TO GIVE THE BUMPER GUARD A BETTER MOUNTING SURFACE



6 USE A JACK OR A FRIEND TO HELP SUPPORT THE BUMPER GUARD DURING INSTALLATION

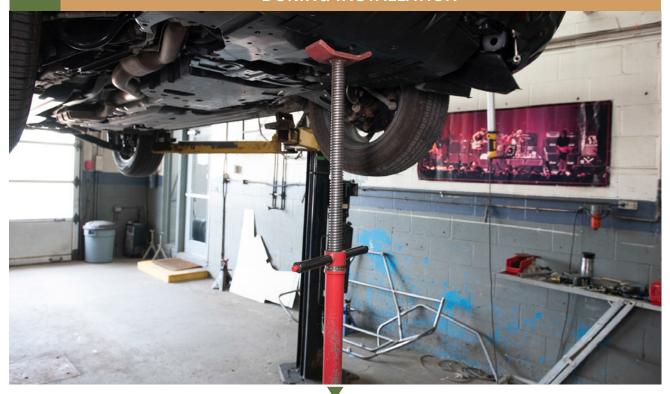

RAISE THE BUMPER GUARD INTO PLACE

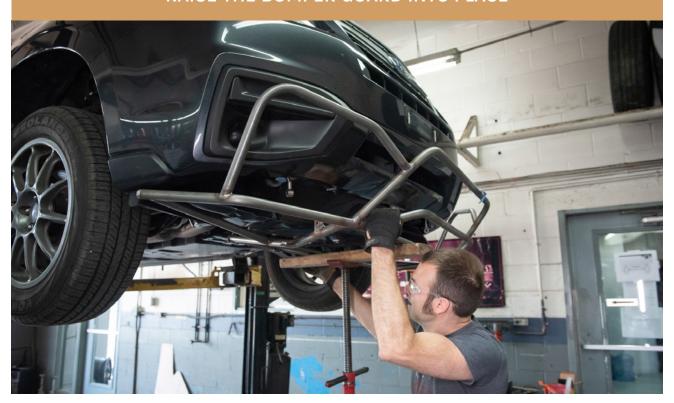


7 THREAD IN REAR BUMPER GUARD BOLTS BUT DO NOT TIGHTEN. MAKE SURE TO USE THE SUPPLIED BOLTS WITH WASHERS





8 RAISE THE FRONT OF THE BUMPER GUARD INTO PLACE TO ATTACH THE FRONT SUPPORT RODS

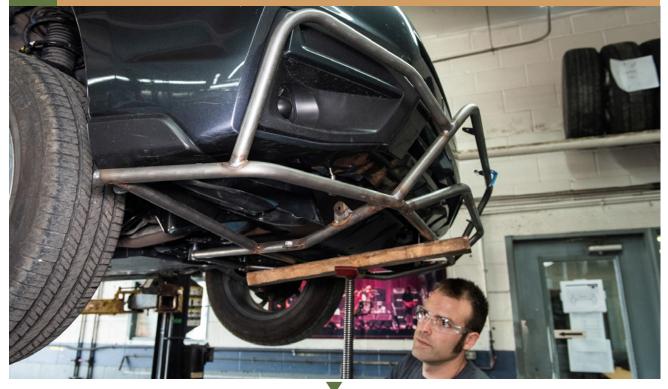

MAKE SURE THE BUMPER GUARD FITS INTO PLACE




9 ATTACH THE FRONT SUPPORT RODS



10 PUT BACK THE FENDER PLASTIC



11 GO OVER AND TIGHTEN ALL HARDWARE

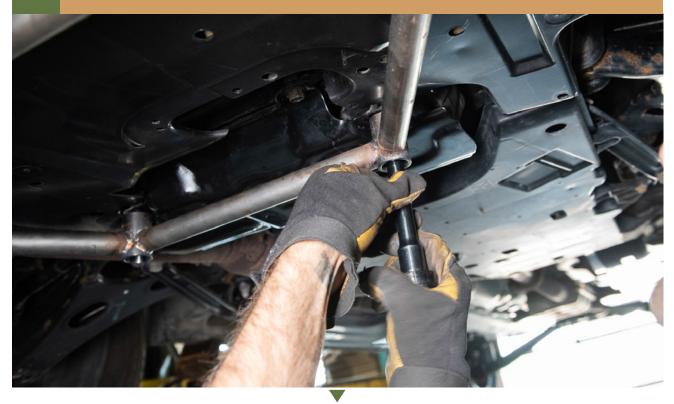

INSTALLATION COMPLETE!

