



Installation guide

LP Adventure Bumper guard

(small & big)

Subaru Outback



Necessary tools :

- Ratchets
- 12mm Socket
- 19mm Socket
- 22 mm Socket
- 12mm wrench
- 19mm wrench
- Trim pad remover




Please note that you must remove the original skid plate to install the LP Adventure bumper guard.

We suggest replacing it with the LP Adventure skid plate



#1 : Unscrew the bolt of the bumper beam.

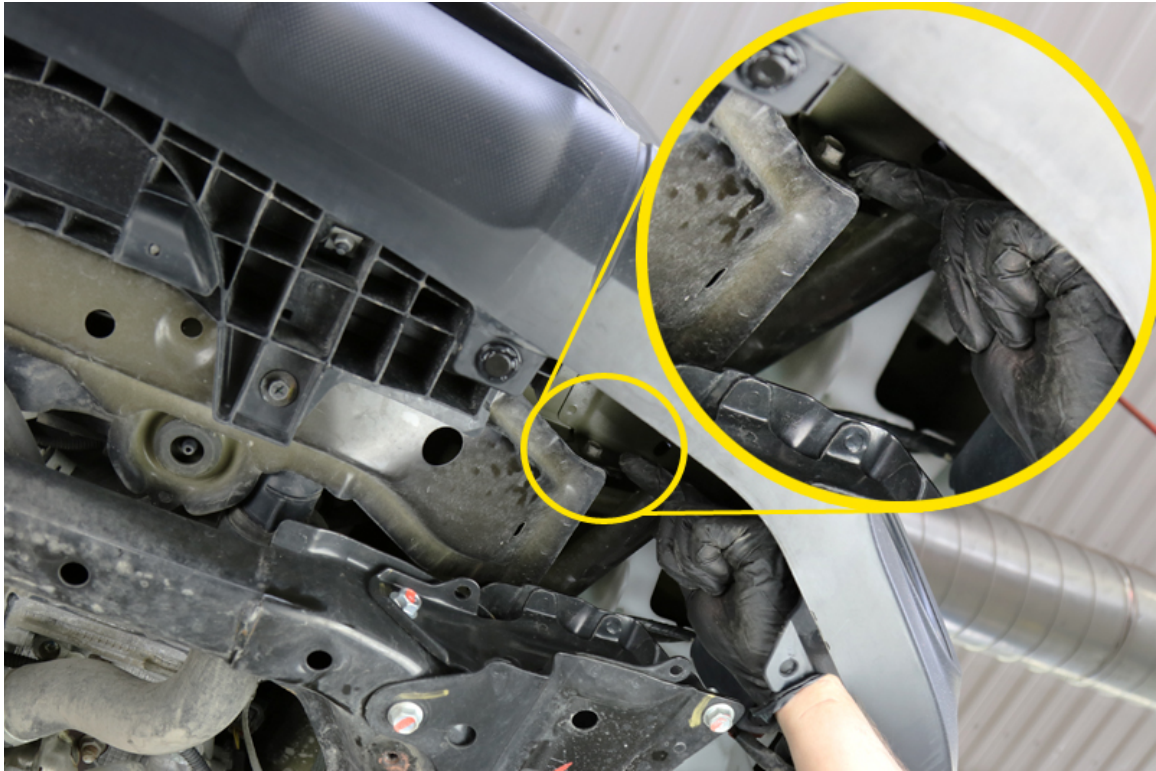


Passenger side



#2 : Install the bracket.

*** Replace the bolts of the bumper beam with bolts # 1 ***

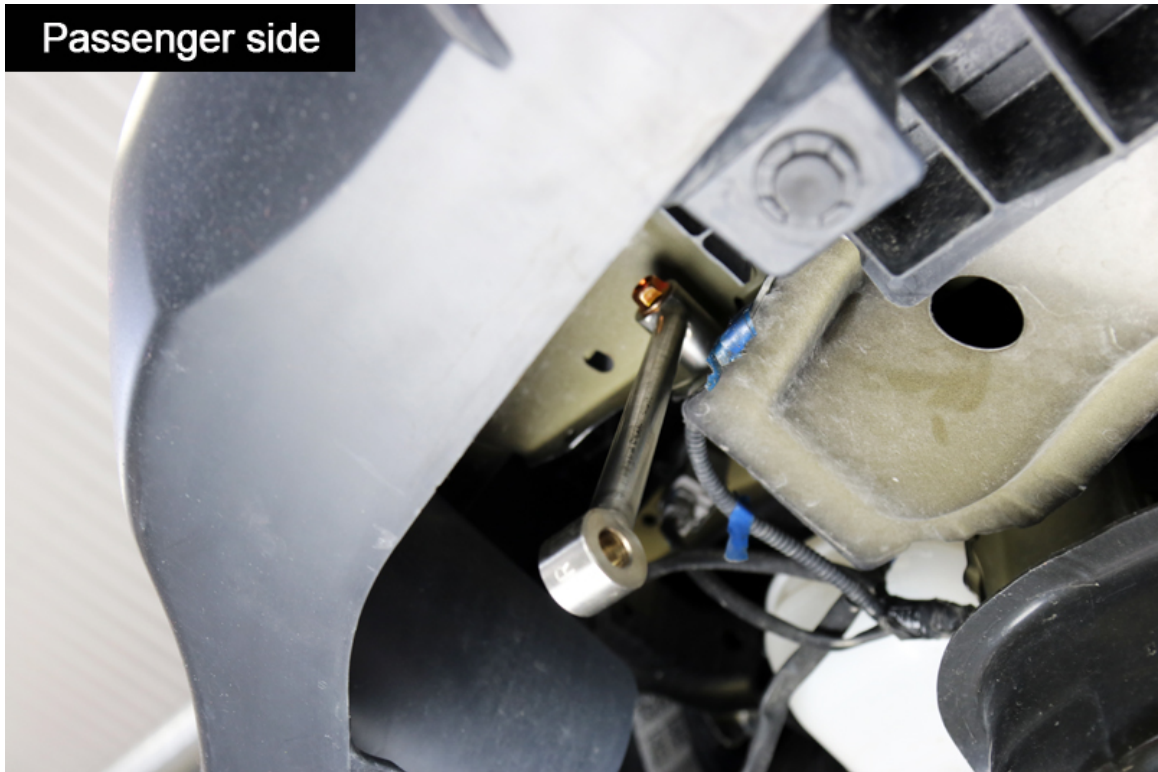


#3 : Unscrew the bolts of the U-frame




**#4 : Attach the bumper guard to the bracket,
using nuts and bolts # 2.**

***** Do not screw the bolts to the end (you can tighten these after step # 5) *****

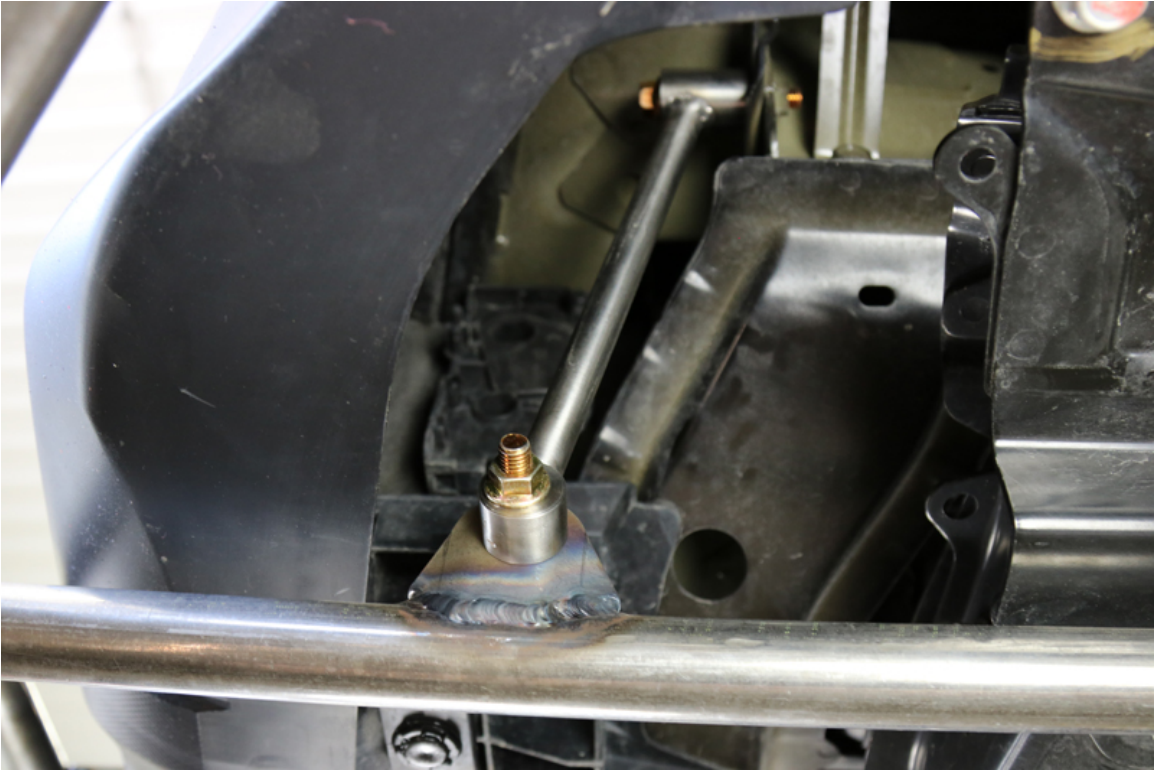


#5 : Bolt up the bumper guard.

***** (use the small bolts # 3 and the big bolt #4) *****

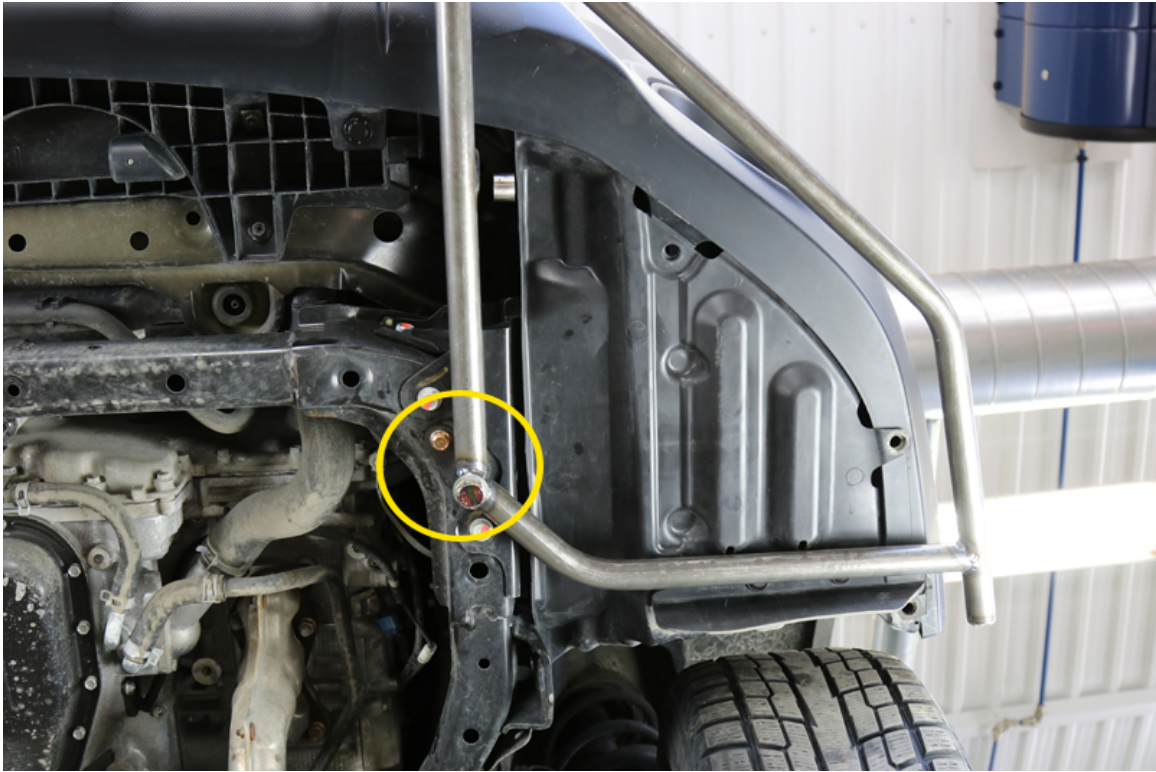

#6 : You can now completely tighten the bolts of the bracket

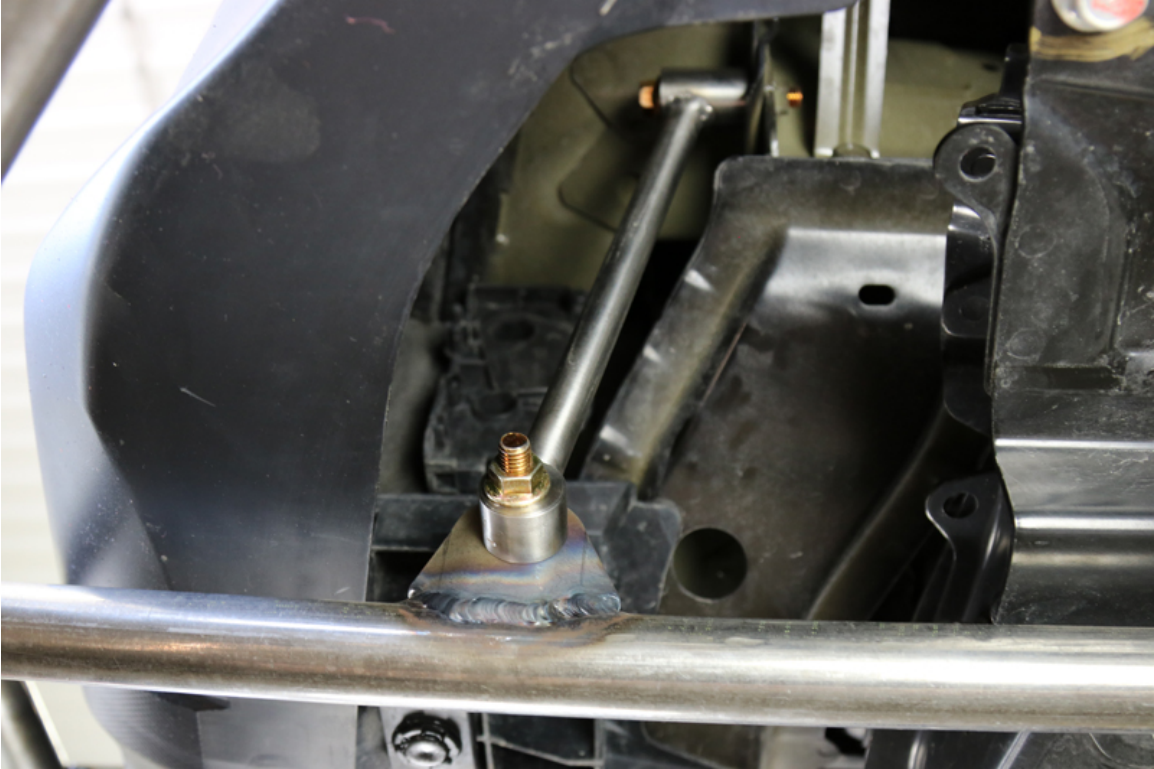

You have finalized the installation!



Here's what it's like with the big bumper guard



Options for the big bumper guard:

LP Adventure big bumper guard with the Full Armor Option



LP Adventure Skid Plate (also fit on the small bumper guard)



Option for the small bumper guard

LP Adventure front plate



Check out the collection of grille guards & bull bars we offer.