



# -INSTALLATION- INSTRUCTIONS


▶ LP AVENTURE BIG AND SMALL  
BUMPER GUARDS ◀

SUBARU OUTBACK 2020+

CONGRATULATIONS FOR YOUR NEW  
LP AVENTURE BUMPER GUARD!



IN THE BAG

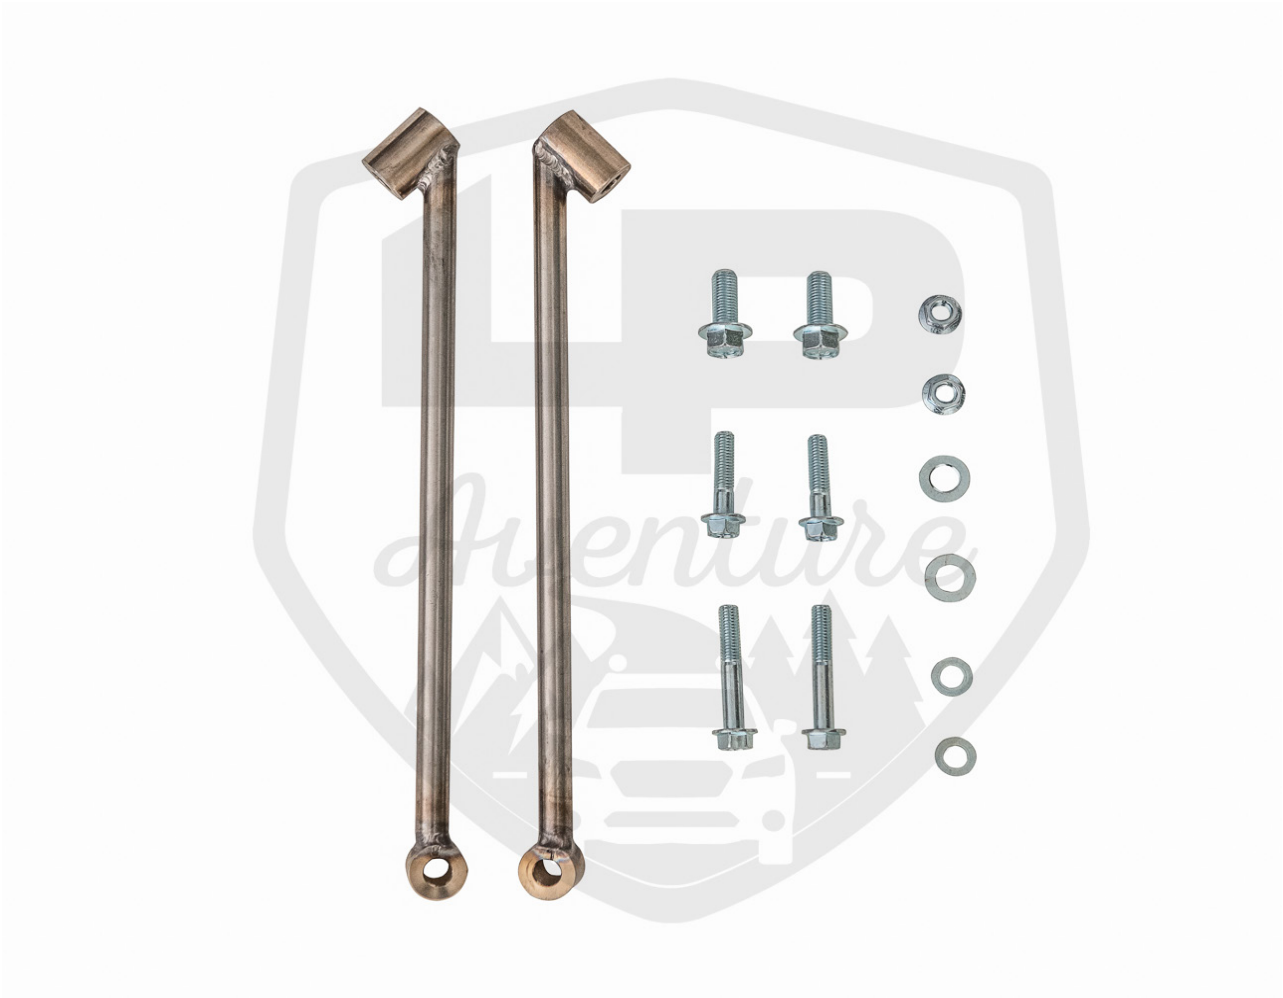



## NECESSARY TOOLS

1. - We recommend the use of a lift
2. - Jack stand to support the bumper guard
3. - Ratchet
4. -12mm Socket
5. -14mm Socket
6. -12mm Wrench
7. -14mm Wrench
8. - Knife or a Dremel



1

## ASSEMBLE BUMPER GUARD



2


## REMOVE BOLTS





3

UNFOLD REAR SECTION OF THE BUMPER GUARD  
AND RE INSTALL BOLTS

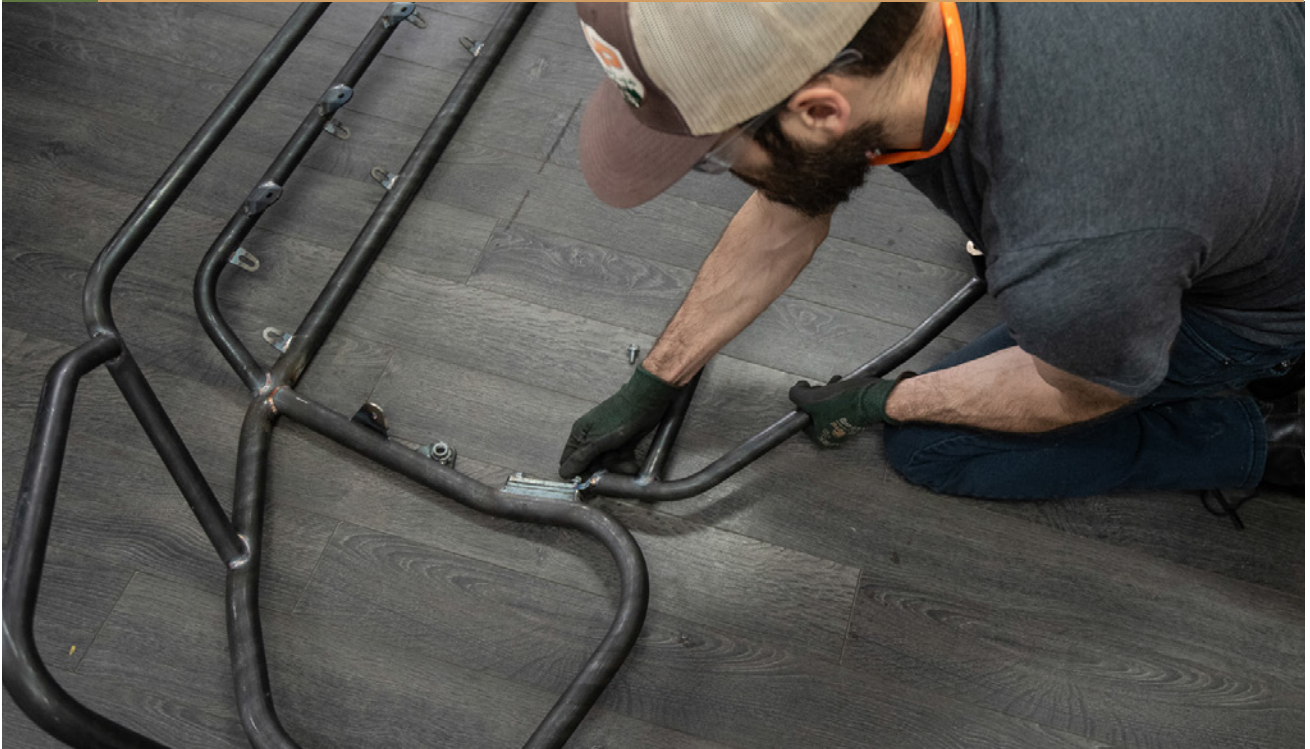

4

SNUG UP BOLTS BUT DO NOT TIGHTEN








5

REMOVE PUSH PINS ON PLASTIC UNDER TRAY








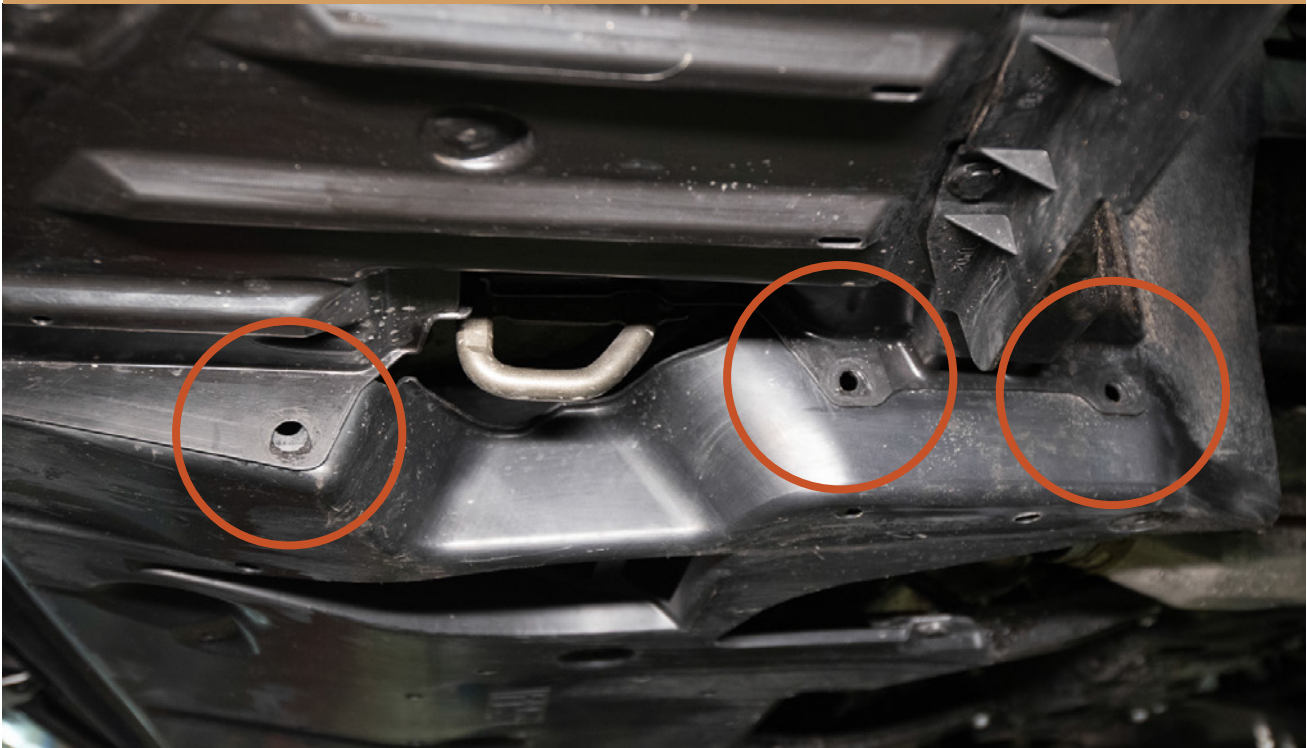






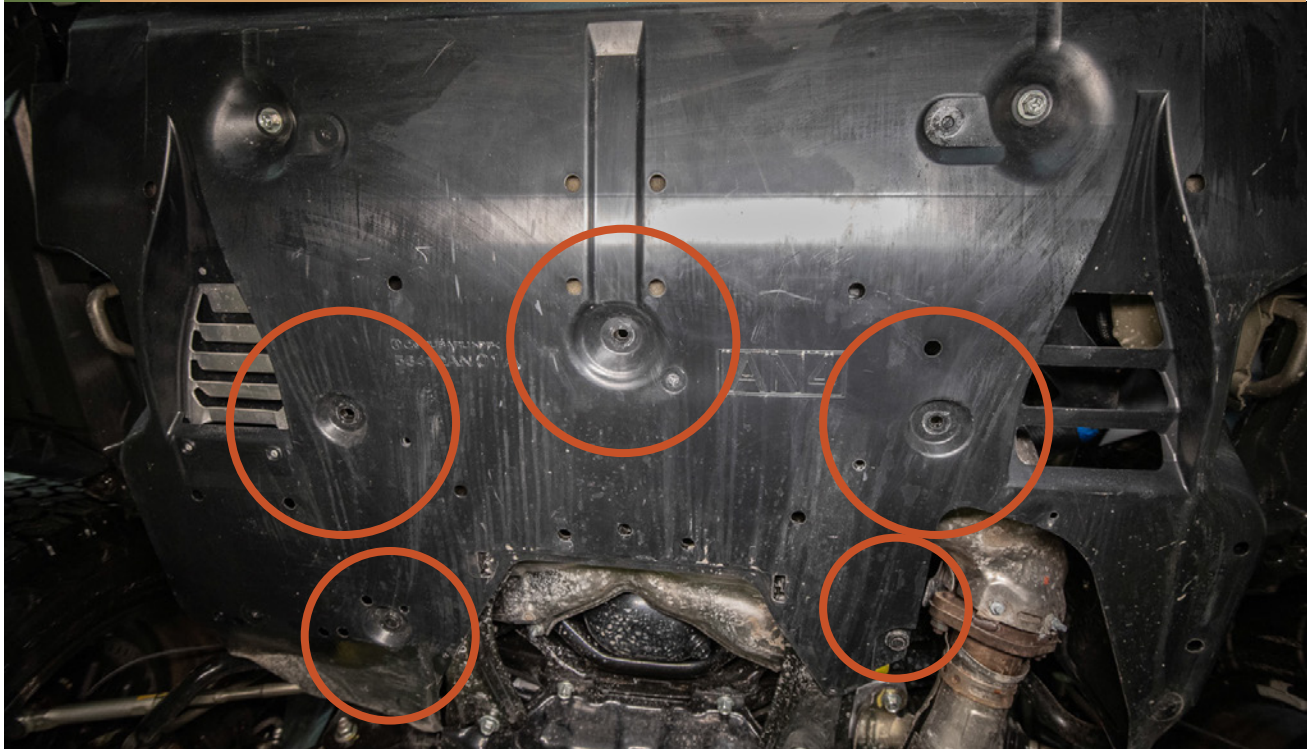

6

FOLD OVER SIDE COVERS AND SECURE WITH BUNGEE CORDS

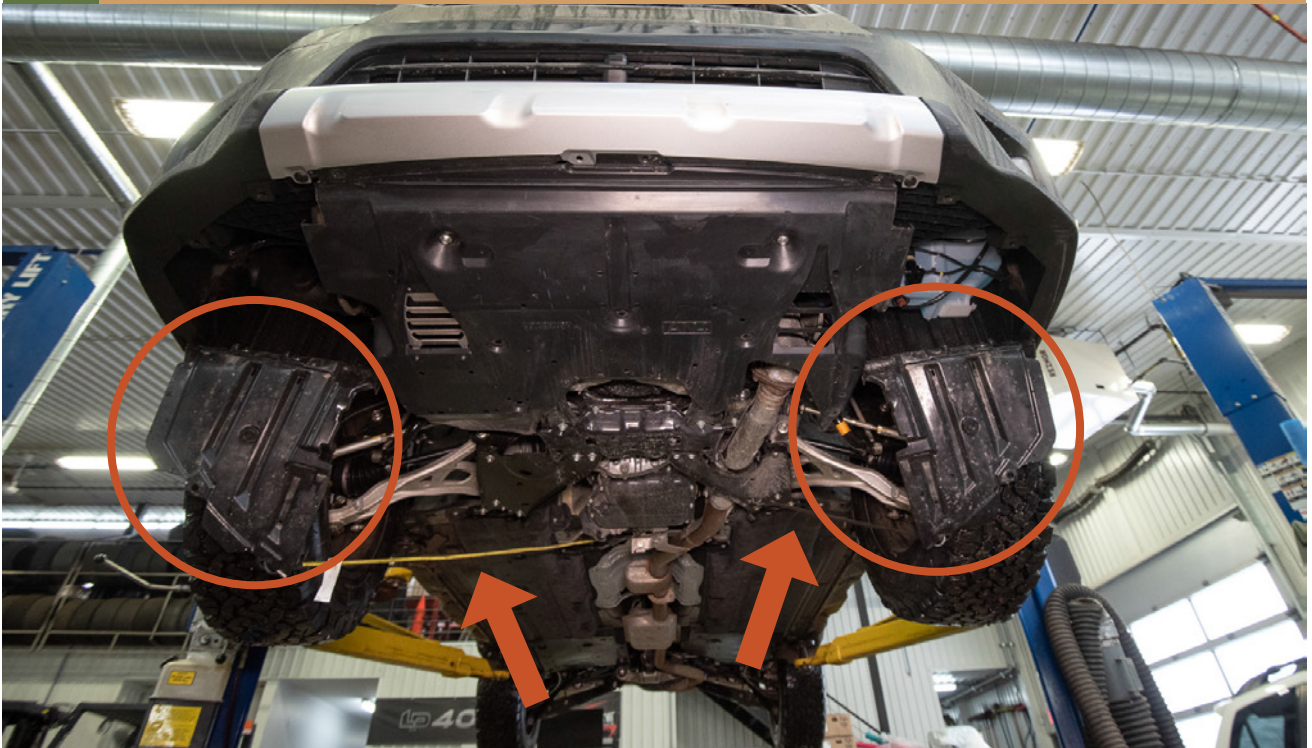



7

REMOVE BOLTS ON UNDER TRAY



8

UNCLIP UNDER TRAY





9


## REMOVE UNDER TRAY





10



# TRIM UNDER TRAY

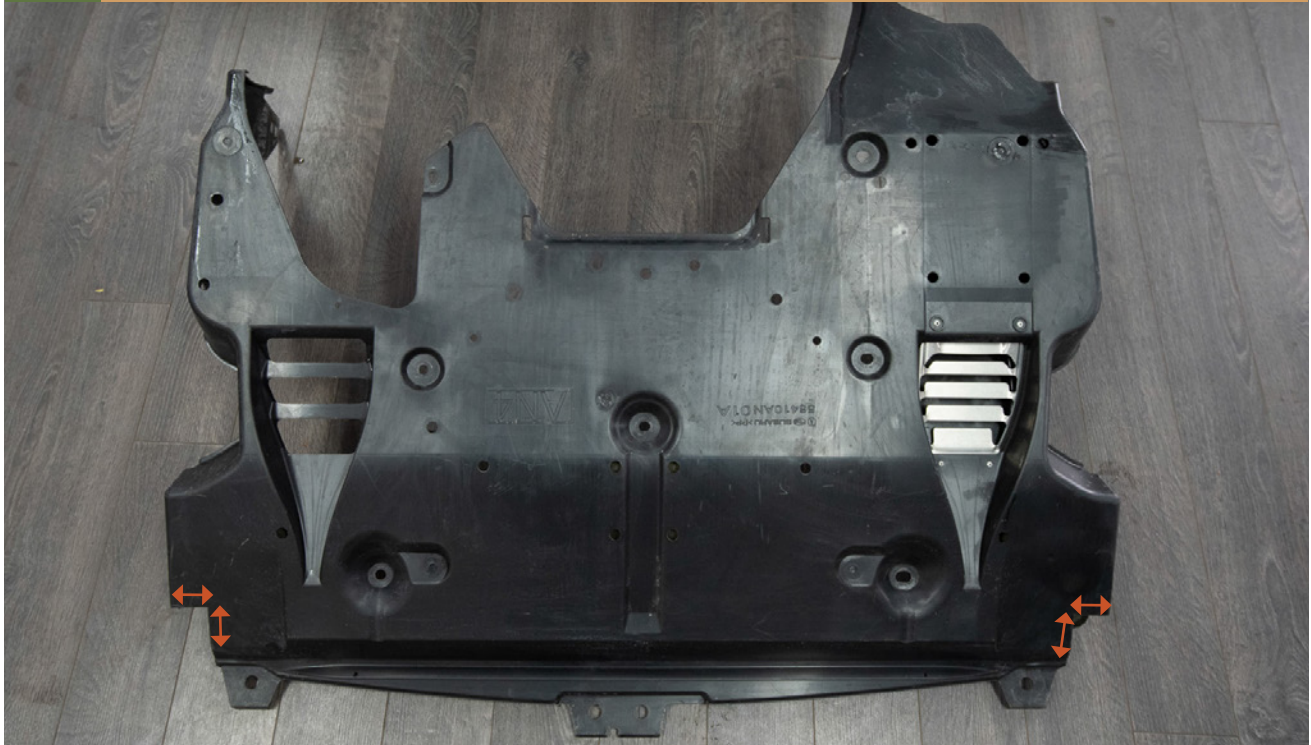



10B

FOR 2.5 MODELS YOU MUST ALSO TRIM HERE

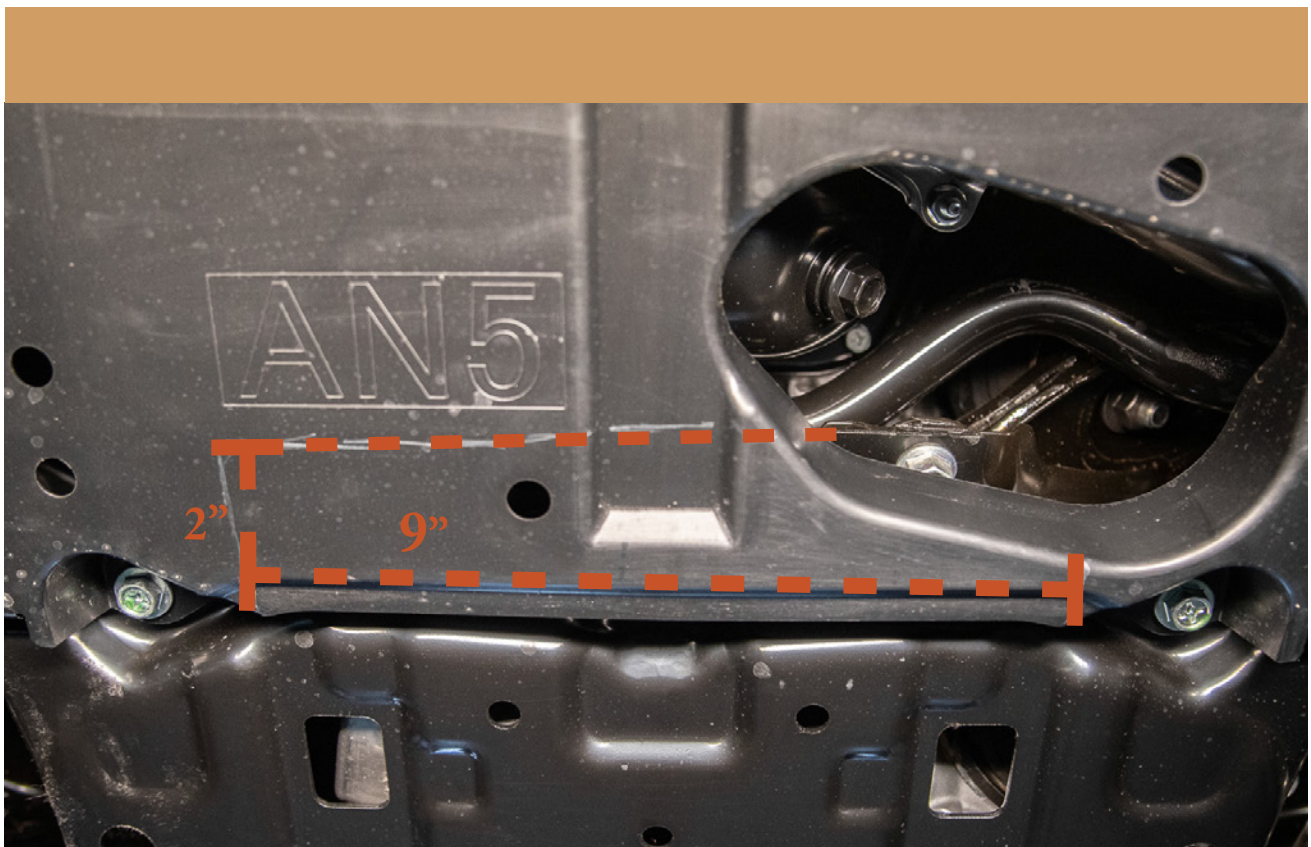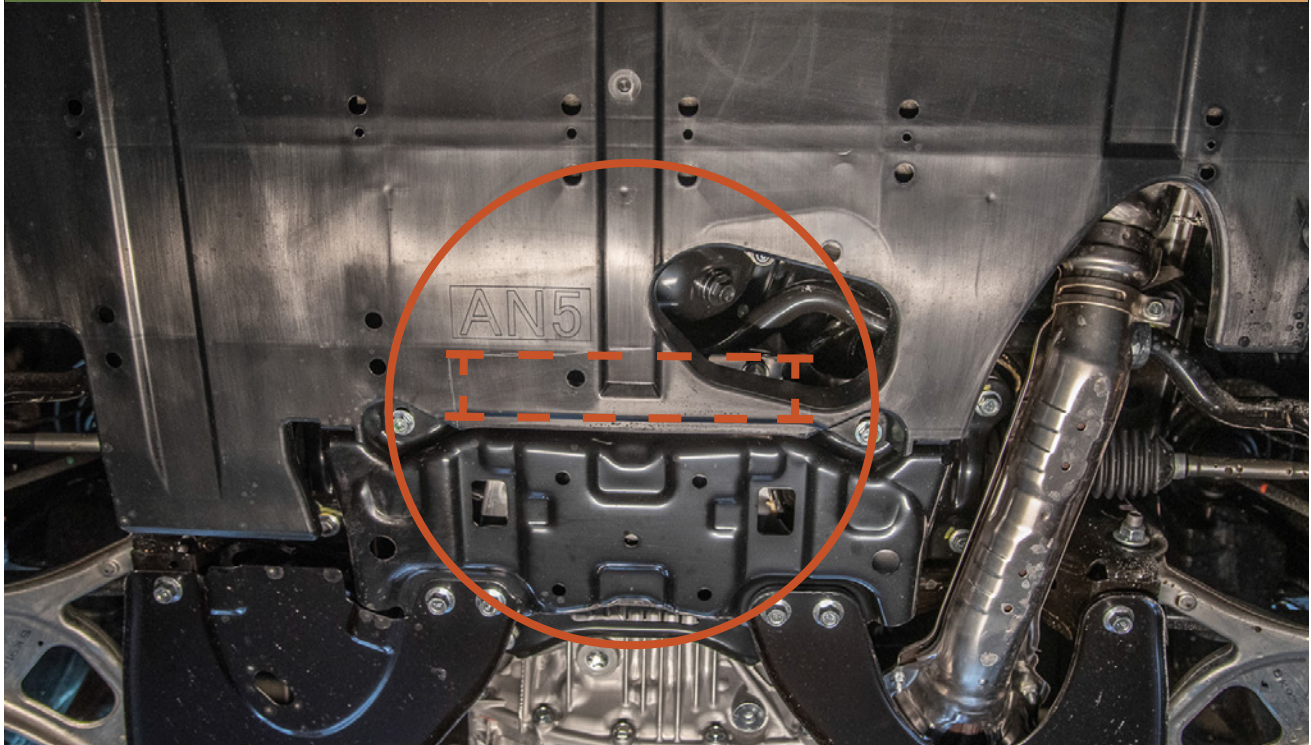

11

REMOVE BOLT TO INSTALL SUPPORT ROD







ONCE THE BOLT IS LOOSE WE SUGGEST THE  
USE AN EXTENSION SOCKET



12

## INSTALL BUMPER GUARD SUPPORT RODS



MAKE SURE TO USE THE CORRECT ROD FOR EACH SIDE OF THE VEHICLE; R = DRIVERS RIGHT SIDE





PLACE SUPPORT RODS AS SHOWN





17

TIGHTEN BOLTS FOR THE SUPPORT RODS



13

DRIVERS RIGHT SIDE


DRIVERS LEFT SIDE





14

PUT BACK UNDER TRAY AND SIDE COVERS

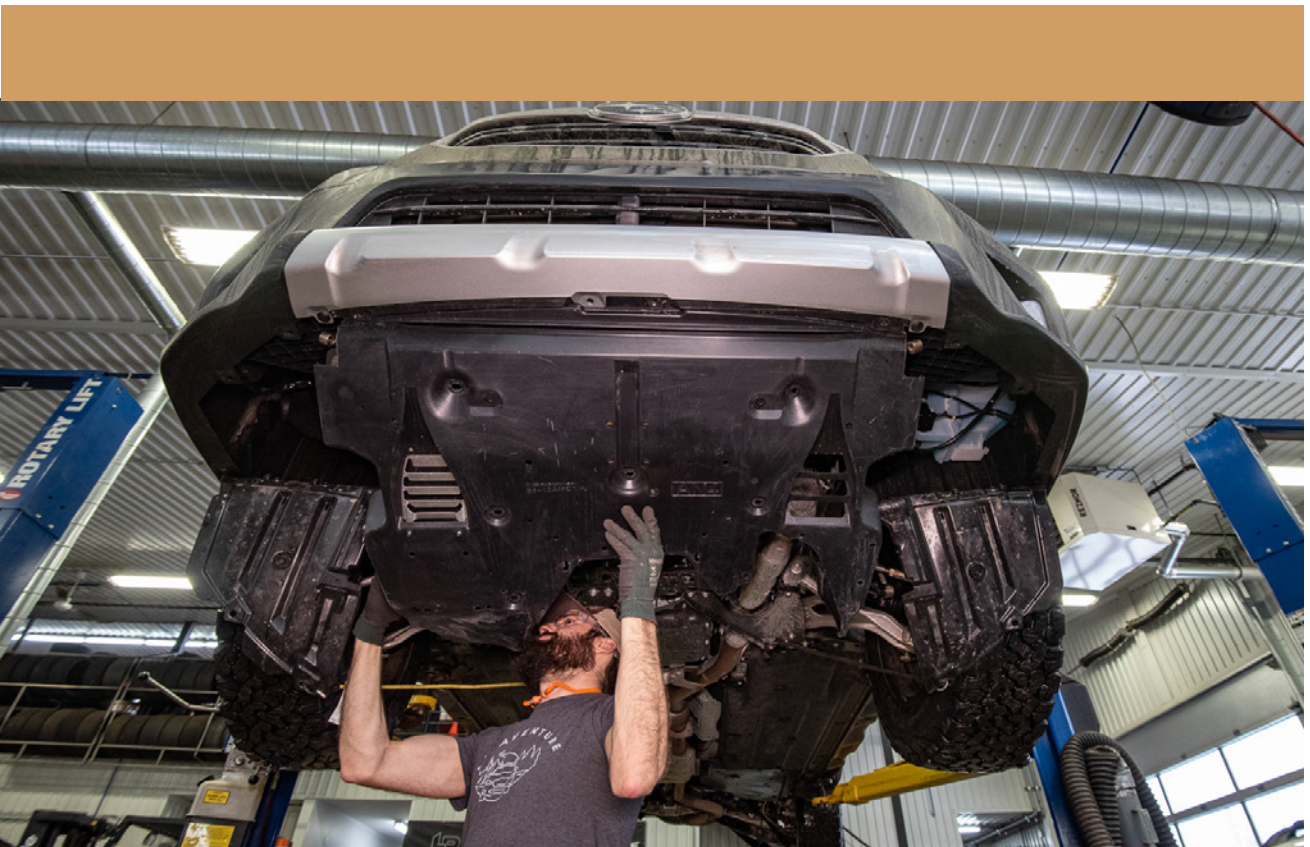






15

REMOVE THESE TWO BOLTS

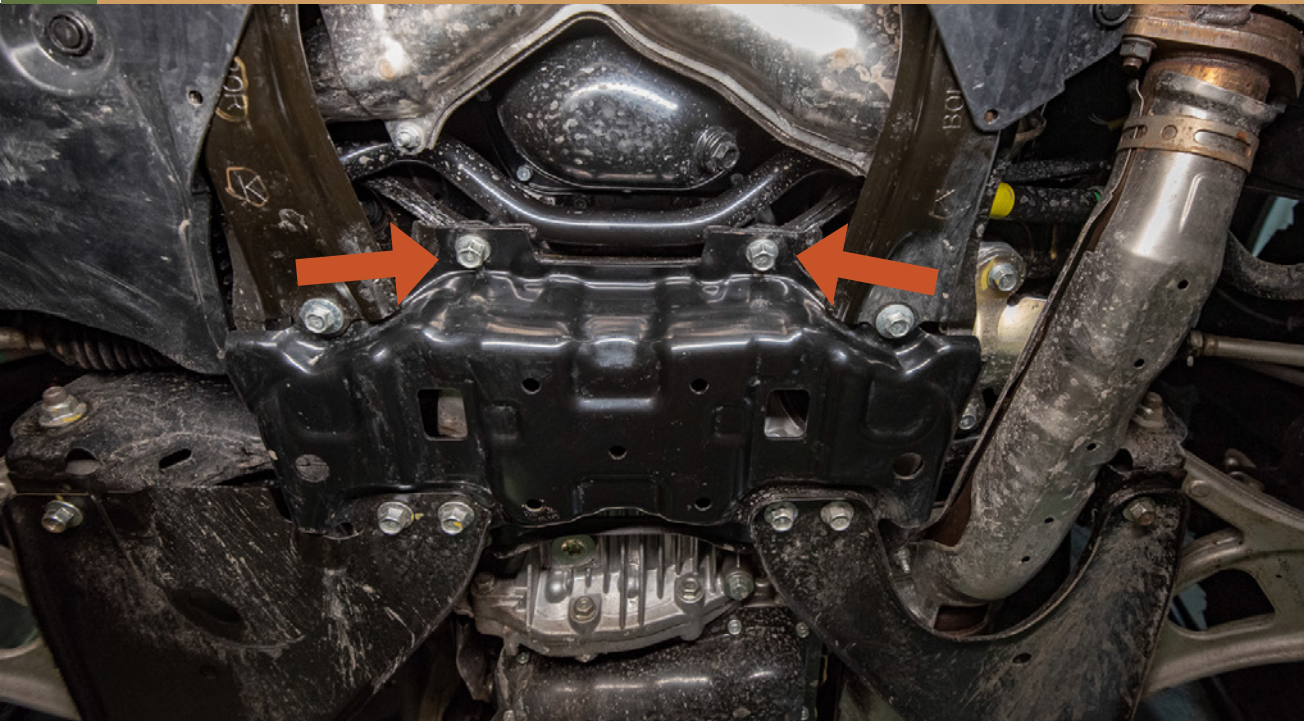









16

USE A JACK STAND AND PIECE OF WOOD TO INSTALL THE BUMPER GUARD

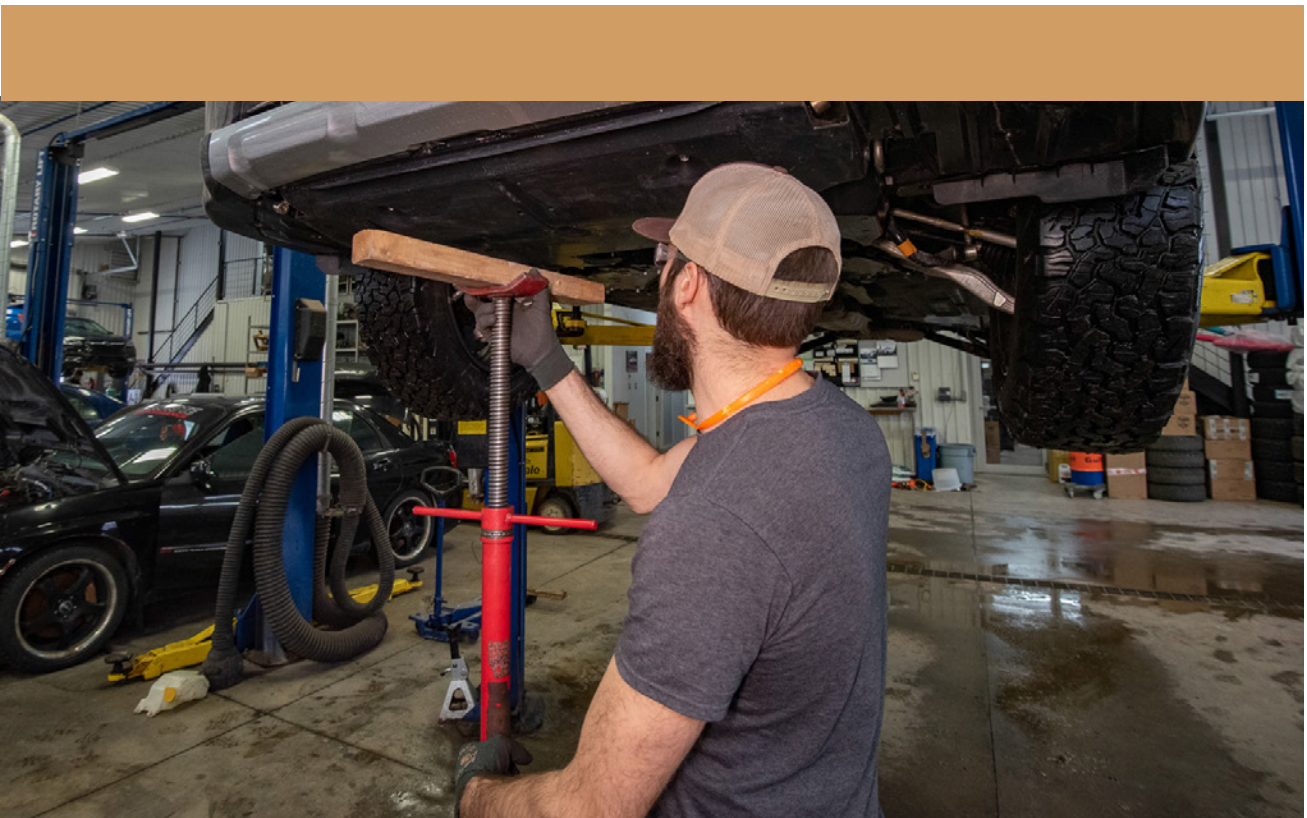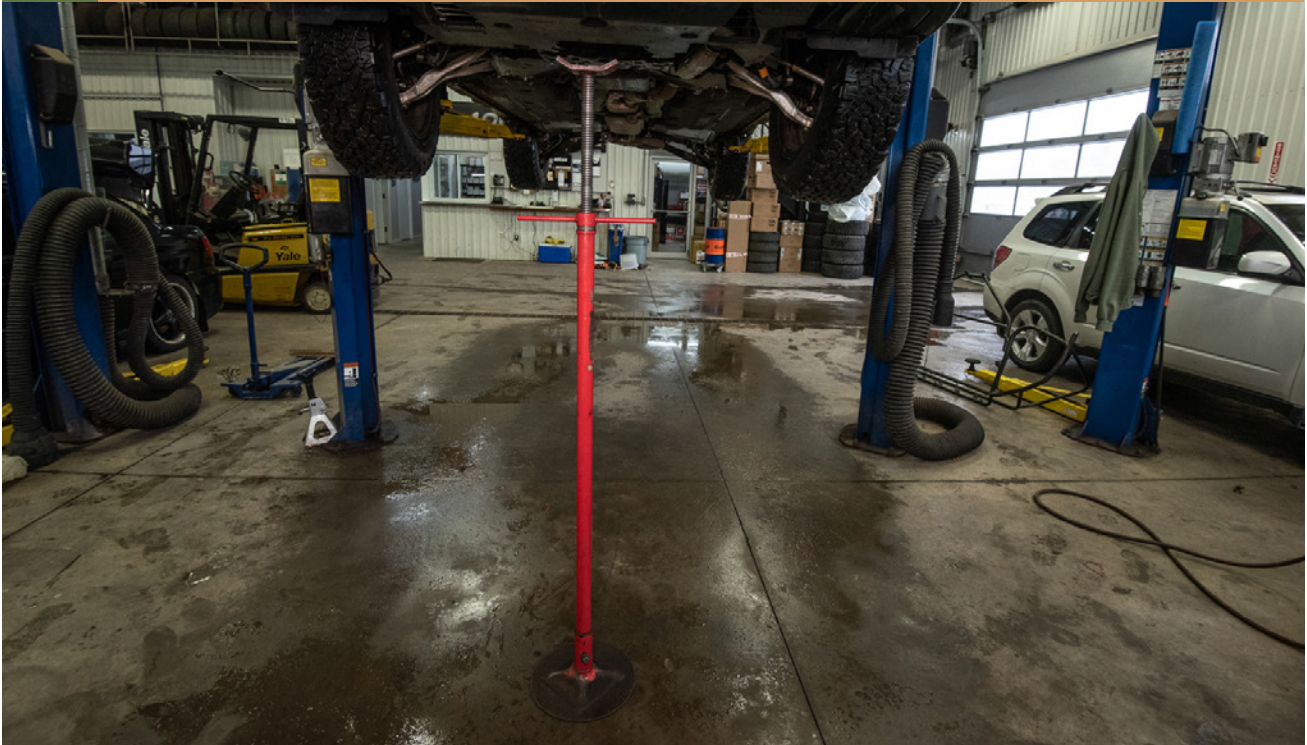




17

## INSTALL THE BUMPER GUARD INTO PLACE





MAKE SURE THE BUMPER GUARD IS POSITIONED IN FRONT OF THE PLASTIC DEFLECTOR

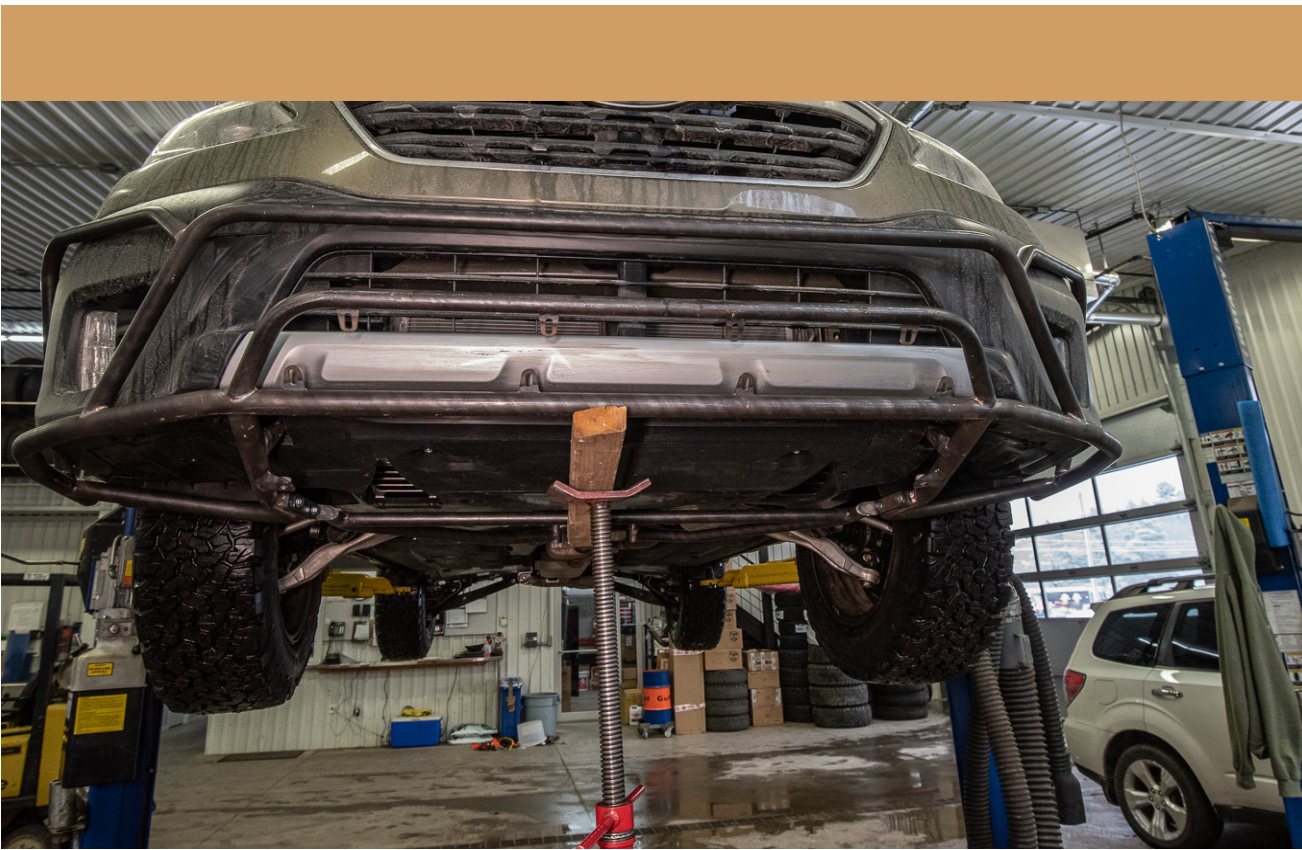



18

INSTALL MOUNTING HARDWARE  
BUT DO NOT ALL THE WAY TIGHTEN YET




19

MAKE SURE BUMPER TO BUMPER GUARD GAP IS EQUAL ON BOTH SIDES





IF THE GAPS ARE NOT EQUAL, ROTATE THE BUMPER GUARD TO THE LEFT OR RIGHT DEPENDING ON WHAT SIDE HAS MORE ROOM

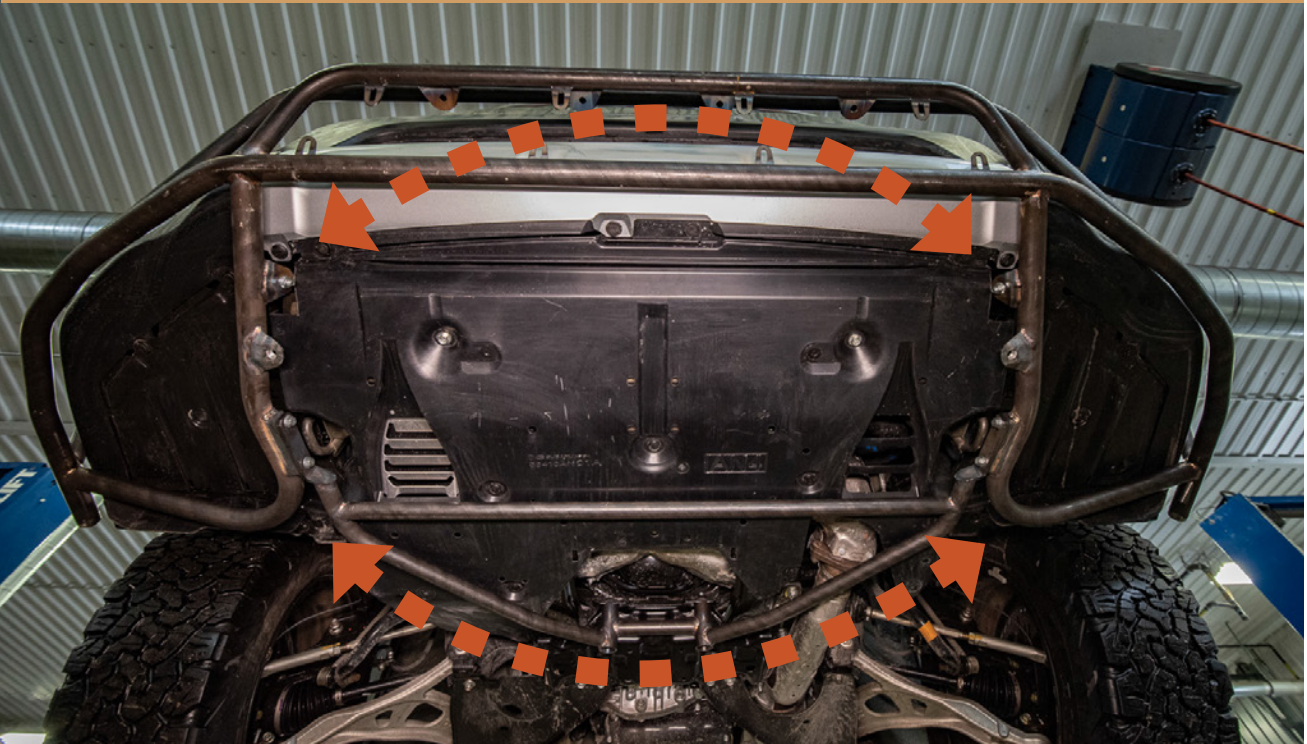



20

WITH THE GAPS SET YOU CAN NOW TIGHTEN ALL HARDWARE



INSTALLATION COMPLETE!

