



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE MAIN SKID PLATE ◀

SUBARU OUTBACK 2020

CONGRATULATIONS FOR YOUR NEW
LP AVENVENTURE SKID PLATE!



IN
THE
BOX



IN THE BAGS








NECESSARY TOOLS

- We recommend the use of a lift
- Transmission jack (or regular jack if not on a lift)
- Ratchet
- 14mm Socket
- 17mm Socket

1

WITH A LP AVENTURE BUMPER GUARD INSTALLED REMOVE THESE TWO BOLTS FOR THE REAR OF THE SKID PLATE

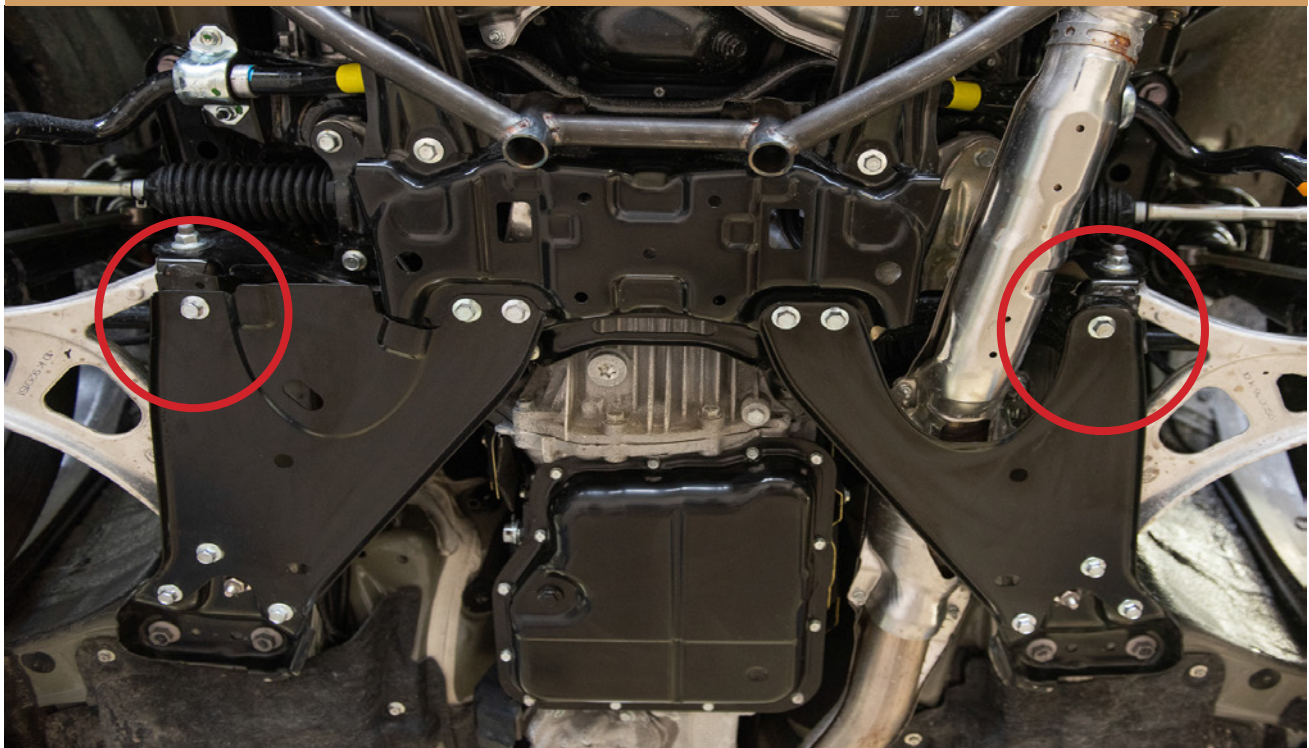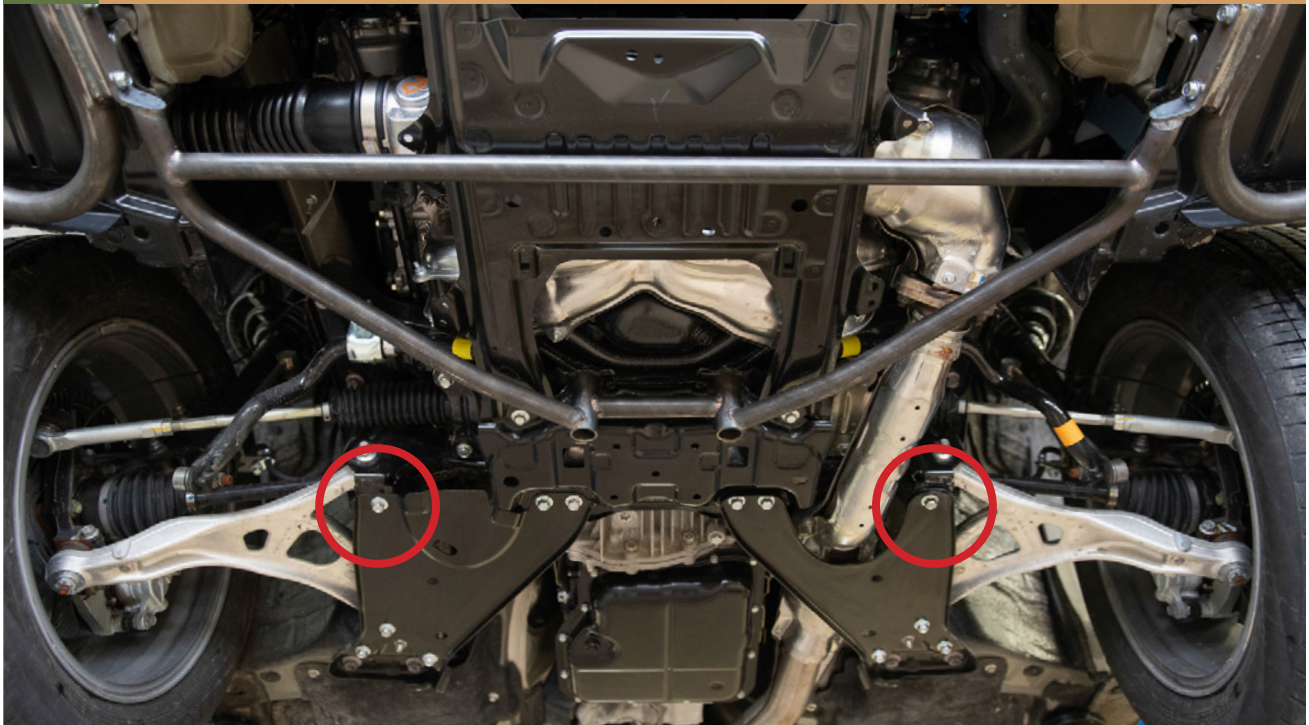

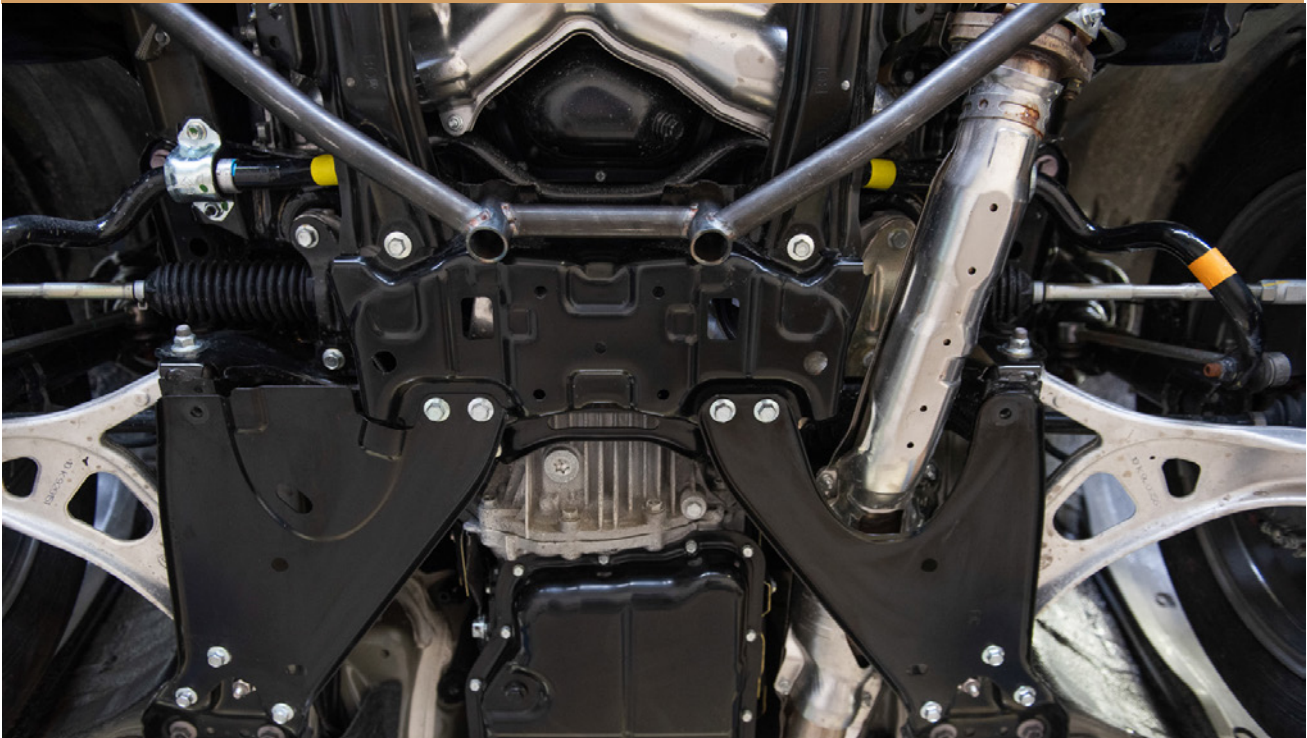

2

USE A JACK AND PIECE OF WOOD TO HELP SUPPORT THE SKID PLATE WHILE INSTALLING




3

RAISE SKID PLATE INTO PLACE





4

BOLT UP FRONT OF THE SKIDPLATE TO THE BUMPER GUARD

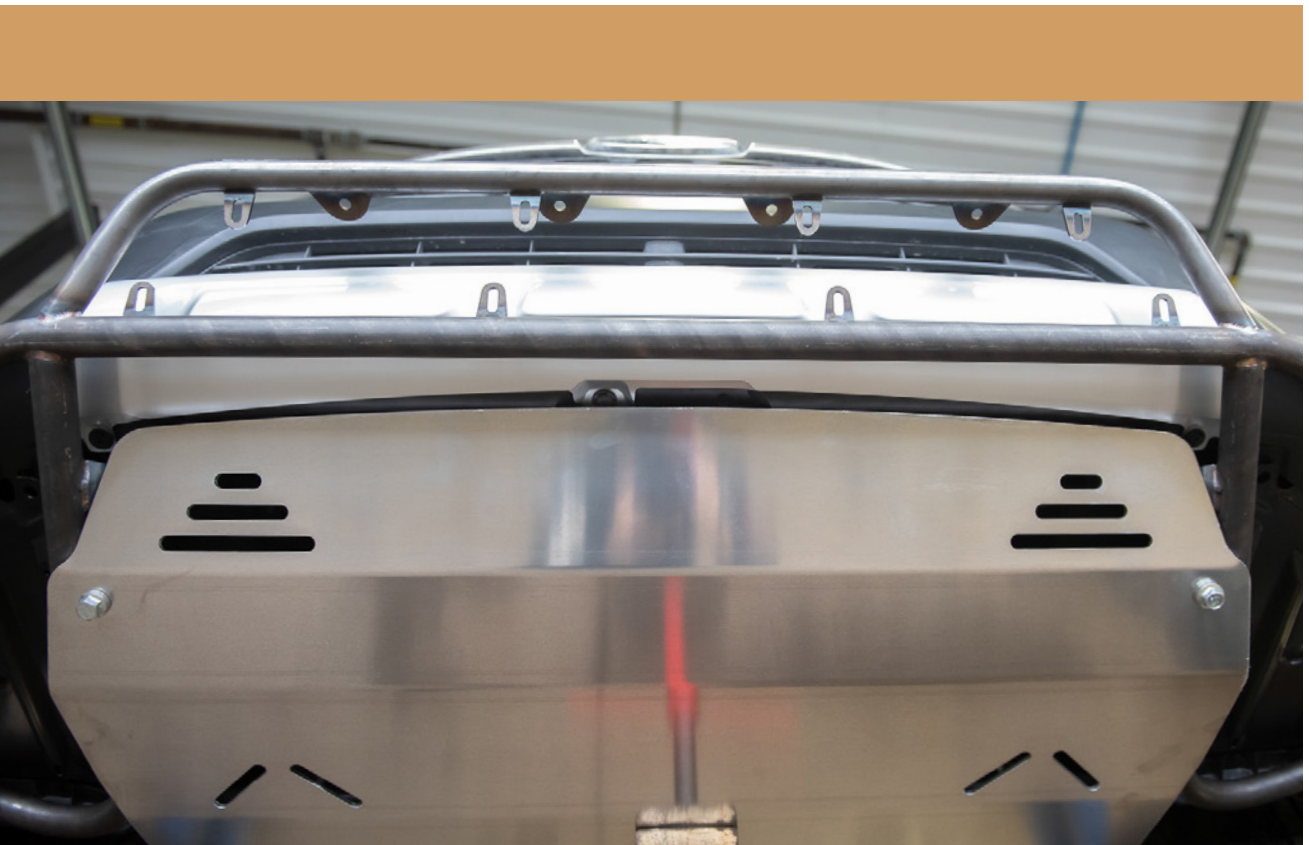

5

INSTALL REAR SKIDPLATE SPACERS

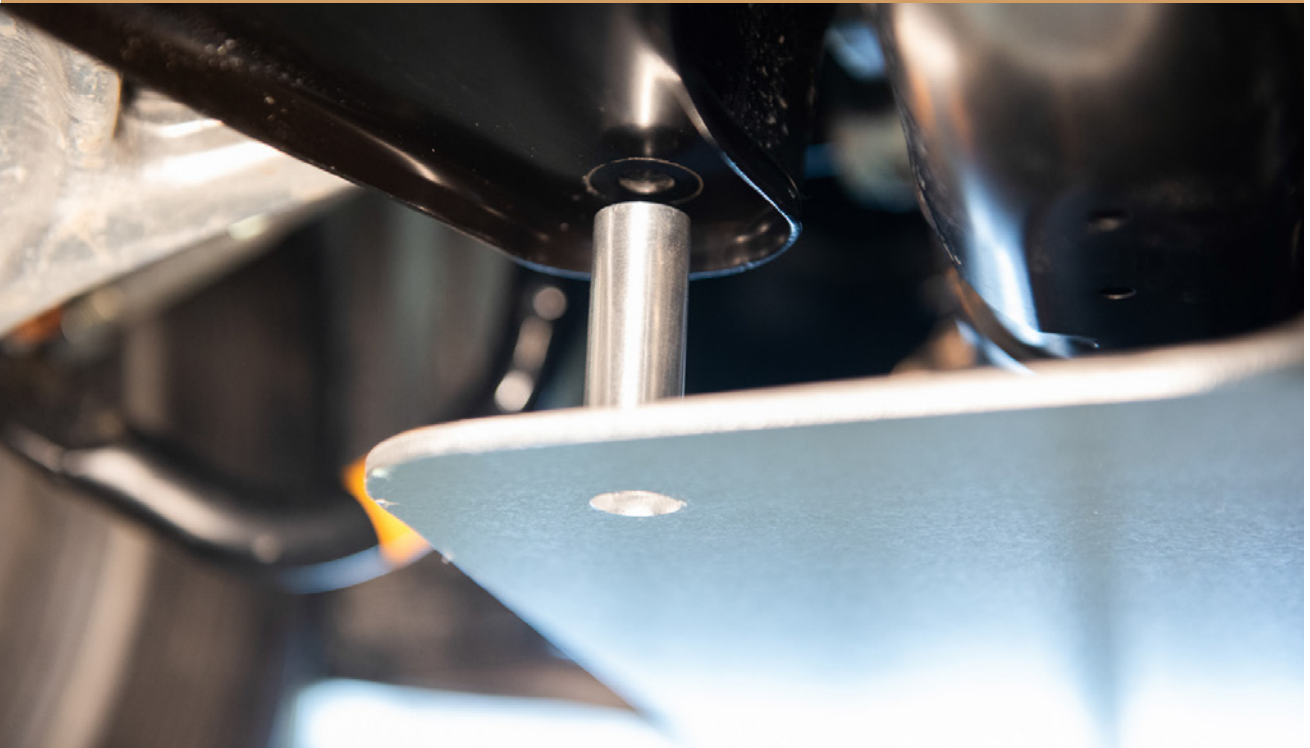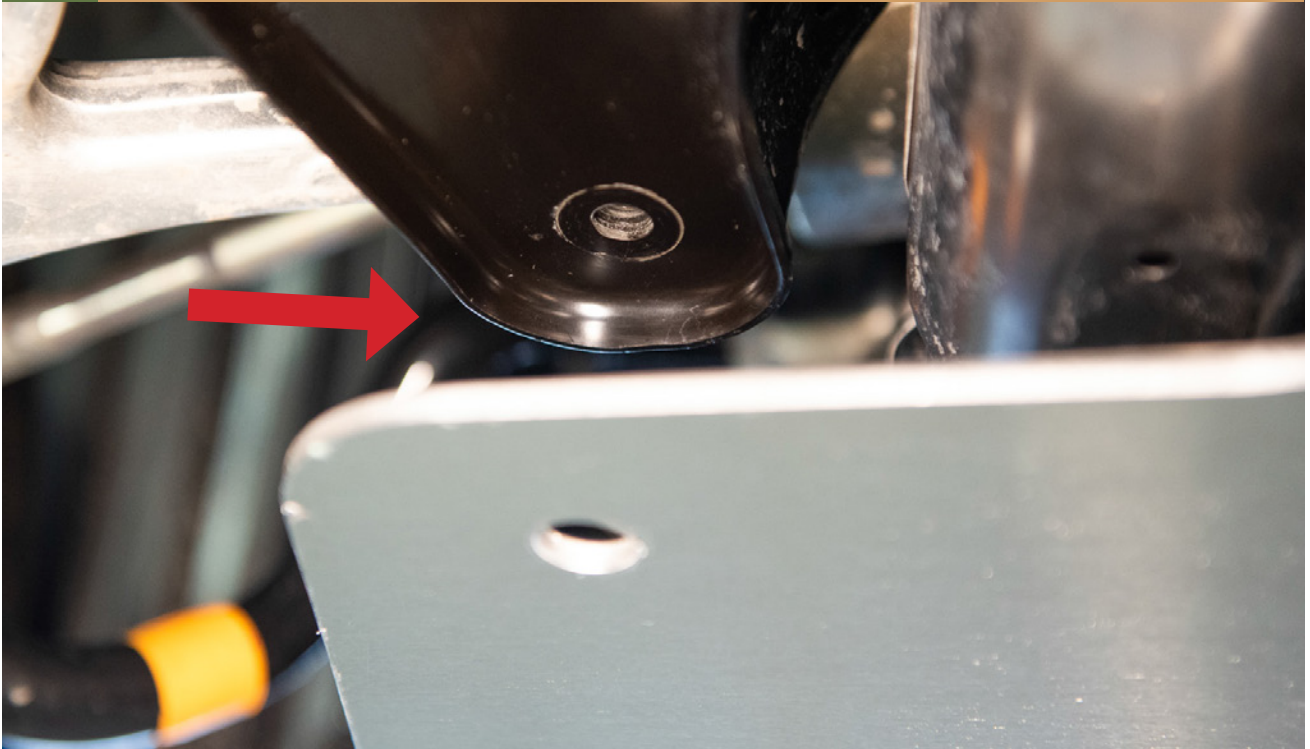

6

INSTALL SUPPLIED BOLTS WITH WASHERS



7

TIGHTEN ALL BOLTS



8

INSTALLATION COMPLETE!



Rely only on high-grade performance suspension parts offered on our virtual shelves.