



-INSTALLATION- INSTRUCTIONS


▶ LP ADVENTURE BUMPER GUARD ◀

SUBARU WRX & STI 2015 - 2020

**CONGRATULATIONS FOR YOUR NEW
LP AVENTURE BUMPER GUARD!**



IN THE BAG

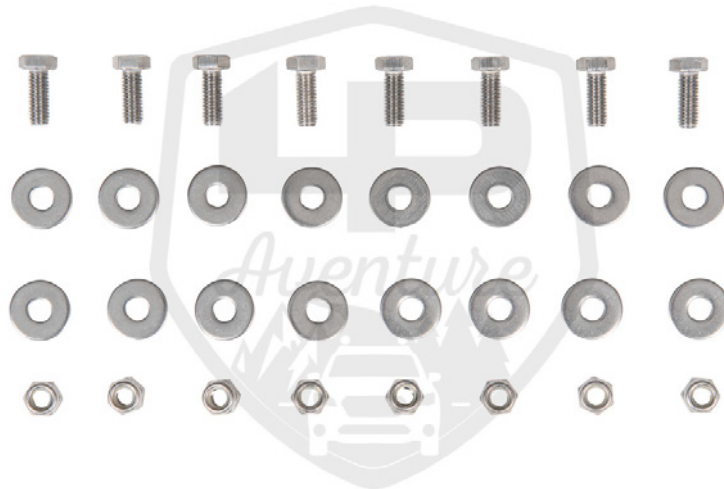



NECESSARY TOOLS

1. - We recommend the use of a lift
2. - Jack stand to support the bumper guard
3. - Ratchet
4. -12mm Socket
5. -14mm Socket
6. -12mm Wrench
7. -14mm Wrench
8. - Knife

1

UNCLIP PLASTIC DEFLECTORS






2

LOWER PLASTIC DEFLECTORS DOWN



3

REMOVE SUPPORT BOLT

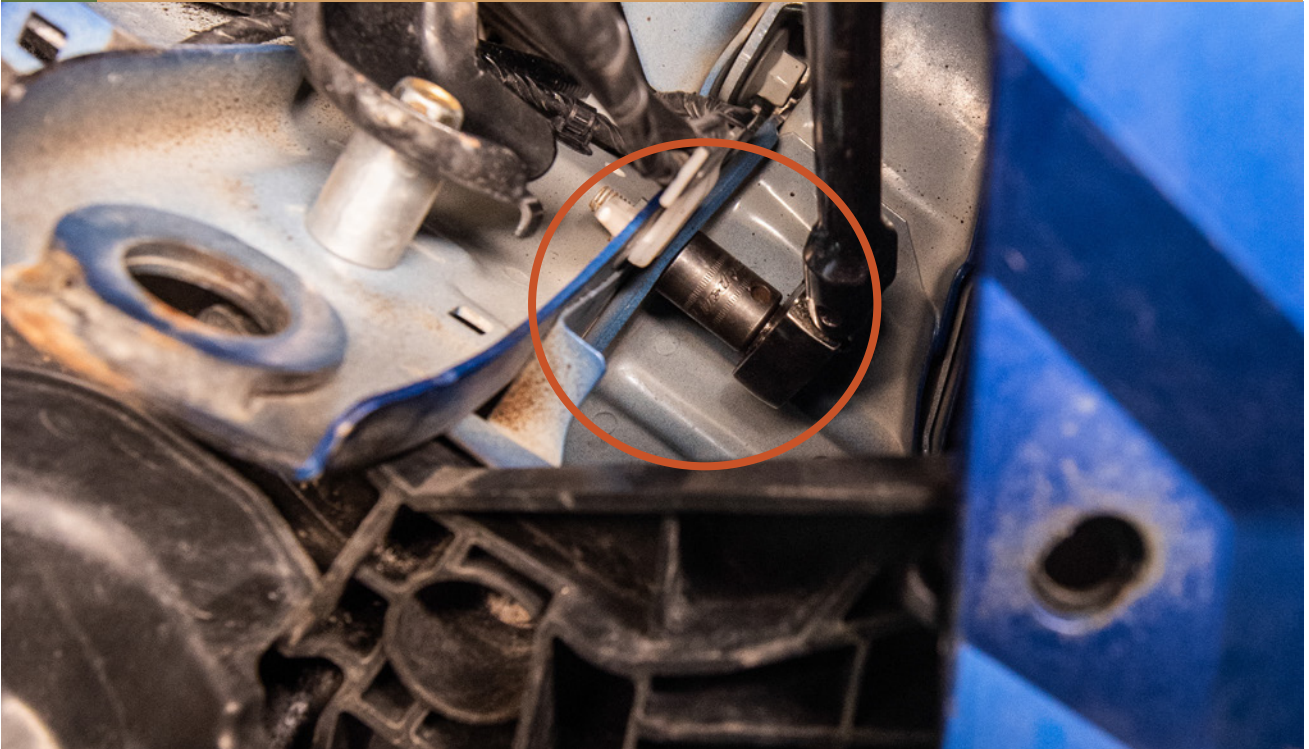

4

INSTALL BUMPER GUARD SUPPORT RODS.



MAKE SURE TO USE THE CORRECT ROD FOR EACH SIDE OF THE VEHICLE; R = DRIVERS RIGHT SIDE




THREAD IN SUPPORT ROD BUT DO NOT TIGHTEN ALL THE WAY



*

FOR STI'S YOU NEED TO TRIM THE UNDERTRAY.
WRX OWNERS CAN CONTINUE TO STEP #5

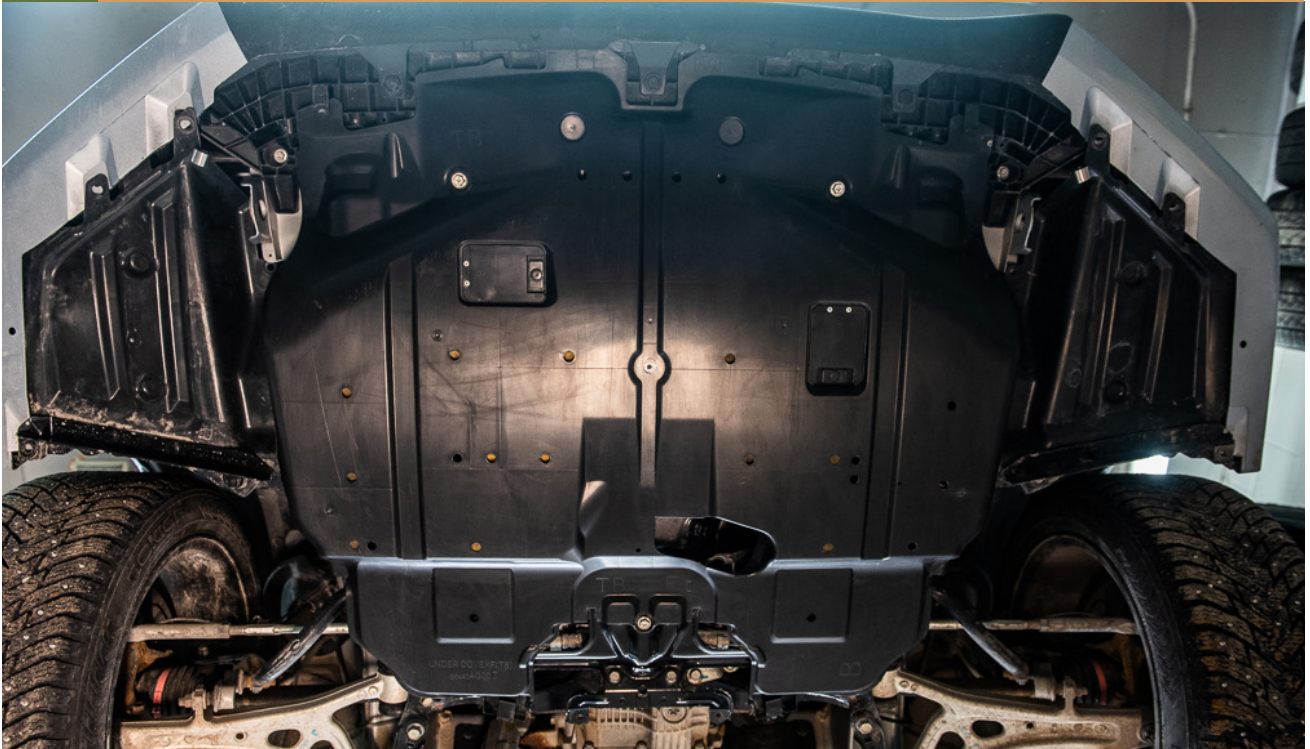



5

REMOVE TWO REAR CROSSMEMBER BOLTS





6

USE A JACK AND PIECE OF WOOD OR A FRIEND TO HELP SUPPORT THE BUMPER GUARD DURING INSTALLATION



7

RAISE THE BUMPER GUARD INTO PLACE



8

SECURE THE REAR OF THE BUMPER GUARD BUT DONT TIGHTEN ALL THE WAY



9 ATTACH THE FRONT OF THE BUMPER GUARD TO THE SUPPORT RODS



10 NOW TIGHEN ALL THE HARDWARE





11

RE CLIP PLASTIC DEFLECTOR



12

INSTALLATION COMPLETE!

