

# Installation Instructions

I - Sheet Number 10754  
LUND Part#318098



## Running Board Bracket Kit

For proper installation and best possible fit, please read all instructions BEFORE you begin.

### Important Safety Information



- To be used with Lund® branded products only.
- Do not stand on Lund running board or bracket while vehicle is in motion.
- Do not use the brackets as a jacking point for the vehicle.
- Do not use the bracket system or running boards to fasten cargo.
- Periodically check all components for tightness.
- Be sure to wear safety glasses while installing brackets.
- When using power tools, read and understand all operating instructions.

### Contents

**NOTE:** Actual product may vary from illustration.



Driver Side Front  
Bracket x1



Passenger Side Front  
Bracket x1



Driver Side Rear  
Bracket x1



Passenger Side Rear  
Bracket x1



5/16" Flange Nut  
(silver) x8



8mm Flange Nut  
(black) x8



T-Bolt Plate x6




Rounded Bolt  
Plate x2



Plastic Retainer x8


### Tools Required

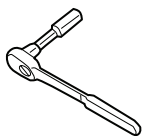

Ratchet and Extension



13mm Socket



Wheel Chocks



Safety Glasses

### Preparation Before Installation

- Park your vehicle in a clean, level location. Check to make sure the vehicle is in park, or for manual drive models, place the transmission in first gear. Engage the parking brake.
- Unpack the bracket kit and identify the parts according to the content descriptions.
- Air tools recommended.

## Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Find the front mounting location as shown below. The driver's side is shown. (Fig.1)



Mounting  
Locations

Fig. 1

1



Partially thread Plastic Retainer onto Rounded Bolt Plate. Insert Rounded Bolt Plate into inboard mounting location. Tighten plastic retainer to body. (Fig. 2)



Fig. 2

2



Partially thread Plastic Retainer onto T-Bolt Plate. Insert T-Bolt Plate into outboard mounting location. Tighten plastic retainer to body. (Fig. 3)



Fig. 3

3

## Installation Steps

NOTE: Actual application may vary slightly from illustrations.



Install front bracket over bolts. Secure using (2) 8mm Flange Nuts. Do NOT fully tighten. (Fig. 4)



Fig. 4

4

Find the rear mounting location as shown below. The driver's side is shown. (Fig.5)



Fig. 5

Mounting  
Locations

5



Partially thread Plastic Retainer onto T-Bolt Plate. Insert T-Bolt Plate into both mounting locations. Tighten plastic retainer to body. (Fig. 6)



Fig. 6

6

## Installation Steps

NOTE: Actual application may vary slightly from illustrations.



Install rear bracket over bolts. NOTE: Use caution to avoid damaging parking brake cables. (Fig. 7)



Parking Brake  
Cables

7

Fig. 7



Secure the bracket using (2) 8mm Flange Nuts. Do NOT fully tighten. (Fig. 8)



Fig. 8

8



Position the driver's side running board onto bracket and center on vehicle. Adjust Running Board to be parallel with side of vehicle. Install (4) 5/16" flange nuts (bolts are already installed on board).

**Tighten all bracket hardware, position the board accordingly, and then tighten Running Board to brackets.**

Repeat Steps 1 thru 9 for opposite side of vehicle. (Fig. 9)



Fig. 9

9

## Inspection After Installation

- Inspect all bolts and nuts for proper tightness.

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Do not use cleaning solvents of any kind.

## Congratulations!

You have purchased one of the many quality Lund<sup>®</sup> branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

