

Installation Instructions





ATV TOOLBOX

For proper installation and best possible fit, please read all instructions **BEFORE** you begin.





Important Safety Information

- ⚠️ **WARNING**
 - Periodically check all components for tightness.
- ⚠️ **CAUTION**
 - Be sure to wear safety glasses while installing toolbox.
 - When using power tools read and understand all operating instructions.

Contents

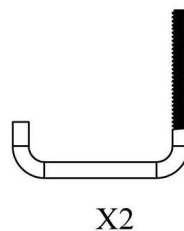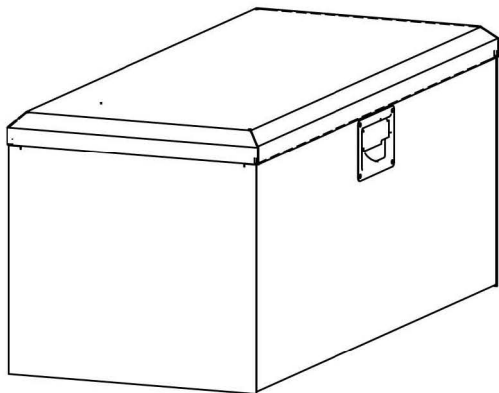


Tools Required

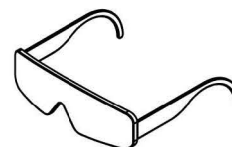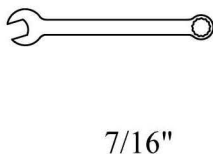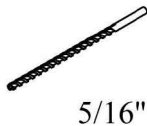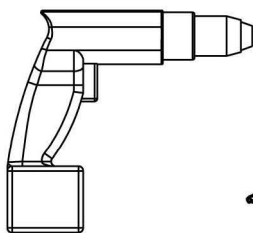

Installation Steps

I-10369


1. Position toolbox on rack, check for handlebar clearance on front box.

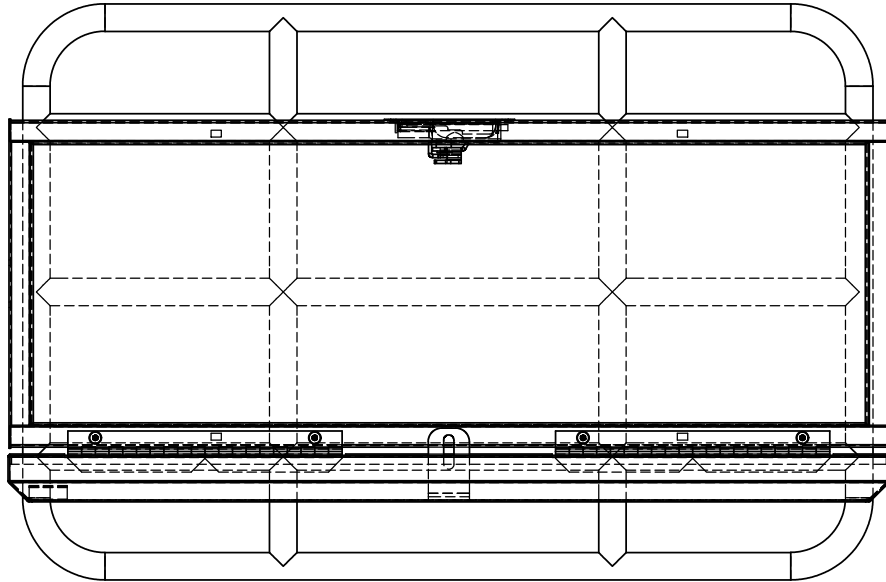

1

Top View

2. Mark bottom of of box for J-hooks.


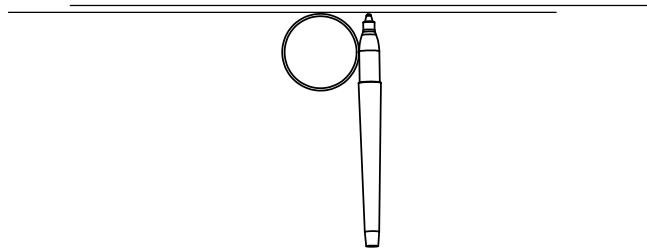


2

3. Drill two 5/16" holes for J-bolts

4. Install J-bolts, tighten nuts.

5. Trim excess thread if desired.

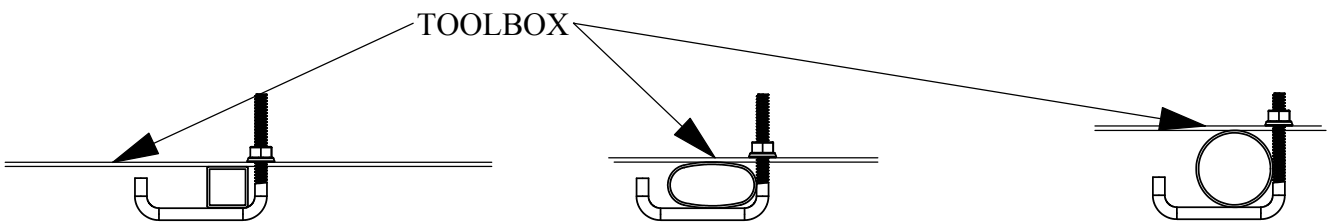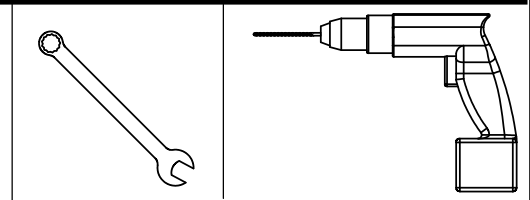

3

TYPICAL INSTALLATIONS

Congratulations

You have purchased one of the many quality products offered by Lund. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

LUND

