

Important Safety Information



- CAUTION Before driving, ensure that the Running Boards are properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents NOTE: Actual product may vary from illustration. All hardware may not be used for every installation.













Running Boards

Front Brackets 2057-21 (2)

Brackets 2057-22 (6)

5/16"x18 5/16"x18 Nylock Nuts (16) Washers (16) Square Bolts (16)

5/16"x3/4"

#14x3/4" Bolts (12)

Tools Required





Socket Set

Screwdriver

Preparation Before Painting/Installation


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.

Installation Steps NOTE: Actual application may vary slightly from illustrations.



Our


Remove black plastic inserts using flathead screwdriver. Install Bracket 2057-21 on front of vehicle.

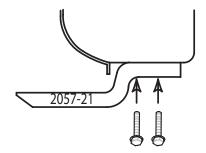



Remove black plastic inserts using flathead screwdriver. Install Bracket 2057-22 on middle and rear of vehicle.




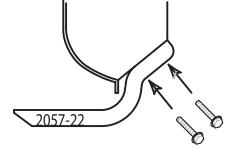

2057-21 = 1 Front Bracket per side.

2

2057-22= 2 Brackets per side.

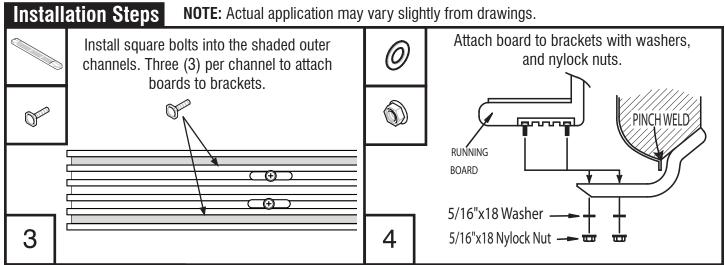

Care and Cleaning

• Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality $Lund^{\mathbb{R}}$ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.