

Installation Instructions

LUND[®]

Premium Style. Lasting Performance.

For proper installation and best possible fit, please read all instructions BEFORE you begin.

Care and Cleaning

- Wash only with mild soap and dry with a clean cloth.
- Every 3 months or 5000 miles check for loose hardware and tighten as necessary.

Congratulations!

You have purchased one of the many quality Lund[®] branded products offered by Lund International. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Recycle

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



PART NUMBER: **34641389**
PRODUCT: **TERRAIN HX NERF BARS**
APPLICATION: **2019 RAM 1500 CREW CAB**


Installation Instructions

Number THX15

PARTS LIST:	QTY.
DRIVER SIDE	1
PASSENGER SIDE	1
M8 – 1.25 HX FLANGED NUT	18



Step 1: Locate the driver side step rail.

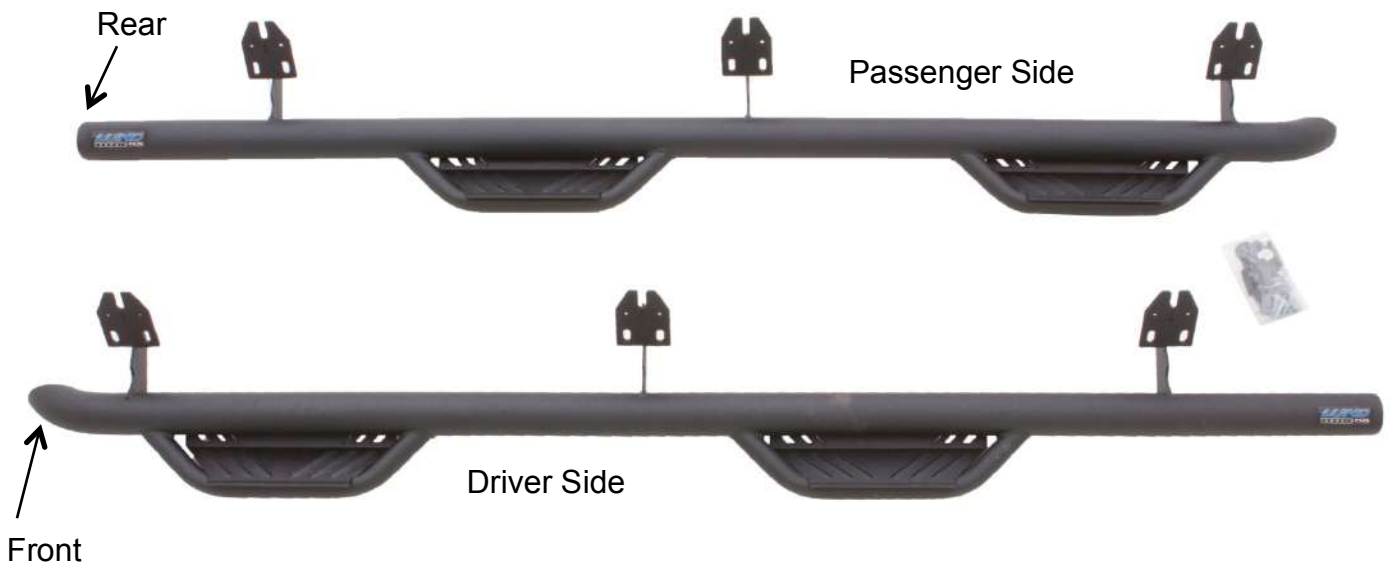

Step 2: Starting with the driver side, remove any steps and old hardware from the vehicle.



Step 3: On the inside rocker panel there will be three-attachment point consisting of three 8mm studs coming out from the panel. These studs may be covered in paint and will need to be cleaned before the installation.



Step 4: An additional person is recommended for this step. Carefully install the Terrain HX Step to the three factory attachment points using the provided M8 flanged hex nuts. Leave finger tight for now.



Step 5: Next, adjust the Terrain HX Step level with the body of the cab and tighten all hardware 30 ft. /lbs.



Step 6: Repeat steps 3-5 for passenger side.