

# Installation Instructions

## **LUND** Ventvisor® Deflector

### Important Safety Information



- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

### Contents - 2 Piece Set **NOTE:** Actual product may vary from illustration.




Front Driver  
Side Visor



Front Passenger  
Side Visor



Alcohol Pad x2

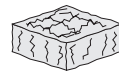

Scotch Brite  
Pad

### Contents - 4 Piece Set



Front Driver  
Side Visor



Front Passenger  
Side Visor




Rear Driver  
Side Visor



Rear Passenger  
Side Visor



Alcohol  
Pad x4

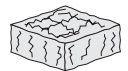

Scotch Brite  
Pad

### Tools Required



Car Wash Supplies



Clean Towel


### Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit. Note that the visors are stamped with an L or R following the part number, indicating Left or Right side placement.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle to remove any debris and/or dirt.
- Dry with a clean towel.

### Installation Steps **NOTE:** Actual application may vary slightly from illustrations.




Roll down window. Buff the inside felt surface with scotch brite pad. Then clean with alcohol pad.

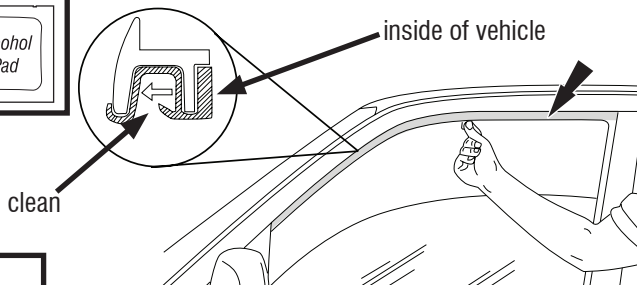

1

**NOTE:** visors mount on the **inside** of the window channel.

Remove the tape liner from the front & rear flanges. Peel back 2" of tape liner from each end of top flange.

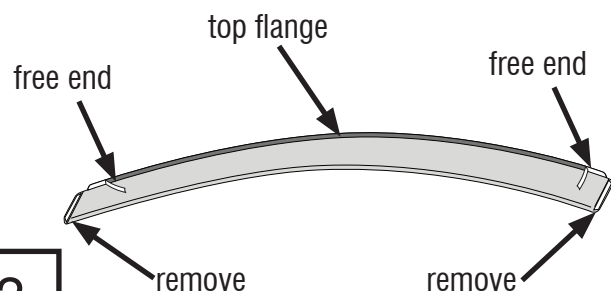


2

## Installation Steps


**NOTE:** Actual application may vary slightly from illustrations.

Insert visor into window channel, front flange first.

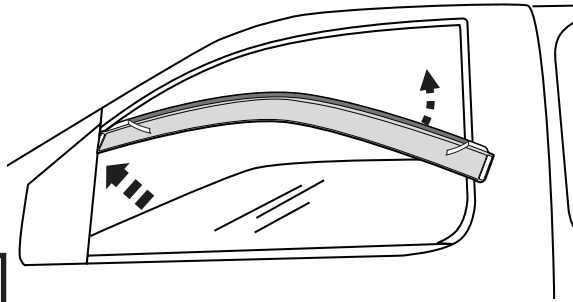


3

Apply pressure to all flange edges to ensure proper adhesion. Remove tape liner by pulling on free ends.

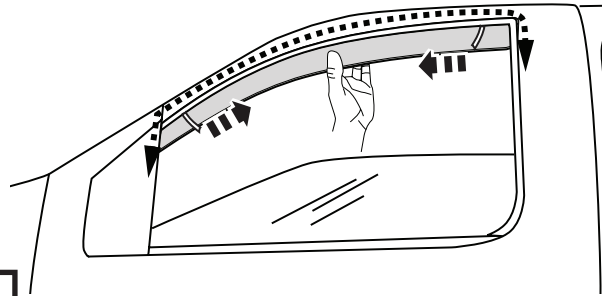


4

**NOTE:** It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly.

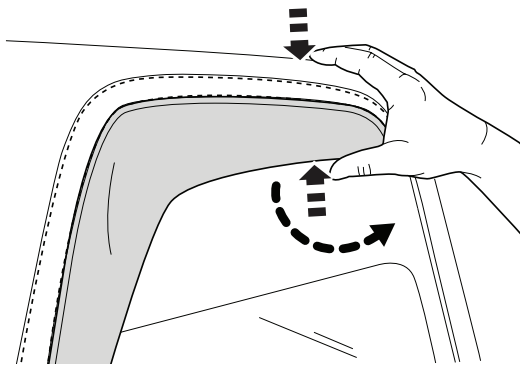

5

Continue to apply pressure to ensure that the visor remains properly seated inside the window channel as window is slowly closed. Leave window up for 72 hours to secure visor to window channel.

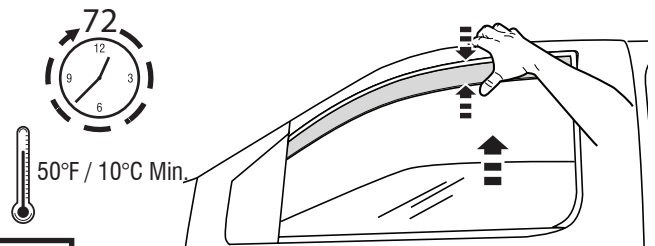


6

If the visor does not seat correctly, roll down window and repeat **Step 5**.


## 4 Piece Set

Install the rear visors using the same preparation and installation methods as the front visor.

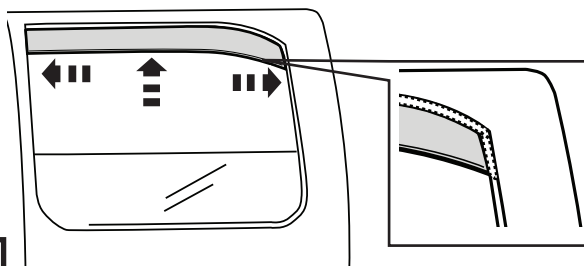

7

**NOTE:** It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly.

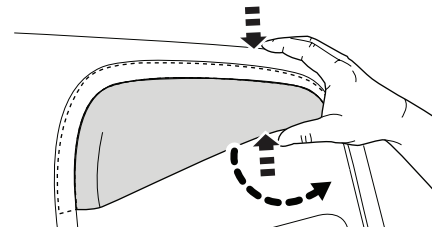

8

If the visor does not seat correctly, roll down window and repeat **Step 8**.

Repeat **Steps 1 thru 8** for passenger side.

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

## Congratulations!

You have purchased one of the many quality Lund<sup>®</sup> branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

# LUND<sup>®</sup>



Check out the collection of rain guards and wind deflectors we offer.