

# Installation Instructions

® I - Sheet Number LUND10740 Rev.C

## **LUND** OE Style No Drill Bracket

For proper installation and best possible fit, please read all instructions BEFORE you begin.


### Important Safety Information




- To be used with Lund® branded products only.
- Do not stand on Lund running board or bracket while vehicle is in motion.
- Do not exceed 350 lbs. weight on the Lund bracket system.
- Do not use the brackets as a jacking point for the vehicle.
- Do not use the bracket system or running boards to fasten cargo.
- Periodically check all components for tightness.
- Be sure to wear safety glasses while installing brackets.
- When using power tools, read and understand all operating instructions.

### Contents


NOTE: Actual product may vary from illustration.



Front Bracket  
(M-2705) (2)

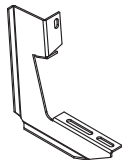

Center Bracket  
(M-2750) (2)

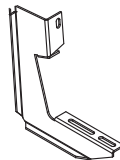

Rear Bracket  
(M-2704) (2)



U-Nut (5/16\"-18)  
(6)



5/16\"x3/4\"  
Square Bolts (12)



5/16\" Nylock Nuts  
(12)



Washers  
(12)



Flange Nut  
(5/16\"-18) (6)




Black Flange Bolt  
(5/16\"-18 x 3/4\") (12)


### Tools Required



Safety Glasses



Socket Wrench



Wrench  
Llave



Socket Set

### Preparation Before Painting / Installation

- Park your vehicle in a clean, level location. Check to make sure the vehicle is in park, or for manual drive models, place the transmission in first gear. Engage the parking brake.
- Unpack the bracket kit and identify the parts according to the content descriptions.
- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.

# Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Identify the mounting locations for each bracket by looking under the vehicle and finding the holes in the pinch weld.

