I - Sheet Number LUNDRB03 Rev.C



For proper installation and best possible fit, please read all instructions BEFORE you begin.

Important Safety Information



- CAUTION Before driving, ensure that the Running Boards are properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents **NOTE:** Actual product may vary from illustration.



Brackets 2071-11 (8)





(16)

5/16"x3/4" Square Bolts (16)



Washers (16)



5/16" Flanged Nuts (16)

Running Boards (2) **Tools Required**





Socket Set

Screwdriver

Preparation Before Painting/Installation


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.




Denote

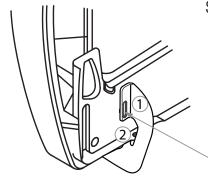

Starting at the front, find threaded hole in rocker panel and pinch weld. Attach bracket with bolts. Repeat for second bracket.





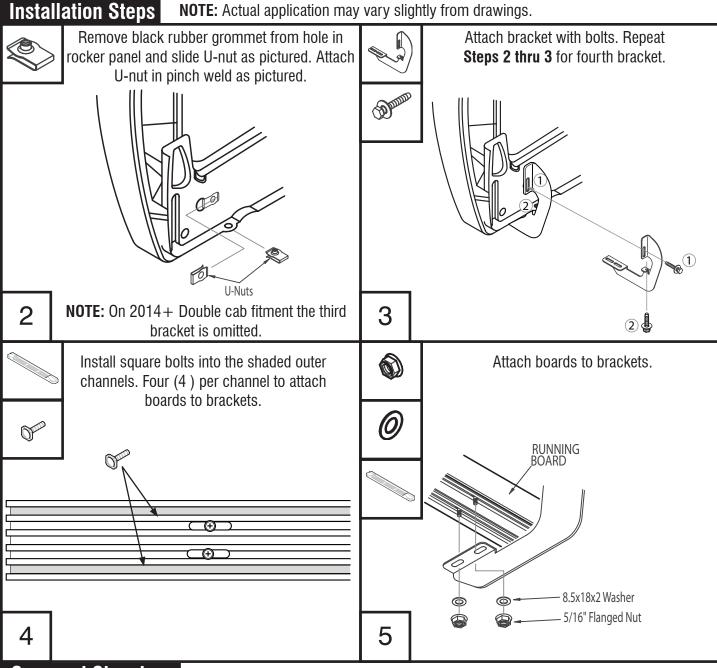

Care and Cleaning

• Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality $\operatorname{Lund}^{\circledR}$ branded products offered by Lund International, $\operatorname{Inc.}$ We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



