



EZ BRACKET

300012
300029

EXPLORER SPORT • 2002-03
P.N. 300012

EXPLORER SPORT TRAC • 2001-03
P.N. 300029


Thank you for purchasing one of the many quality items manufactured by Lund Industries, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment.

This product has been designed and engineered to correctly fit and complement only the vehicle(s) listed in the heading.

For easiest installation and the best final appearance, read the complete instruction BEFORE you begin.

Please follow all instructions for the proper installation of this part to the vehicle. Lund Industries, Inc.

INSTALLATION KIT INCLUDES

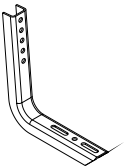

Brackets



Self Tapping Screws



1/4" bolts



8 mm bolt



1/4" Washers




1/4" Nuts


TOOLS NEEDED FOR INSTALLATION



Socket Set

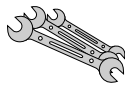


Standard Wrench Set

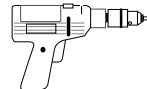

Drill



Hammer

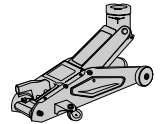

Floor Jack



5/16" Drill Bit




1/8" Drill Bit




Silicone



Center Punch

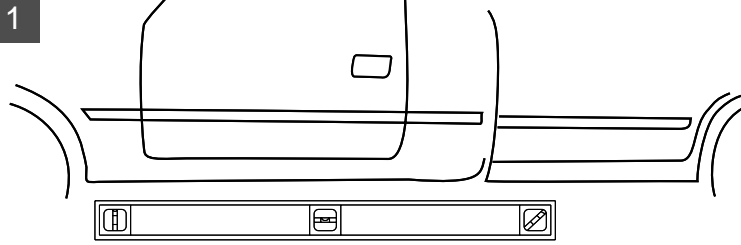


NOTE: Place truck on level surface.

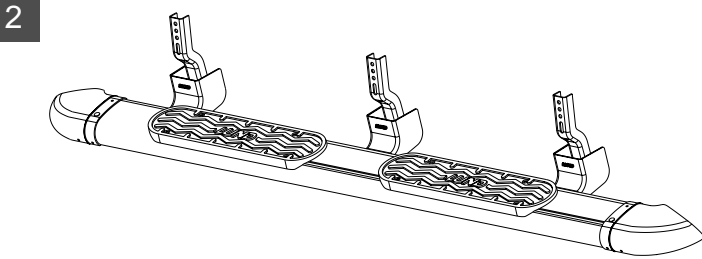


NOTE: Preassemble boards according to running board instruction sheet.


P.N. 300012 = 2 Brackets / side P. N°
 P.N. 300029 = 4 Brackets / side P. N°

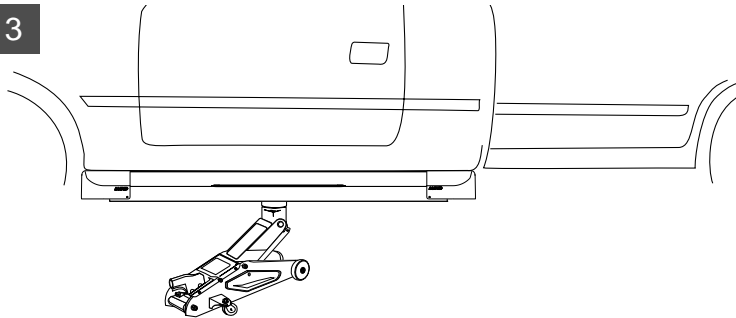


NOTE: Raise board into place with floor jack. Center board on rocker panel. Align brackets to existing mounting hole locations.

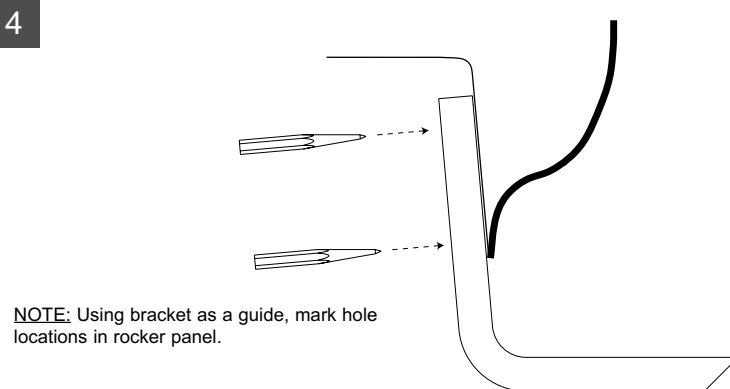


NOTE: Using bracket as a guide, mark hole locations in rocker panel.

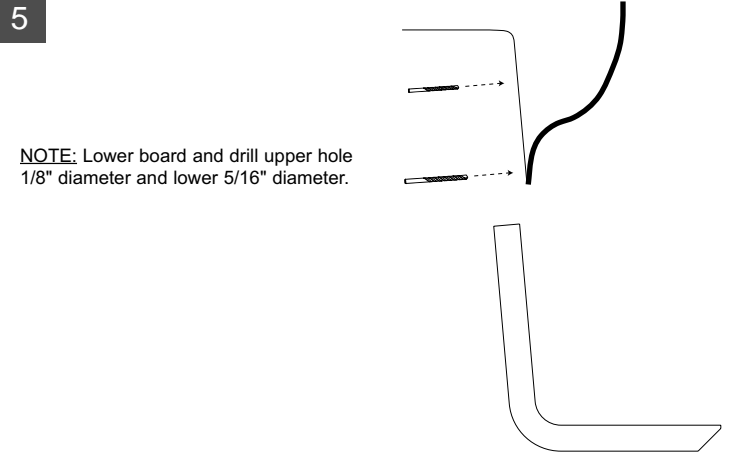

NOTE: Lower board and drill upper hole 1/8" diameter and lower 5/16" diameter.

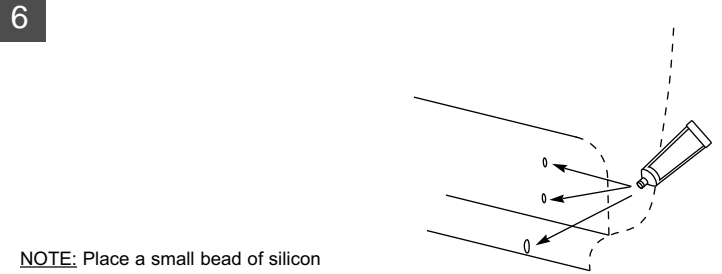

NOTE: Place a small bead of silicon in each hole.

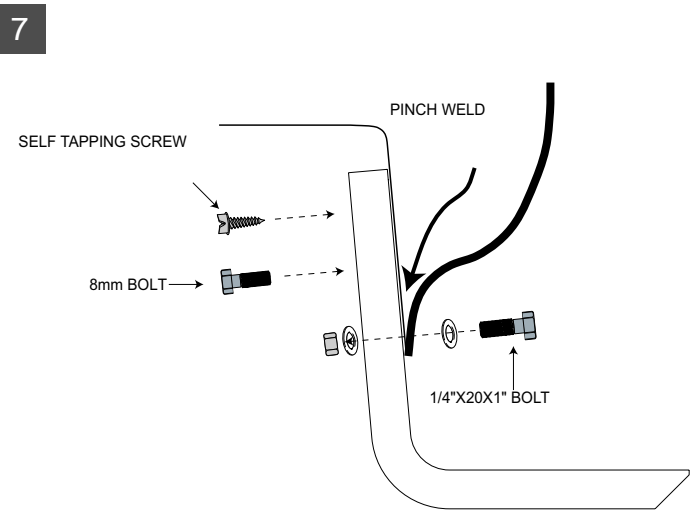

NOTE: Raise board and tighten upper holes with self tapping screw and 8mm bolt. Tighten pinch weld hole using a 1/4" bolt, two washers and nut.