For proper installation and best possible fit, please read all instructions BEFORE you begin.

Important Safety Information





- Serious personal injury and property damage can occur if vehicle is driven without both black buckles at the front of cover fastened.
- · Prior to vehicle operation, clamps must be secured such that the clamp lips tightly grip the inner bedwall structure.
- · Only release buckles when fully installing cover.
- After a setting period (1 week) it may be necessary to readjust the clamp load after foam isolators take a set to maintain the uniform gap between the Genesis™ Hard Fold Tonneau cover and bed rails.
- Check the bracket clamp loads every 3 months or 5,000 miles.
- The Genesis™ Hard Fold Tonneau cover must be closed or secured with straps while the vehicle is in motion.

Contents

Hardware:

Everything comes pre-assembled. No hardware or tools are needed for this installation. The Front & Rear Clamps are the main moving compenents. Please be sure you have 2 of each attached to the cover before you begin your installation.

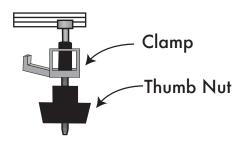

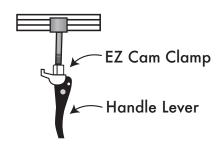


Front Slide-Clamp Mechanism

Rear Slide EZ-Clamp Mechanism

Installation Steps


NOTE: Actual application may vary slightly from drawings.

Center the cover on the front end of the bed and the side rails, and begin to tighten the clamps until they are snug. **Do not tighten completely.** Repeat on the opposite side of the truck.

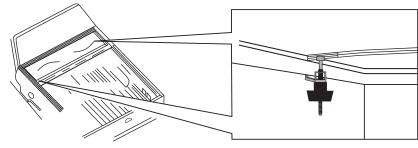







Adjust front slide-clamp to proper height.




Slide front clamp holder under truck bed rail.




Rotate thumb nut to tighten clamp enough (not too tight).

Unclip the snap clips located in the front of the cover allowing the cover to unfold. The cover has retaining straps with quick-release buckles to keep it from being damaged when bulk hauling or when it is not on the vehicle. Failure to install the front slide-clamps properly will result in cover fly-off which is not covered by Manufacturer's Warranty.

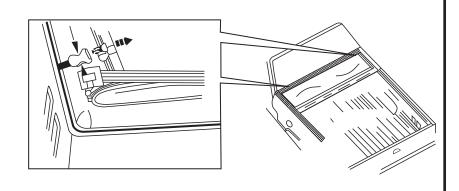


Installation Steps NOTE: Actual application may vary slightly from drawings.


Unfold the cover completely and begin to adjust the rear EZ-Clamps at the rear of the bed. Again, make sure they are snug but not tightened completely. (Both front and rear clamps will be tightened completely in a later step.)

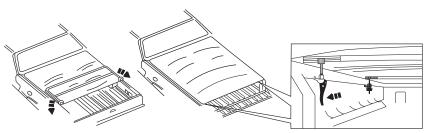













Slide handle lever to edge of truck bed rail.



Rotate handle lever to locking position. Repeat for opposite side.

Shut the tailgate and make sure the cover is centered on the perimeter of the top of the truck bed. Being sure that the clamps are just snug, you should be able to gently adjust the cover from the front to rear or side to side as needed to center the cover over the bed of your truck.

Once you have the cover in the desired position, pull the cover back into the open position in order to firmly tighten the front clamps. When you pull the cover to the open position, it is important to make sure you secure your rear clamping handles into the lock position to avoid damage to your cover.

Once you have tightened the front clamps and your Q gaskets are sealed, unfold the cover and make the necessary adjustments to tighten and secure the rear clamps.

WARNING: Prior to vehicle operation, clamps must be secured so that the clamp's lips tightly grip the inner bedwall structure.

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Avoid the use of automatic "brush-syle" car washes.
- Do not use cleaning solvents of any kind.
- Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
- We recommend the same quality products normally used for vinyl tops to keep the cover clean. When using a protectant, be sure that it is water based.

Congratulations!

You have purchased one of the many quality Lund[®] branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.





