INSTALLATION INSTRUCTIONS AND PARTS LIST

VEHICLE APPLICATION: MODEL 259924 (20.25" X 23.00") DUAL WHEEL MUDGUARDS

1999 AND NEWER FORD SUPER DUTY DUAL WHEEL TRUCKS

- 1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
- 2. PREPARE THE VEHICLE FOR MUDGUARD INSTALLATION AS FOLLOWS:
 - 2.1. REMOVE THE FACTORY SCREW AND NUT THAT ATTACHES THE MOLDED DUALLY FENDER TO THE METALLIC BOX ROCKER PANEL. (THESE ARE METRIC FASTENERS THAT REQUIRE 10MM AND 13MM WRENCHES). USING THESE SAME FASTENERS, ATTACH THE MOUNTING BRACKET (ITEM #2 & #3) SO THAT THE BENT FLANGE OF THE BRACKET LIES ON TOP OF THE METALLIC ROCKER PANEL. (POSITION THE BRACKET SO THAT THE FASTENER IS ABOUT CENTERED IN THE SLOTTED HOLE OF THE BRACKET).
 - 2.2. USING THE TWO HOLES IN THE MOUNTING BRACKET AS A PILOT, DRILL (2) 9/32" DIA. HOLES THRU THE PLASTIC WHEEL WELL LINER. (THIS WILL BE DONE FROM UNDER THE TRUCK).
 - 2.3. USING THE UPPER HOLE, APPROX. 6.00" UP FROM THE BOTTOM IN THE METALLIC WHEEL WELL FLANGE, AS A PILOT, DRILL A 9/32" DIA. HOLE THRU THE PLASTIC WHEEL WELL LINER. (THIS ALSO WILL BE DONE FROM UNDER THE TRUCK).


MOUNTING 259924 MUDGUARDS: (SEE SHEET #2)

- 3. INSTALL THE MUDGUARDS AS FOLLOWS:
 - 3.1. POSITION THE MUDGUARD AGAINST THE WH EEL WE LL FL ANGE AND PLASTIC LINER SO THAT THE HOLES IN THE MUDGUARD LINE UP WITH THE HOLES THAT WERE DRILLED THRU THE WHEEL WELL LINER PER INSTRUCTION #2.2 AND #2.3.
 - 3.2. INSTALL 1/4-20 X 1.25" BUTTON HEAD SCREW (ITEM #4), 1/4" FLAT WASHERS (ITEM #6) AND 1/4-20 SERRATED FLANGE NUTS (ITEM #5) THRU THE MUDGUARD, WHEEL WELL FLANGE, AND BRACKET AS SHOWN.
 - 3.3. MOVE THE MUDGUARD IN OR OUT AS DESIRED, LEVEL THE MUDGUARD AND TIGHTEN THE FASTENERS.



SERVICE PARTS LIST

1999 FORD SUPER DUTY DUALLY MODEL NO. - 259924

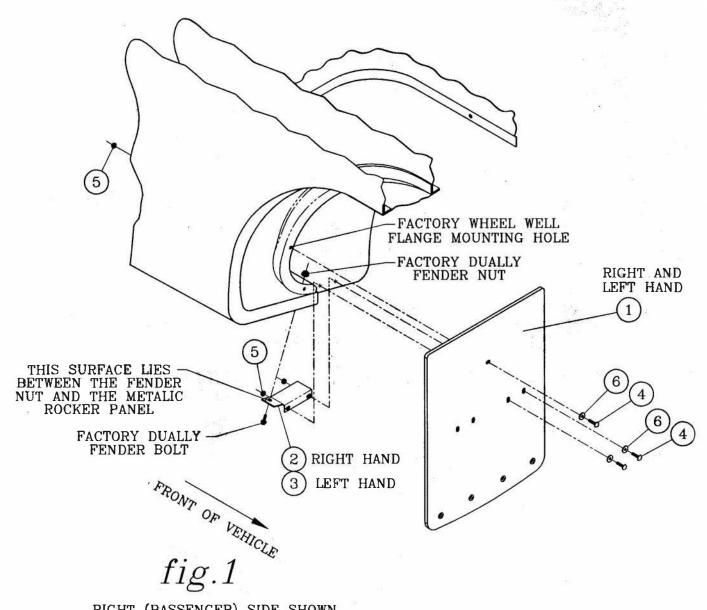

RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1 2 3 4 5	550195 549989 549990 108053 102366 108521	2 1 1 6 6 6	MUDGUARD-RUBBER,20 X 23,FORD S.D. DUALLY BRACKET- MTG, RIGHT HAND, 11GA GALV, BLK BRACKET- MTG, LEFT HAND, 11GA GALV, BLK SCR-BTN HD SOC, SST, 1/4-20 X 1-1/4", BZP NUT- HEX, SERRATED FLANGE,SST, 1/4-20 WASHER- FENDER, 1/4 X 1, SST, 18-8, BZP

