


2012-2014 TOYOTA 4-RUNNER

INSTALLATION INSTRUCTIONS

PART NO. 15145



BILL OF MATERIALS:

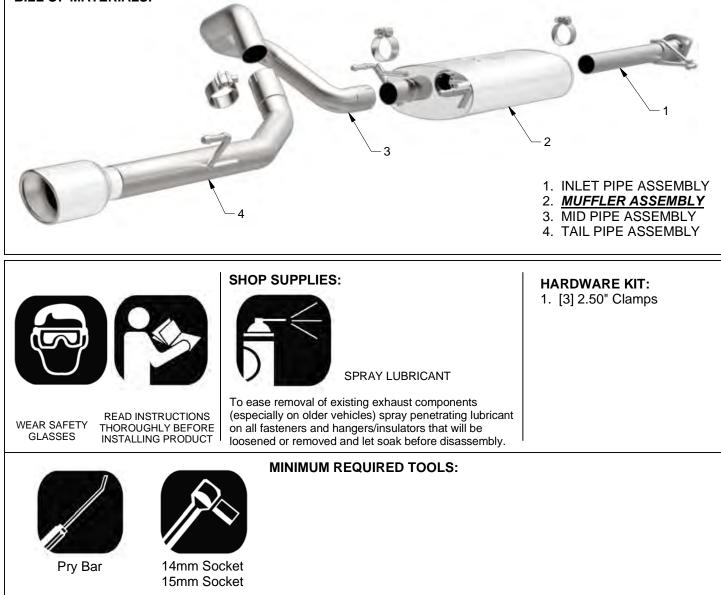

XINSTALLATION INSTRUCTIONS



Step 1. Begin removing the OEM exhaust by unbolting the spring loaded coupling flange at the outlet of the OEM Y-Pipe that attaches to the muffler inlet with a 14mm socket.



Step 2. Next unbolt the outlet of the OEM muffler at the inlet of the tail pipe assembly. Remove the welded hangers from the rubber insulators using a pry bar. do not discard or damage the insulators as they will be needed to install your new system. The OEM system may now be removed.



Step 3. You are now ready to install your new MAGNAFLOW system. Attach the the Inlet Pipe Assembly to the OEM Y-Pipe outlet using the existing hardware. Engage the welded hanber to the OEM rubber insulator. Leave all clamps and hardware loose for final adjustment of the complete system.



Step 4. Slip the inlet of the Muffler Assembly over the outlet of the Inlet Pipe Assembly and loosely secure using the supplied 2.50" clamp and 15mm socket. Engage all welded hangers to the OEM rubber insulators. Install the Mid Pipe and the Tail Pipe Assembly using a similar procedure.



Step 9. Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear using the torque specifications on page one of this document. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.