




INSTALLATION INSTRUCTIONS



2015 VOLKSWAGEN PASSAT 1.8L | PART NO. 19154

BILL OF MATERIALS:

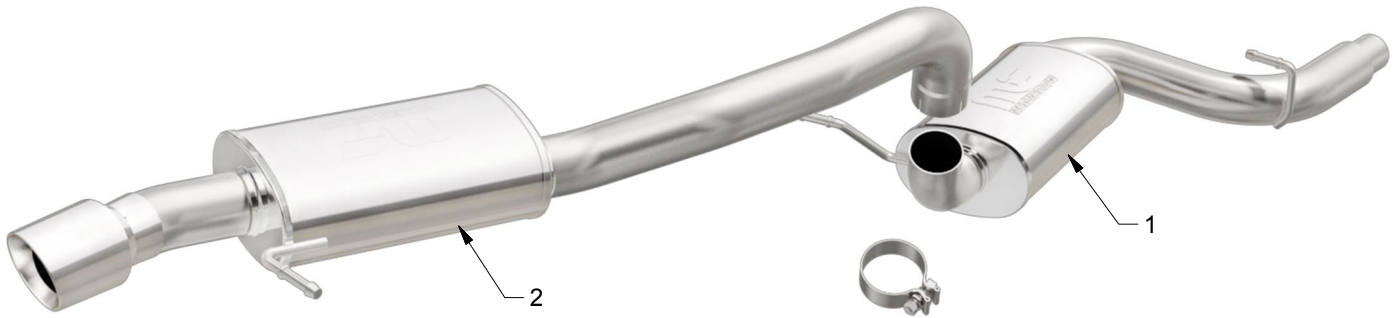

- 1. RESONATOR ASSEMBLY
- 2. MUFFLER ASSEMBLY



WEAR SAFETY
GLASSES



READ INSTRUCTIONS
THOROUGHLY BEFORE
INSTALLING PRODUCT

SHOP SUPPLIES:



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

HARDWARE KIT:

- 1. [2] 3.00" Clamp

MINIMUM REQUIRED TOOLS:



15mm



Hanger Tool
(Or Pry Bar)



Sawzall or similar
cutting device

INSTALLATION INSTRUCTIONS



Step 1. It is necessary to cut the OEM exhaust to remove it from the vehicle. Locate a point above the rear swaybar with enough room to work and cut the OEM pipe.




Step 2. Once cut, begin removing the exhaust by loosening the factory clamp located in front of the resonator. Working rearward extract the hangers from the rubber insulators (retain clamp and insulators as they will be used in the installation of the new exhaust system). Remove the OEM system from the vehicle.



Step 3. Begin installing the new system by inserting the inlet of the Resonator Assembly into the clamp at the outlet of the OEM exhaust and fitting the hangers into the rubber insulators. Leave clamp loose for final adjustment.



Step 4. Next attach the Muffler Assembly to the Resonator Assembly using the supplied 3.00" clamp and by fitting the hangers into the rubber insulators.

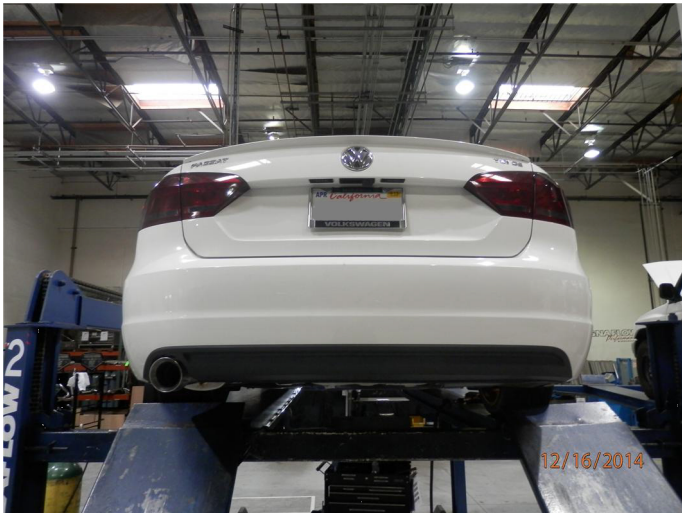

Step 5. Once a final position has been chosen for the new exhaust system, evenly tighten all clamps from front to rear using the torque specifications on page one of the instructions. Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.