


1994-1997 HONDA ACCORD - 4cyl. 2.2L

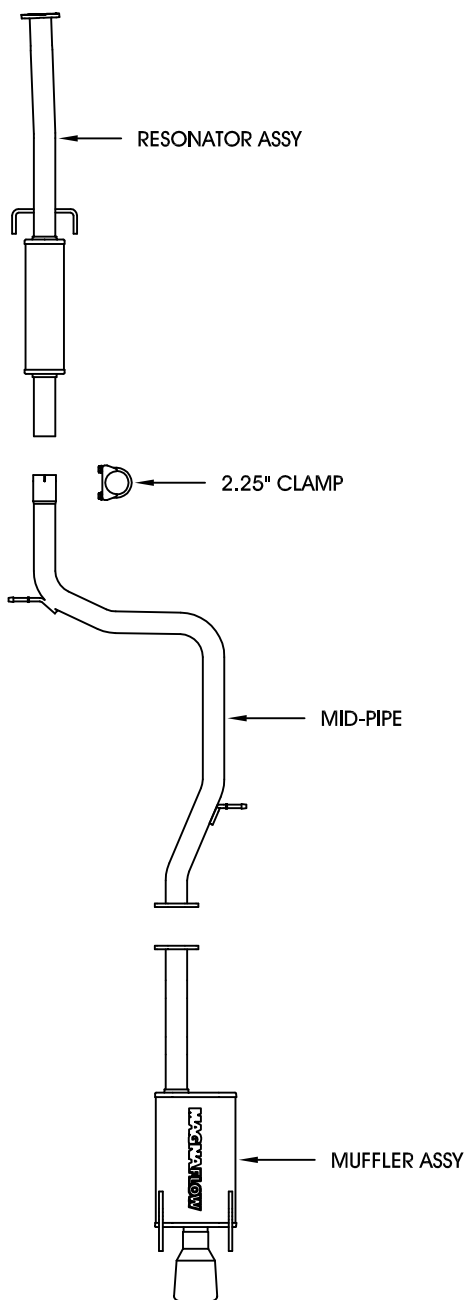

Warning: When working on under or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) Unbolt the OEM muffler from the extension pipe in front of the rear control arm. Remove the muffler from the OEM rubber insulators. Do not damage the OEM rubber insulators, as they will be re-used to mount the new system. Unbolt the resonator assembly from the catalytic converter. Do not discard the OEM fasteners, as they may be re-used to mount the new system.

Step 2: Starting at the catalytic converter, install the new resonator assembly using the supplied fasteners and gasket. Leave all fasteners loose for final adjustment of the complete system. Install the mid-pipe using the supplied 2.25" clamp, and by fitting the welded hangers into the OEM insulators. Install the muffler assembly by fitting the welded hangers into the OEM rubber insulators and by fastening it to the mid-pipe using the supplied fasteners and gasket.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products