


MALONE®

CHANGING THE WAY YOU GET THERE


MPG306 BOW & STERN LINE KIT



Attach hook to rope (steps A-D)

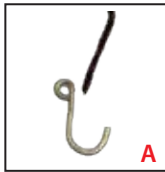

Thread free end of cord through hook.

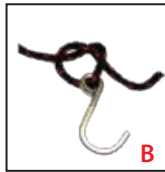

Create a "left over right" knot & tighten.



Create a "right over left" knot & tighten.



Pull to test for knot strength.


Attach and dress rope to vehicle and boat (steps E-O)




Attach S-hook to vehicle tow ring or other sturdy body part.




Keeping the rope tight and S-hook in place, thread the free end up and through a strong point on the kayak

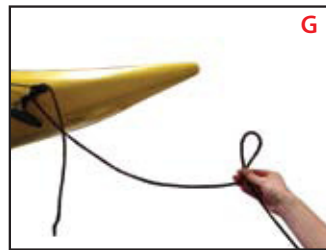


Make a loop in the rope 12" to 14" away from the kayak or canoe.

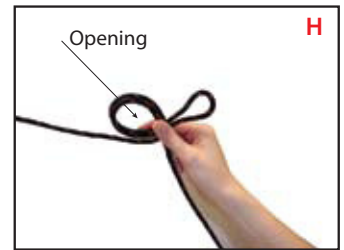

Bend the loop over leaving a large opening as shown.

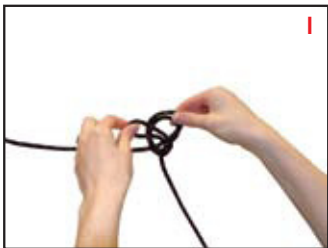

Pass the loop through the opening.

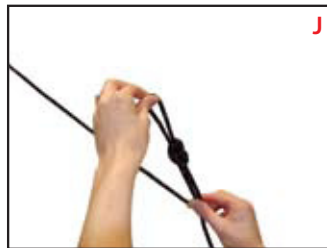

Pull to create a tight knot.



Thread the free end of the rope through the loop.



Pull the free end up until the rope is sufficiently tight.



Hold the rope secure with one hand.



Form a knot with the free end and tighten. Form a second knot for safety purposes.



The line should be tight and secure. Repeat for second tie-down.