


M0912T - REPLACEMENT NYLON TIE KIT

1. TIE STRAPS (4)
2. SQUARE SPACERS (4)
3. PLASTIC LOCKS (4)
4. ROUND SPACERS (4)

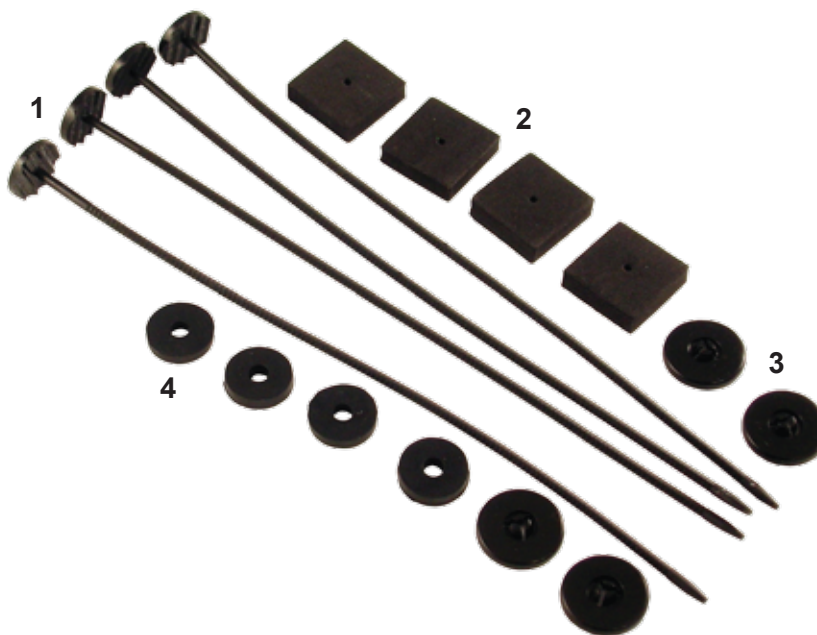

Mounting Instructions; Using Tie Kit

1. Assemble mounting brackets to fan by tapping into place with a rubber or plastic hammer.
2. Peel backing and stick 4 square spacers on fan shroud as shown in **Figure 1**. Install the 4 round spacers on the tie straps as shown.
3. Position fan on heat exchanger.
4. Make passageway through heat exchanger fins using #1 phillips screwdriver. Use hand pressure only, insuring the heat exchanger is not damaged.
5. Slide the tie strap through the mounting bracket, spacer, and heat exchanger as shown. Secure with plastic lock on opposite side of the heat exchanger as shown in **Figure 2**.

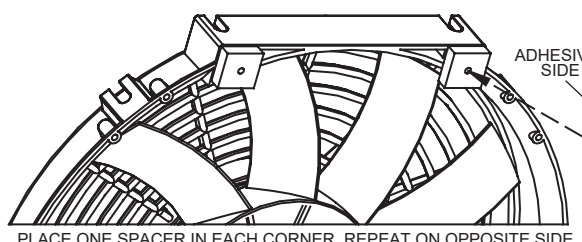


FIGURE 1

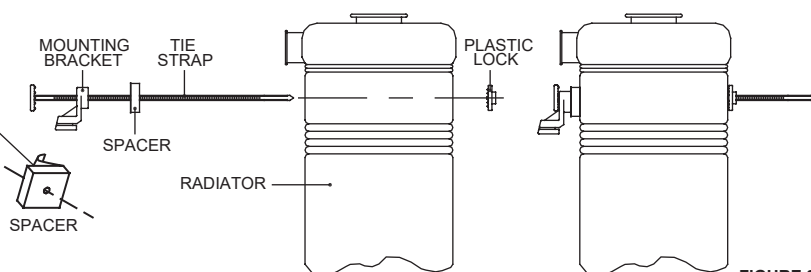


FIGURE 2

Recommendations:

It is the installer's responsibility to determine suitability for the individual application. It is recommended to periodically check the fan to make sure it has not become loose which can lead to damage of the heat exchanger.

We provide tie kits with many of our fans. However, for optimum mounting strength and performance we recommend using the MARADYNE® MFA 104 or MFA105 mounting kit on fans for an improved mounting.