

43300

14 PIECE UNIVERSAL COOLING SYSTEM PRESSURE TEST KIT

ITEM#	PART#	DESCRIPTION
0	43300-0	Needle Thermometer
1	43300-1	Hand-held Pump
2	43300-2	Steel #2 Adapter
3	43300-3	Steel #3 Adapter
4	43300-4	Steel #4 Adapter
5	43300-5	Steel #5 Adapter
6	43302-6	Aluminum #6 Adapter (brown)
7	43302-7	Aluminum #7 Adapter (blue)
8	43302-8	Aluminum #8 Adapter (cyan)
9	43302-9	Aluminum #9 Adapter (pink/red)
10	43302-10	Aluminum #10 Adapter (orange)
11	43302-11	Aluminum #11 Adapter (lime)
12	43302-12	Aluminum #12 Adapter (dark silver)
13	43302-13	Aluminum #13 Adapter (light gold)
14	43300-PB	Blow Molded Case
15	43300-G	Gauge for Pump
16	43300-H	Hose for Pump with Coupler



REPLACEMENT PARTS

43300-2G	Gasket for #2 Steel Adapter	43300-3G	Gasket for #3 Steel Adapter
43300-4G	Gasket for #4 Steel Adapter	43300-5G	Gasket for #5 Steel Adapter
43302-6G	Gasket for #6 Aluminum Adapter	43302-7G	Gasket for #7 Aluminum Adapter
43302-8G	Gasket for #8 Aluminum Adapter	43302-9G	Gasket for #9 Aluminum Adapter
43302-10G	Gasket for #10 Aluminum Adapter	43302-11G	Gasket for #11 Aluminum Adapter
43302-12G	Gasket for #12 Aluminum Adapter	43302-13G	Gasket for #13 Aluminum Adapter
43300-SK	Seal Kit for Pump Handle		

FEATURES:

- Detects and exposes external system leaks
- Detects internal engine leaks due to blown gaskets or cracked block
- Includes hand pump, thermometer and 12 adapters to fit most popular domestic and import cars and trucks

SAFETY WARNING AND PRECAUTIONS



WARNING: The instructions and warnings contained in this manual should be read and understood before using or operating this tool. Do not allow anyone to use or operate this tool until they have read this manual and have developed a thorough understanding of how this tool works. Failure to observe any of the following instructions could result in severe personal injury to tool user and bystanders, or cause damage to the tool and property. Keep this manual for future reference.

NOTE: The warnings and cautions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

WARNING: Use safety equipment. User and bystanders should use safety goggles or safety glasses with side shields which comply with current national standards, or when needed, a face shield. Use an ANSI approved dust mask or respirator when working around metal, wood, and chemical dusts and mists. This applies to all persons in the work area. Also use non-skid safety shoes, hard-hat, gloves, dust collection systems, and hearing protection when appropriate.

WARNING: Keep bystanders and children out of the work area while operating this tool.

WARNING: Always keep your work area clean, uncluttered, and well lit. Cluttered or dark areas invite accidents and injuries. DO NOT work on poor surfaces that are slippery.

WARNING: Do not operate this tool if you are tired or under the influence of alcohol, drugs, or medications that could


affect your ability to use the tool properly.

WARNING: Dress properly. Do not wear loose clothing or jewelry as they can be caught in moving parts. Wear restrictive hair covering to contain long hair.

WARNING: Do not reach over or across running machines. Keep proper footing and balance at all times. Non-skid footwear is recommended when working.

OPERATING INSTRUCTIONS:

Before performing the test on your cooling system, test the pump first by pumping a few mes to ensure the pump is working correctly. When testing, **DO NOT PUMP OVER 20 PSI**. During your inspection and during the test of your cooling system, when pumping the pump handle, always make sure that the force is applied straight into the pump rather than at an angle, or else it may cause the pump to leak (see figure 1.)

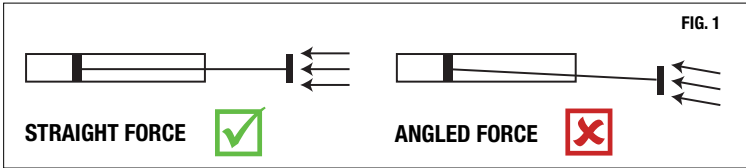


TO TEST FOR LEAKS IN COOLING SYSTEM:

1. Refer to the vehicle's service manual for any specific radiator pressure testing instructions.
2. Loosen the vehicle's radiator cap slowly to relieve any excess pressure before removing the cap completely. **NEVER OPEN THE SYSTEM WHILE HOT**, as this may cause personal injury.
3. Select the proper adapter and configuration of the stationary seat accessories. Securely attach the adapter to the filler neck of the radiator or expansion tank.
4. Attach the quick connector of the hand pump onto the adapter.
5. Rapidly pump the hand pump handle using straight force as shown in figure 1 while watching the pressure gauge. Pressurize the radiator up to the optimal pressure only - **DO NOT OVER PRESSURIZE THE RADIATOR**. Ideal readings should range between 15-20 PSI (1.03-1.37 BAR) .

- **Needle holds steady** – If gauge hand holds at the same pressure number for 2 minutes, there are no serious leaks in the system.
- **Needle drops slowly** – Indicates the presence of small leaks or seepage.
- **Needle drops quickly** – Indicates serious leakage is present.

6. Once the test is complete, release the air pressure by depressing the pressure release valve on the hand pump. Then disconnect the quick coupler and adapter assembly.
7. Maintenance – After testing process in Radiator Test:
 - Keep the adaptor connected to the pump as you had set up while performing the actual test. Operate the pump several times to dissipate moisture and/or coolant that may have remained in the adaptor and pump.
 - Oil the hand pump in order to lubricate the piston and prevent corrosion and internal damage.
8. Store the radiator pressure tester kit in its carrying case and keep the kit in a clean, dry, safe location out of reach of children and other unauthorized persons.

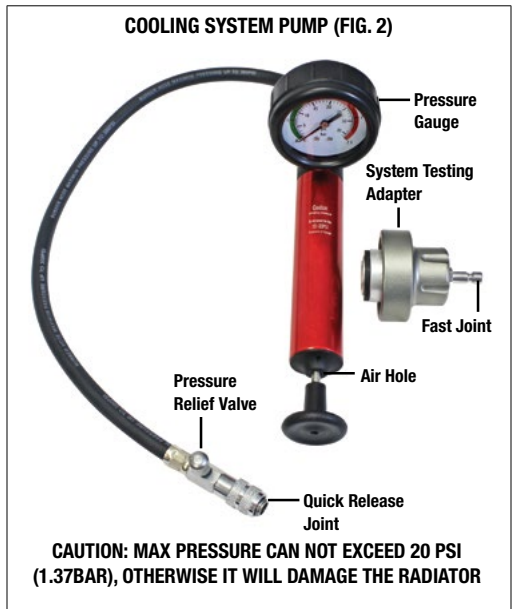

Vehicle Compatibility Chart	
Adapter #	MAKE & MODEL
43300-2	Mercedes Benz, GM (Buick), Jeep
43300-3	Buick (Lesabre: 1990-, Park Avenue: 1991-), Chrysler (Sebring: 1995-), Chevrolet (Venture: 1997-), Dodge (Caravan: 1989-, Dakota: 1989-, Stratus: 1995-), Jeep, Mercedes (W123, W124, W126, W201), Oldsmobile (Silhouette: 1990-), Pontiac (Bonneville: 1990-, Grand Prix: ~2003)

43300-4	<p>Acura (Integra: 1991-1993, Legend: 1989-1990, NSX: 1995-2004, SLX: 1997, Vigor: 1992-1994), BMW (M6:2008), Chevrolet (Nova: 1985-1998, Spectrum: 1985-1988, Sprint: 1986-1988), Chrysler (Laser: 1991-1998, Sebring: 1996-1998), Dodge (Avenger: 1995-1995, Colt: 1984-1991, Ram 50: 1989-1992, Stealth 1993-1996), Eagle: (Summit: 1989, Talon: 1991-1998), Ford: (Aspire: 1994-1997, Escort: 1991-2002, Expedition: 2009-2011, Explorer: 1995-2001, Explorer Sport Trac: 2001-2005, F150: 2009-2011, Festiva: 1989-1993, Mustang: 1997-2004, Probe: 1989-1997, Ranger: 1995-2011, Tempo: 1992-1994, Thunderbird: 1992-1995, Windstar: 1996-1999), Geo (Metro: 1989-1993, Prizm: 1989-1991, Spectrum: 1989, Storm: 1990-1993, Tracker: 1989), GM (Nova, Spectrum, Sprint), Honda (Accord: 1990-1993, Civic: 1988-1991, CRX: 1989-1990, Motorcycles: 1991-2004, Passport: 1994-2002, Prelude: 1990-1998), Hyundai (Accent: 1995-2010, Azera: 2006-2010, Elantra: 1992-2011, Entourage: 2007-2008, Excel: 1986-1994, Genesis: 2009-2010, Genesis Coupe: 2010, Sante Fe: 2002-2010, Scoupe: 1994, Sonata: 1989-2011, Tiburon: 1998-2008, Tuscon: 2005-2010, Veracruz: 2007-2010, XG 350: 2004), Infiniti: (FX35: 2003-2007, G20: 1991-2002, G35: 2004-2007, I30: 1997-2000, I35: 2002-2004, J30: 1996, M30: 1990-1992, M35: 2006-2009, M45: 2003-2010, Q45: 1990-2006, QX4: 1998-2003), Isuzu (Amigo: 1989-2000, Axiom: 2002-2004, I-Mark: 1985-1989, Impulse: 1985-1992), Kia (Amanti: 2006-2009, Borrego: 2000, Forte: 2011, Optima: 2002-2010, Rio: 2002-2011, Rio5: 2007-2011, Rondo: 2009-2010, Sedona: 2003-2011, Sephia: 1994-2001, Sorrento: 2002-2011, Soul: 2010-2011, Spectra: 2002-2009, SpectraS: 2005-2009, Sportage: 1995-2011), Lexus (ES300: 1996-2003, ES330: 2005, LS400: 1992, LX 450: 1996-1999, LX470: 1998-2005, SC400: 1992), Lincoln (Navigator: 2009-2011), Mazda (323: 1986-1993, 626: 1985-1999, 929: 1990-1993, B2000: 1986-1987, B2200: 1988-1993, B2300: 2005, B2500: 1998-2000, B2600: 1987-1993, B3000: 1996-2007, B4000: 1995-2006, CX-9: 2007-2010, Matia: 1991-2005, Millenia: 1995-2002, MPV: 1991-2006, MX-5 Matia: 2006-2012, MX-6: 1991-1997, Protege: 1993-2003, Protege 5: 2002-2003, RX-7: 1986-1995, RX-8: 2005-2009), Mercury (Capri: 1991-1994, Cougar: 1989-1992, Cougar w/V6: 1993-1997, Mountaineer: 1997-2000, Topaz: 1992-1994, Tracer: 1988-1999, Villager: 1994-2002), Mitsubishi (3000GT: 1992-1996, Cordia: 1986-1988, Diamante: 1992-1995, Eclipse: 1990-1999, Galant: 1989-1993, Mighty Max: 1987-1994, Mirage: 1985-1992, Montero: 1989-1998, Outlander: 2003-2011, Outlander Sport: 2011, Precis: 1988-1992, Starion: 1984-1986), Mercedes Benz, Nissan (200SX: 1984-1988, 240SX: 1990-1994, 300ZX: 1984-1996, Altima: 1993-2006, Axxess: 1990, Cube: 2009-2010, D21: 1986-1994, Frontier: 1998-2011, Maxima: 1987-2008, Murano: 2003-2007, NX: 1991-1993, Pathfinder: 1987-2004, Pulsar NX: 1987-1989, Quest: 1994-2009, Rogue: 2009-2010, Sentra: 1987-2011, Stanza: 1987-1992, Versa: 2007-2011, Xterra: 2000-2012), Plymouth (Colt: 1984-1991, Laser: 1993-1994), Subaru (Baja: 2004-2005, Brat: 1983-1987, DL: 1983-1989, Forester: 1999-2011, GL: 1983-1989, GL-10: 1985-1989, Impreza: 1993-2001, Justy: 1998-1993, Legacy: 1990-2011, Loyale: 1990-1992, Outback: 2000-2011, RX: 1986, SVX: 1994-1997, XT: 1985-1991), Suzuki (Equator: 2009-2011, Samurai: 1986, Sidekick: 1989-1991, Swift: 1990-1994, XL-7: 2004-2006), Toyota (4Runner: 1986-1995, Avalon: 1995-2004, Camry: 1983-1991, Camry 4cylinder: 1994-1999, Celica: 1983-1989, Corolla: 1983-1992, Cressida: 1985-1992, Land Cruiser: 1993-2007, MR2: 1989-1995, Previa: 1991-1997, Sienna: 1998-2006, Solara: 1999-2008, Starlet: 1983-1984, Supra: 1987-1990, T100: 1995-1998, Tacoma: 1996-2004, Tercel: 1983-1990)</p>
43300-5	<p>Acura (CL: 1997-2002, Integra: 1994-2000, Legend: 1993-1995, MDX: 2001-2011, RDX: 2009-2012, RL: 1996-2010, RSX: 2002-2005, TL: 1996-2011, TSX: 2007-2012), Chevrolet (Metro: 1999-2000, Prizm: 1998-2002, Tracker: 1998-2004), Chrysler (Sebring: 2011), Dodge (Colt: 1993-1994, Stratus: 2001-2004), Eagle (Summit: 1992-1993), Geo (Metro: 1995-1997, Prizm: 1993-1997, Tracker: 1997), Honda (Accord: 1994-2011, Civic: 1992-2010, Civic del Sol: 1993-1997, CR-V: 1997-2010, CR-Z: 2011, Element: 2003-2010, Fit: 2008-2009, Insight: 2001-2011, Odyssey: 1998-2010, Pilot: 2003-2011, Prelude: 1999-2001, Ridgeline: 2007-2011, S2000: 2006-2009), Isuzu (Oasis: 1997, Rodeo: 1999-2000, Rodeo Sport: 2003), Lexus (ES250: 1990-1991, ES350: 2008-2012, GS300: 1993-2003, GS350: 2007-2009, GS430: 2004-2007, GX470: 2004-2005, IS300: 2003, IS350: 2009-2012, LS430: 2001-2003, LX570: 2011-2013, RX300: 1999-2006, RX350: 2008-2010, RX400H: 2006-2008, SC300: 1992-2010), Mazda (Mazda 2: 2011, Mazda 5: 2008-2010, Protege: 1995-2003), Mercedes (ML-class, W163, W164), Mitsubishi (Diamante: 1996-2004, Eclipse: 2000-2010, Endeavor: 2006-2011, Expo: 1992-1995, Expo LRV: 1992-1994, Galant: 1994-2011, Mirage: 1993-2002, Montero Sport: 1997-2003), Plymouth (Colt: 1992-1994), Pontiac (Vibe: 2003-2010), Scion (FR-S: 2013, iQ: 2012, tC: 2005-2010, xA: 2006), Subaru (B9 Tribeca: 2006-2007, Tribeca: 2008-2010), Suzuki (Aerio: 2003-2007, Esteem: 1995-2002, Sidekick: 1991-1998, Swift: 1999-2001, SX4: 2007-2009, Vitar: 1999-2003, X-90: 1996-1998, XL-7: 2002-2003), Toyota (4Runner: 1969-2011, Avalon: 2005-2010, Camry V6 w/autotrans: 1990-1991, Camry: 1992-2011, Celica: 1990-1999, Corolla: 1993-2012, Echo: 2001-2005, FJ Cruiser: 2007-2010, Highlander: 2001-2011, Land Cruiser: 2009, Matrix: 2003-2011, Paseo: 1992-1998, Prius: 2001-2009, RAV4: 1996-2003, Sequoia: 2001-2011, Sienna: 2007-2011, Supra: 1990-1998, Tacoma: 2005-2011, Tercel: 1991-1998, Tundra: 2000-2011, Venza: 2009-2011, Yaris: 2008-2011), VW (Touareg: 2004)</p>
43302-6	<p>Cadillac (Catera: 1997-2001), Chevrolet (Aveo: 2004-2011, Aveo5: 2006-2011, Epica: 2004), Daewoo (Leganza: 1999-2002, Lanos: 1999-2002, Nubira: 1999-2002), Ford (Contour: 1995-2000, Fiesta: 1995-, Focus: 1999-, Fusion: 2006-), GM (Achieva, Skylark, Grand Am: 1992-2002), Jaguar (All: 1990-1994, XJ8: 1998-2001, XJR: 1998-2001, XK8: 1997-2006, XKR: 2000-2006, X-Type: 2002-2007), Jeep, Land Rover (Discovery: 1989-2004, Range Rover: 1988-1994), Mercedes-Benz (ML-Class: 1997-2011), Mercury (Mistique: 1995-2000), Pontiac (Le Mans: 1988-1993, G3: 2009, Wave: 2005, Wave5: 2005), Porsche (911: 1999-, Boxter: 1997-), Saab (900: 1994-1998, 9-3: 1999-2003, 9-5: 1999-2008), Saturn (L100: 2001-2002, L200: 2001-2003, L300:2001-2005, L300-1: 2004, L300-2: 2004, L300-3: 2004, LS: 2000, LS1: 2000, LS2: 2000, LW1: 2000, LW2: 2000, LW200: 2001-2003, LW300: 2001-2003, Vue: 2002), Suzuki (Forenza: 2004-2008, Reno: 2005-2008, Swift+: 2004, Verona: 2004-2005)</p>
43302-7	<p>Alfa Romeo (145-930: 1994-2001, 146-930: 1994-2001, 164-164: 1987-1998, 166-936: 1998, 33-907A: 1990-1994, 33 sportwagon-907B: 1990-1994, GTV-916C: 1994, Spider-916S: 1994-2005), Citroen (Jumper Box 230L: 1994-2002, Jumper Bus 230P: 1994-2002, Jumper Platform/Chassis 230: 1994-2002), Fiat (Coupe FA/175: 1993-2000, Cromia-154: 1985-1996, Ducato Box-230L: 1994-2002, Ducato Box-244: 2002, Ducato Bus-230: 1994-2002, Ducato Bus-244Z: 2002, Ducato Platform/Chassis230: 1994-2002, Lancia (Delta II 836: 1993-1999, Kappa-938A: 1994-2001, Kappa Coupe-838: 1996-2001, Kappa SW-838B: 1996-2001, Thema-834: 1984-1994, Thema SW-834: 1987-1994), Mini Cooper (S:2002-), Peugeot (206: 1999-, 307:2004-, 406: 1999-, 407: 2004-, 807: 2004-, Boxer Box-230L: 1994-2002, Boxer Bus-230P: 1994-2002, Boxer platform/Chassis-ZCT: 1994-2002), Renault (All-1985-1987, Avantage: 2002-, Espace: 2002-), Saab (900-1978-1993, 9000: 1986-1998), Sterling (All: 1987-1991), Jeep, Volvo (Passenger vehicles w threaded neck)</p>

43302-8	VW (Vento, T4, Passat: 1990-1997, Beetle, Sharan, Cabrio: 1995-2002, Corrado: 1990-1994, Eurovan: 1993-2003, Golf: 1990-1999, 1990-1998: with female thread on filler neck of expansion tank - except 1998 Passat & New Beetle, Jetta: 1990-1999)
43302-9	Audi (A3: 2006-2012, A3-8P1: 2003, A3 Sportback-8PA: 2004, A4: 1996-2012, A4-8EC, B7: 2004-2008, A4 Avant-8ED, B7: 2004-2008, A4 Quattro: 1996-2012, A5: 2011-2012, A5 Quattro: 2008-2012, A6: 1998-2012, A6 Quattro: 1998-2011, A7 Quattro: 2012, A8 Quattro: 2004-2010, Allroad Quattro: 2001-2005, Q5: 2009-2012, Q7: 2007-2012, R8: 2008-2012, RS4: 2007-2008, RS6: 2003, S4: 2000-2012, S5: 2008-2012, S6: 2002-2011, S8: 2007-2009, TT: 2000-2009, TT-8J3: 2006, TT-8N3: 1998-2006, TT Quattro: 2000-2013, TT Roadster-8J9: 2007, TT Roadster 8N9: 1999-2006), BMW (345), Porsche (Cayenne), Seat (Altea-5P1: 2004, Cordoba-6K2: 1999-2002, Cordoba-6L2: 2002-2009, Ibiza III-6K1: 1999-2002, Ibiza IV-6L1: 2002-2009, Leon-1M1: 199-2006), Skoda (Fabia: 2006, Fabia 6Y2: 1999-2008, Fabia Combi: 2007, Fabia Combi-6Y5: 2000-2007, Fabia Praktik: 2001-2007, Fabia Saloon-6Y3: 1999-2007, Laura-1Z3: 2004, Octavia 1U2: 1996-2010, Octavia Combi-1U5: 1998-2010, Octavia Combi-1Z5: 2004, Roomster-5J: 2006, SuperB Estate: 3T5: 2009), VW (Beatie: 1998-2012, Caddy III Box-2KA, 2KH, 2CA, 2CH: 2004, Caddy III Estate-2KB, 2KJ, 2CB, 2CJ: 2004, CC: 2009-2013, Crafter 30-35 Bus 2E: 2006, Crafter 30-50 Box 2E: 2006, Crafter 30-50 Platform / Chassis 2F, E0S: 2007-2012, E0S-1F7, 1F8: 2006, Fox-5Z1, 5Z3: 2003, Golf: 1999-2012, Golf Plus-5M1, 5Z1: 2005, Golf V-1K1: 2003-2009, Golf V Variant 1K5: 2007, GTI: 2006-2013, Jetta: 1997-2012, Jetta I Saloon-1K2: 2005-2010, LT 28-35 II Bus-2DM: 1996-2006, LT 28-46 II Box-2DX0A: 1996-2006, LT 28-46 II Platform/Chassis 2DX0E: 1996-2006, Multivan Mk V-7HM, 7HN,7EF, 7EM, 7EN: 2003, New Beetle-9C1, 1C1: 1998, New Beetle Convertible-1Y7: 2002-2010, Passat: 1998-2012, Passat-3B3: 2000-2005, Passat-3C2: 2005, Passat Variant-3B6: 2000-2005, Passat Variant 3C5: 2005, Polo-9N: 2001, Polo Saloon: 2002, R32: 2008, Rabbit: 2006-2009, Tiguan: 2009, Touareg: 2004-2012, Touran-1T1, 1T2, 1T3: 2003, Transporter/Caravelle MK V Bus-7HB, 7HJ, 7EB, 7EJ, 7EF: 2003, Transporter MK V Box-7HA, 7HH, 7EA, 7EH: 2003, Transporter MK V Platform/Chassis-7JD, 7JE, 7JL, 7JY, 7JZ: 2003)
43302-10	BMW (3-E30: 1982-1992, 3-E36: 1990-1998, 3-E46: 1998-2005, 3-E90: 2005, 3 Compact-E36: 1994-2000, 3 Compact-E46: 2001-2005, 3 Convertible-E30: 1985-1993, 3 Convertible-E36: 1993-1999, 3 Convertible-E46: 2000, 3 Coupe-E36: 1992-1999, 3 Coupe-E-46: 1999, 3 Touring-E30: 1987-1994, 3 Touring-E36: 1995-1999, 3 Touring-E46: 1999-2005, 3 Touring-E91: 2005, 5-E28: 1980-1990, 5-E34: 1987-1995, 5-E39: 1995-2003, 5-E60: 2003, 5 Touring-E34: 1991-1997, 5 Touring-E39: 1997-2004, 7-E32: 1977-1986, 7-E32: 1986-1994, 7-E38: 1994-2001, 7 E65, E66: 2001, 8-E31: 1990-1999, X3-E83: 2004, X3-E53: 2000, Z3-E36: 1995-2003, Z3 Coupe-E36: 1997-2003, Z4-E85: 2003, Z4 Coupe-E86: 2006, Z8-E53: 2000-2003, Brilliance 3 Series-E46: 2003-2005, Brilliance 3 Series-E90: 2004), Landrover (Freelander-LN: 1998, Range Rover III-LM: 2002)
43302-11	Audi (1975-1993: w/ male thread on expansion tank), VW (1975-1993: w/ male thread on expansion tank, Golf: 1983-1992, Cabriolet: 1985-1993, Dasher: 1980-1981, Fox: 1987-1993, Golf: 1985-1990, Jetta: 1980-1990, Quantum: 1980-1988, Rabbit: 1975, Rabbit Convertible: 1980-1984, Scirocco: 1975-1988)
43302-12	Caterham (Super Seven 1990-1999), Ford (Cougar 1998-2001, Mondeo 1996-2007, Mondeo Estate Wagon: 1996-2007, Transit 260: 2000-2006, Transit 480: 2000-2006, Transit 300: 2000-2006, Transit 330: 2000-2006, Transit 350: 2000-2006, Transit 425: 2003-2006, Transit 430: 2001-2006, Transit Tourneo: 2000-2006, Courier III: 1990-1995, Courier IV: 1995-2001, Escort 55 IV: 1986-1990, Escort 55 VI: 1994-2000, Escort 75 VI: 1994-2000, Escort IV: 1986-1990, Escort V: 1990-1996, Escort VI: 1995-2000, Fiesta Classic: 1987-1989, Fiesta II: 1989-1989, Fiesta III: 1989-1996, Fiesta IV: 1995-1999, Fiesta V: 1999-2002, Fiesta Van 11: 1987-1989, Fiesta Van 111: 0899-1996, Fiesta Van 1V: 1995-2002, Fiesta Van V: 1999-2002, Fiesta Van VI: 2002-2008, Fiesta V1: 2002-2008, Focus 1: 1998-2005, Focus Wagon 1: 1998-2005, Focus Wagon 1V: 1998-2005, Granada Scorpio: 1985-1994, Ka 1: 1996-2005, Mondeo 1: 1993-1996, Mondeo 11: 1996-1998, Mondeo Wagon 1: 1993-1996, Mondeo Wagon 11: 1996-2000, Orion 11: 1986-1990, Orion 111: 1990-1993, P100 Sierra: 1989-1994, Puma 1: 1997-2002, Scorpio 1: 1984-1994, Scorpio 11: 1994-1998, Sierra Cosworth 11: 1987-1993, Sierra 1: 1984-1987, Sierra11: 1987-1993, Sierra Sapphire 11: 1987-1993, Streetka 1: 2003-2005, Transit 100: 1994-1999, Transit 120: 1994-1999, Transit 150: 1994-1999, Transit 190: 1994-1999, Transit Connect: 2002-), Landrover , Mazda (2: 2002-2007, 121: 1996-2002), Opel (Agila: 2000-2008, Ascona B: 1978-1981, Ascona C: 1981-1988, Astra Cabrio F: 1993-2001, Astra Cabrio G: 2001-2005, Astra Classic F: 1998-2002, Astra Coupe G: 1999-2005, Astra F: 1991-1998, Astra G: 1998-2005, Astra H: 2004-2005, Astra Van F: 1991-1998, Astra Van G: 1998-2004, Calibra: 1989-1998, Combo Corsa B: 1992-2001, Combo Corsa C: 2001-2004, Corsa A: 1982-1993, Corsa B: 1993-2000, Corsa C: 2000-2006, Corsa Van A: 1982-1994, Corsa Van B: 1994-2001, Corsa Van C: 2000-2003, Frontera A: 1991-1998, Kadett E: 1979-1984, Kadett E: 1984-1992, Kadett Van E: 1984-1992, Manta A: 1974-1975, Manta B: 1975-1988, Meriva: 2003-2005, Monza: 1981-1987, Omega A: 1986-1994, Omega B: 1994-2003, Senator A: 1981-1987, Senator B: 1987-1993, Tigra A: 1994-2001, Tigra B: 2004, Vectra A: 1988-1995, Vectra B: 1995-2003, Zafira A: 1999-2005, Zafira Van: 2002-2003), Saab (900 11: 1993-1998), Skoda (Favorit: 1989-1995, Favorit Forman: 1993-1995, Felicia - 6U1: 1994-2000), Ssangyong , Vauxhall (Astra Cabrio 111: 1991-2001, Astra Cabrio 1V: 2001-2007, Astra Coupe 1V: 1999-2005, Astra 1: 1979-1984, Astra 11: 1984-1991, Astra 111: 1991-1998, Astra 1V: 1998-2005, Astra Van 111: 1991-1996, Astra Van 1V: 1998-2005, Astramax: 1985-1991, Astravan 1 1982-1984, Astravan 11 1984-1991, Belmont: 1986-1991, Calibra: 1990-1998, Carlton: 1983-1994, Cavalier 11: 1981-1988, Cavalier 111: 1988-1995, Combo: 1993-2004, Combo Crew Van: 2001-2006, Corsa 1: 1993-2000, Corsa 11: 2000-2006, Corsa Van A: 1993-2001, Corsa Van 11: 2001-2006, Frontera A: 1991-1998, Meriva: 1982-1993, Nova: 1982-1993, Nova Van: 1990-1993, Omega: 1994-2003, Senator: 1987-1993, Tigra: 1994-2004, Vectra 1: 1999-2005, Zafira A: 1999-2005, Zafira B: 2005-2007)
43302-13	Chrysler (Crossfire: 2004-), Mercedes (w/ thread filler neck on expansion tank, except M-Class, 300SE: 1992-1993, 400SE: 1992, 400SEL: 1993, 500SEC: 1993, 500SEL: 1992-1993, 500SL: 1900-1993, 600SEC: 1993, 600SEL: 1992-1993, 600SL: 1993, C230: 2002, C240: 2001-2005, C280: 1994-2007, C300: 2008-2009, C32 AMG: 2002-2004, C320: 2001: 2005, C350: 2008, C36 AMG: 1995-1997, C43 AMG: 1998-2000, CL500: 1998-2006, CL55 AMG: 2001-2002, CL600: 1998-2006, CL65 AMG: 2005-2006, CLK 320: 1998-2005, CLK 430: 1999-2003, CLK500: 2003-2005, CLK55 AMG: 2001-2005, E300: 1996-1997, E320: 1996-2005, E350: 2006-2009, E420: 1997, E430: 1998-2002, E500: 2003-2006, E55 AMG: 1999-2002, E550: 2009, G500: 2002-2005, G55 AMG: 2003-2005, GL450: 2007-2008, ML350: 2006-2008, ML500: 2006-2007, ML550: 2008-2009, S320: 1994-1999, S350: 1994-2006, S420: 1994-1999, S500: 1994-2006, S55 AMG: 2001-2006, S600: 1994-2006, S65 AMG: 2006, SL320: 1994-1997, SL500: 1994-1998, SL600: 1994-2002, SLK280: 2006-2008, SLK32 AMG: 2002-2004, SLK 320: 2001-2004, SLK 350: 2006-2008, SLK55 AMG: 2008)

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer.

When it comes to quality cooling system service tools, Mastercool is the brand you can depend on.