

TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**


**NOTE: BEFORE STARTING DISCONNECT BATTERY AND ALWAYS WEAR PROPER SAFETY EQUIPMENT WHILE WORKING**


STEP 1: USING A 1/2" SOCKET WRENCH REMOVE FLOOR MOUNTING BOLTS AND PLACE TO THE SIDE

STEP 2: DISCONNECT THE SEAT BELT SENSOR UNDER THE SEAT BEFORE REMOVING SEAT FROM VEHICLE.


STEP 3: DISCONNECT ALL OTHER CABLES UNDER THE SEAT. (SEAT HEATER, AIR BAG, SEAT BELT SENSOR)

STEP 4: MOVE ADJUSTERS TO THE REAR POSITION AND UNBOLT THE (4) FRONT ADJUSTER NUTS. RETAIN THE NUTS FOR LATER USE.

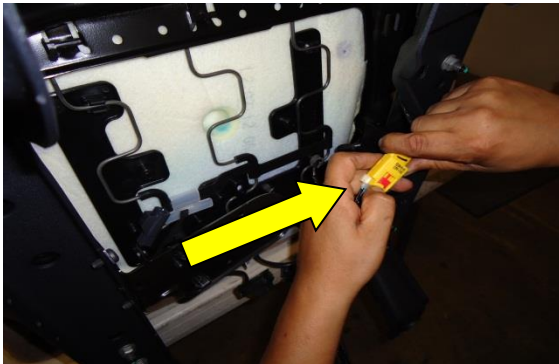

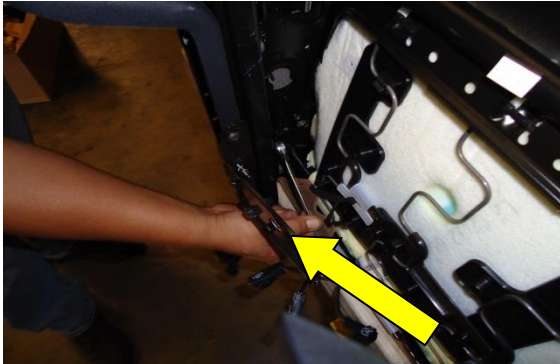
TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 5: MOVE ADJUSTERS TO THE FORWARD POSITION AND UNBOLT THE (4) REAR ADJUSTER NUTS. RETAIN THE NUTS FOR LATER USE.

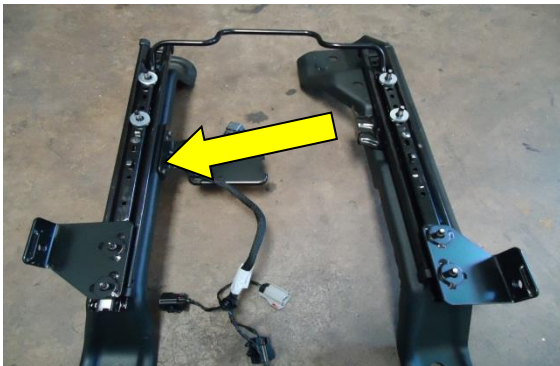

STEP 6: REMOVE FACTORY ADJUSTERS FROM FACTORY SEAT AND PLACE TO THE SIDE. DISCONNECT REMAINING SENSOR FROM THE ADJUSTERS AND RETAIN FOR LATER USE.

**NOTE: WILL NEED TO REMOVE FACTORY BRACKET BEFORE INSTALLING MASTERCRAFT SEATS.**

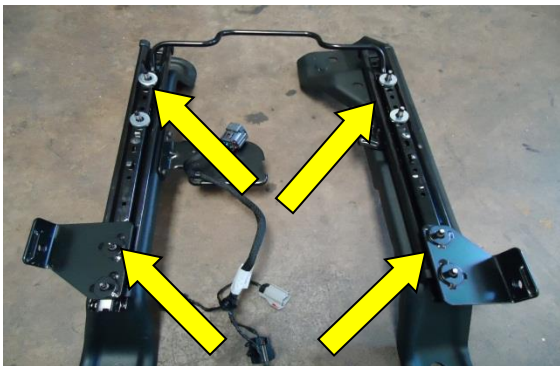

STEP 7: PLACE THE (4) SPACERS ON THE FRONT MOUNTING BOLTS, THEN THE LARGER BRACKET ON THE OUTBOARD SIDE OF THE ADJUSTER AND THE SMALLER BRACKET ON THE INBOARD SIDE.




STEP 8: PLACE THE ADJUSTERS ONTO THE MASTERCRAFT SEAT AND HAND TIGHTEN NUTS.


**NOTE: BEFORE TIGHTENING BOLTS ON ADJUSTER RUN THE SENSOR CABLE FOR THE SEAT BELT BETWEEN THE ADJUSTER AND THE SEAT.**

TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 9: BEFORE ATTACHING SEAT BELT RECIEVER TO THE INBOARD SIDE OF THE SEAT, TAB MUST BE BENT FLAT.

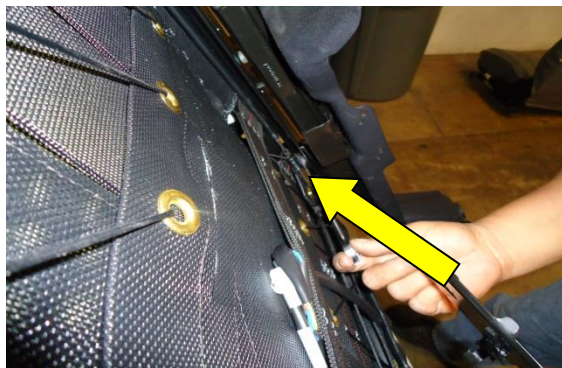

STEP 10: MOVE ADJUSTERS TO THE FORWARD POSITION AND TIGHTEN REAR NUTS THEN MOVE ADJUSTERS TO THE REAR POSITION AND TIGHTEN FRONT NUTS.

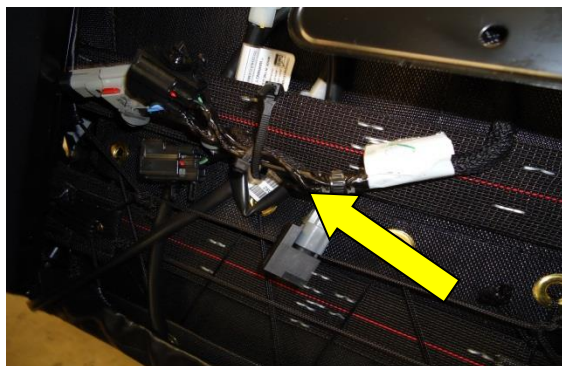

STEP 11: CONNECT THE SEAT BELT SENSOR DEVICE TO THE CABLES AND USING ZIP TIES ATTACH THE LOOSE CABLES TO THE SEAT.



STEP 12: PLACE SEAT IN VEHICLE AND LINE UP MOUNTING HOLES TO MOUNTS AND CONNECT THE SENSOR CABLES.



TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 13: USING A 1/2" SOCKET WRENCH  
TIGHTEN FLOOR MOUNTING BOLTS.



STEP 14: BEFORE ATTACHING SHOULDER  
HARNESS TO THE OUTBOARD SIDE OF THE  
SEAT, TAB MUST BE BENT FLAT.



STEP 15: USING A 7/16" X 3/4" BOLT  
SUPPLIED IN KIT, ATTACH THE SHOULDER  
HARNESS TO THE OUTBOARD BRACKET.