


READ THE INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE BEGINNING THE INSTALLATION.



**PART# 9413KB**  
**OPTIONAL KICKER BAR INSTALLATION**  
**2007-2013 CHEVY/GMC 1500 4WD**  
**7" SUSPENSION LIFT KIT**

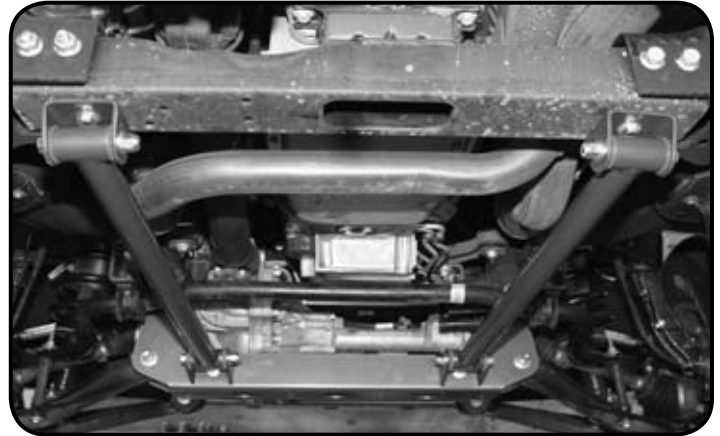

**HARDWARE LIST**

(1) Bracket angled left	(4) ½-13 x 1½"
(1) Bracket angled right	(6) ½-13 Nylock Nut
(2) straight brackets	(14) ½" Flat Washer
(2) Kicker bars	(4) 2.748" Crush Tube
(2) Nut handles	(8) 2903 Shackle Bushing
(4) ½-13 x 4" Hex Cap Screw	

**⚠ OPTIONAL KICKER BAR INSTALLATION ⚠**

**STEP 1:** Insert the gold nut plate into the cross member at the transmission and loosely attach one of the straight u-strap plates to the cross member using the provided ½-13 x 1 ½" bolts. Do the same for the other side.

**STEP 2:** Loosely attach each of the two angled u-strap plates to the back of the rear cross member using the provided ½-13 x 1 ½" bolts. **NOTE: ENSURE THAT THE ANGLED U-STRAP PLATES ARE ANGLED OUTWARD.**



**STEP 3:** Attach the Max Trac kicker bars on one side to the recently mounted strap on the cross member, and to the recently installed strap on the transmission cross member using the provided 1/2-13 x 4" bolts. Once both sides are installed, tighten all 8 bolts.



Learn more about performance suspension parts we have.