


# T5154

2015-Up Chev/GMC 2500/3500 Duramax, 5"-6" Angled Rolled End Tip

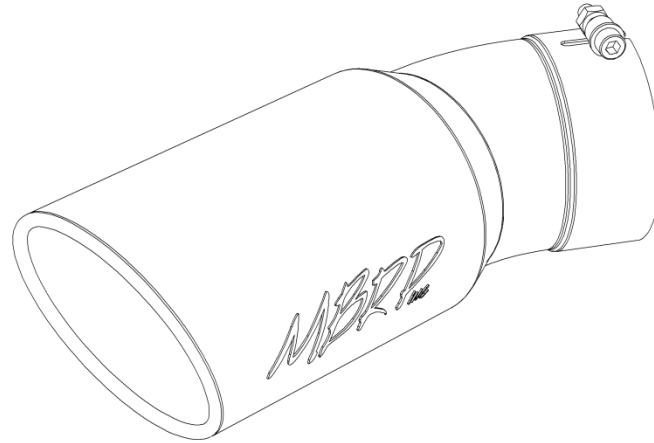

07 May, 2015



## PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that this component is of superior quality and properly packaged. It is the installer's responsibility to ensure that the component is complete, including any additional hardware and that it is undamaged. This should be done prior to the removal of factory components. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.

## Installation Instructions:



**Figure 1**

1. Mark around the stock tail pipe 3" from the end of the vent.  
**Refer to Figure 1.**

2. Cut the stock tail pipe off using a reciprocating saw (make sure cut is straight all the way around). File off burrs or sharp edges.



**Figure 2**

3. Install **Tip** on the stock tail pipe. Rotate to desired position (use a level if necessary). Tighten **Exhaust Tip**.  
**Refer to Figure 2.**

**Note:** *Inspect Tip position and fastener tightness after 25-50 miles of operation.  
Re-tighten if necessary.*

**Congratulations!** You are ready to begin enjoying your new visually appealing MBRP Inc. Tip.  
We know you will enjoy your purchase.