


# S7021

2010-2015 CAMARO 3.6L V6  
AXLE BACK 3", MUFFLER  
DELETE

**MBRP**  
INC.  
PERFORMANCE EXHAUST

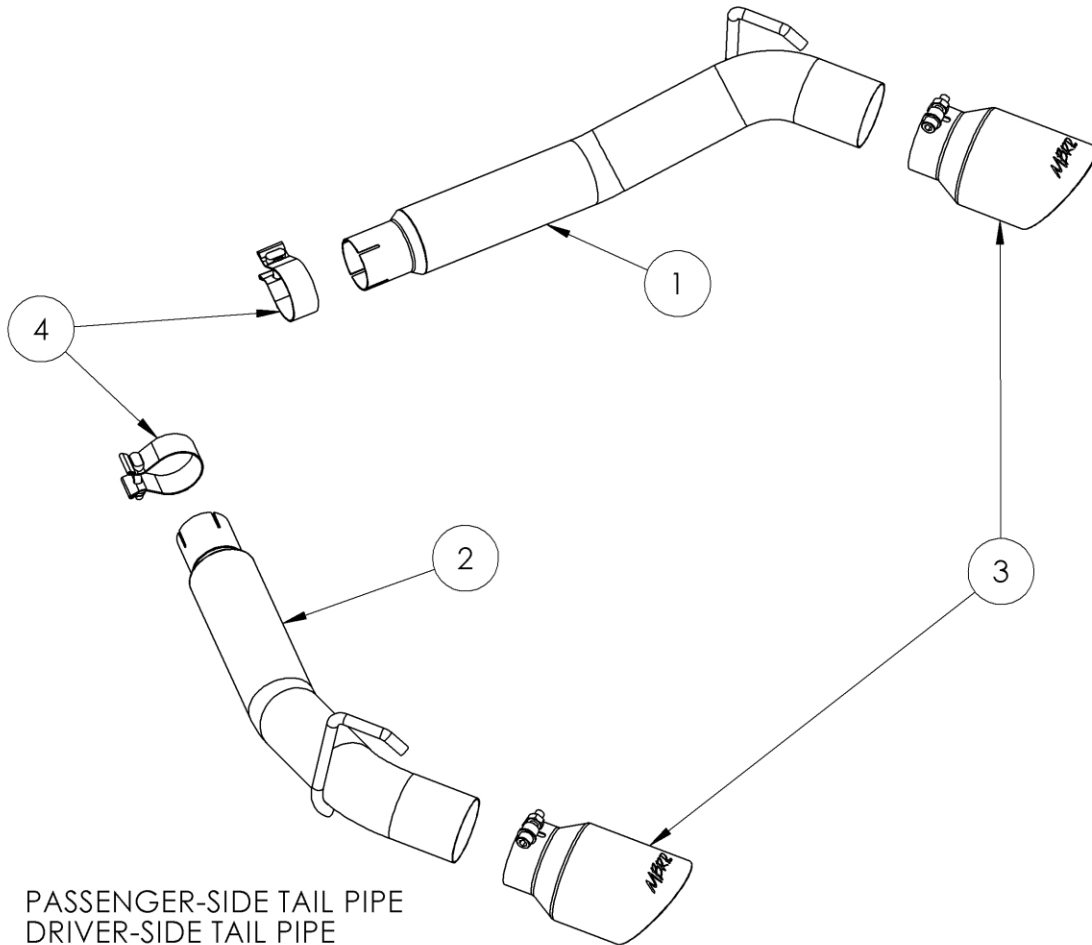

1. PASSENGER-SIDE TAIL PIPE
2. DRIVER-SIDE TAIL PIPE
3. EXHAUST TIP (2 PCS)
4. 2.25" CLAMP (2 PCS)

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

**Removal of Stock System:**



**Figure 1**



**Figure 2**



**Figure 3**



**Figure 4**



**Figure 5**

1. Apply a penetrating lubricant liberally to rear muffler hangers and rubber isolators.

2. On each side, carefully cut the factory exhaust directly in front of the last bend as it goes into the muffler. Approximately 1.25" in front of the muffler weld seam. This should leave a little over 2" of straight pipe.

**Refer to Figures 1 and 2.**

3. Remove the factory muffler hangers from the rubber isolators and remove the factory mufflers.

4. Remove the factory rubber isolators from the vehicle but keep them for installation.

**Installation of MBRP Inc. Performance Exhaust:**

1. Place a **2.25" Clamp** over the end of the **Passenger-Side Tail Pipe** and install onto the cut passenger-side factory pipe.

**Refer to Figure 3.**

2. Place the outside lower hole of the factory rubber isolator onto the **Passenger-Side Tail Pipe** hanger, then onto the vehicle hangers.

**Refer to Figure 4.**

3. Loosely install the **Exhaust Tip** onto the **Passenger-Side Tail Pipe** to guide alignment and spacing with the rear fascia.

**Refer to Figure 5.**

4. Repeat steps 1-3 for the driver-side.

5. Once everything is aligned, completely tighten all **Clamps** and **Hardware**. Ensure **Clamps** are tight by trying to move the pipes.

6. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the frame, body, fuel and brake lines or any wiring. If any interference is detected, relocate or adjust.



**Congratulations!** You are ready to begin experiencing the improved power, sound and driving experience of your **MBRP Inc.** performance exhaust system. We know you will enjoy your purchase.