



A

1. Place plastic collar then brass fitting on the *antenna cable*. (Fig A)

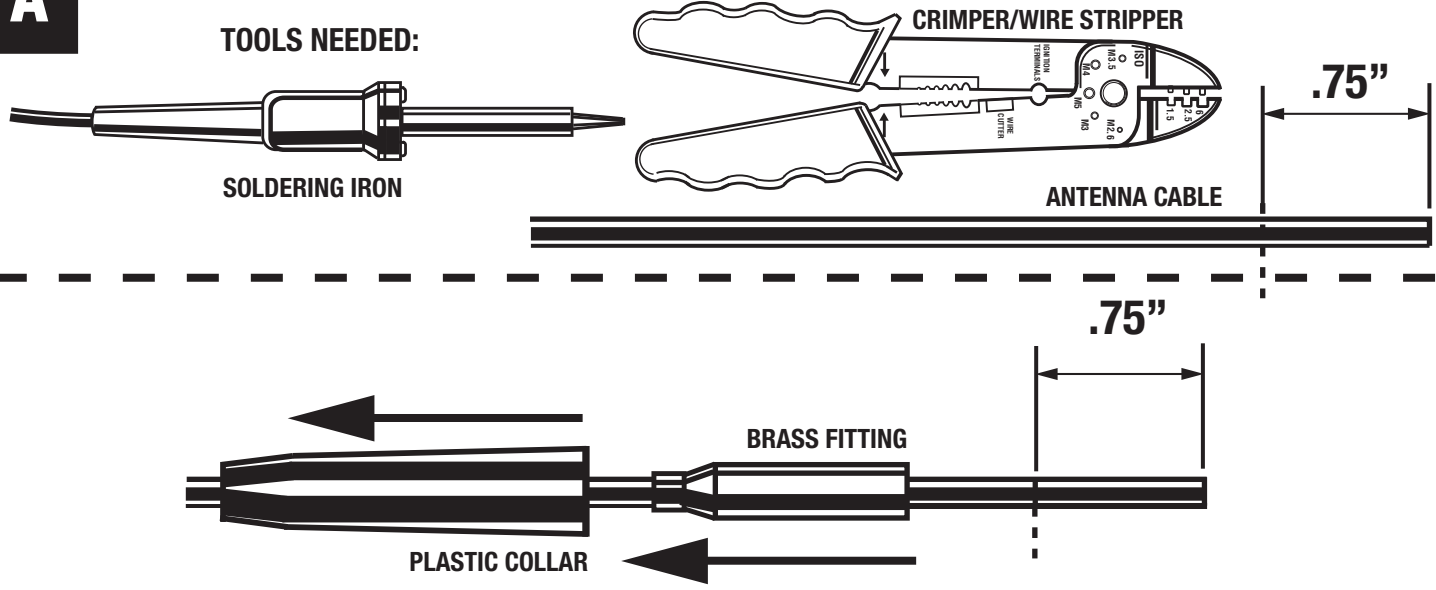


B1

2a. Strip back outer insulation 3/4" and peel ground shield over outer insulation. (Fig B1)

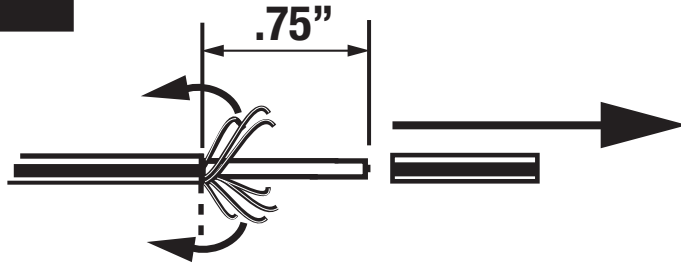


B2

2b. Cut inner insulation exposing the center conductor. (Fig B2)

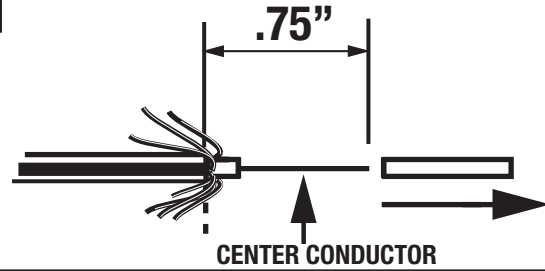


C

3. Solder the center conductor to the brass connector. (Fig C)

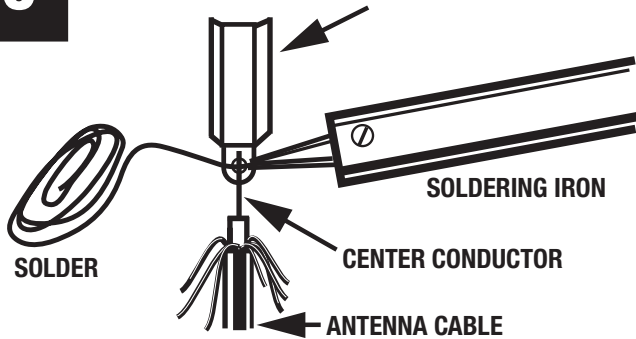


D

4. Insert brass connector into the plastic housing and slide brass fitting over housing and outer ground shield. (Fig D)

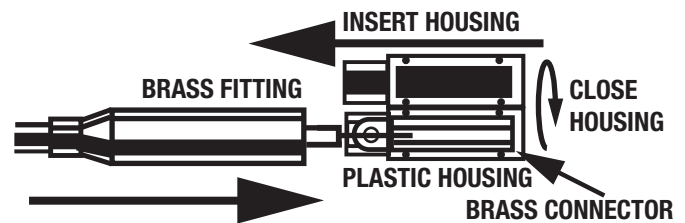

E

5. Crimp brass housing at outer insulation securing it in place. (Fig E)

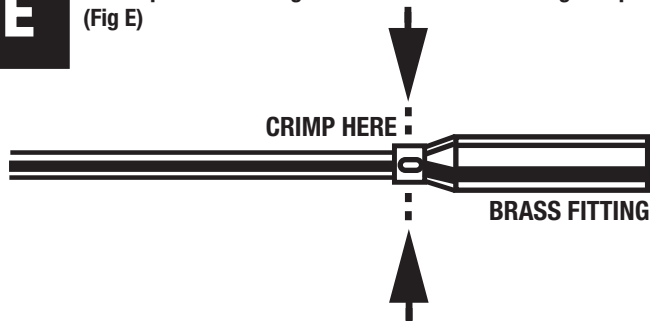

F

6. Slide plastic collar over brass fitting. (Fig F)

