

---

**70-1722**

---

**INSTRUCTIONS**

---

**FOR**

---

**AMPLIFIED SOUND SYSTEMS**

---



---

**For vehicles with factory amplifiers:**


In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

---

Use Metra's standard wiring instructions for the remainder of the installation.

# 20 WAY HARNESS

## 20 WAY HARNESS - FRONT FACE

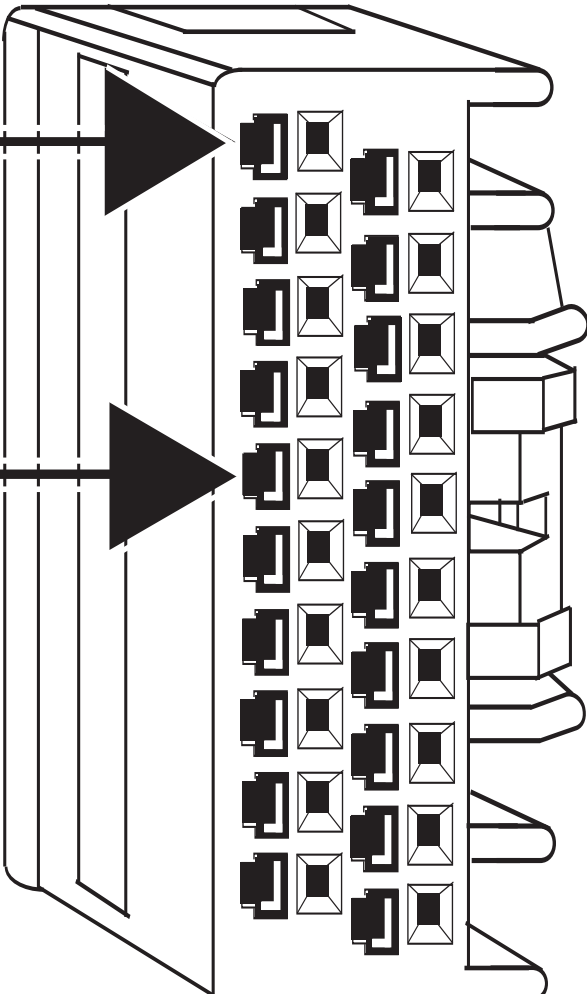

PIN 16-(without navigation)  
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)  
ATTACH TO AMP TURN ON WIRE