



INSTALLATION GUIDE

2020+ TOYOTA SUPRA 3.0 TITANIUM TURBO BLANKET | SKU: MMTB-SUP-20

TABLE OF CONTENTS

Pg 1 RESOURCES & CONTACT INFORMATION

Pg 2 IMPORTANT SAFETY INFORMATION

PARTS BREAK DOWN

INSTALLATION TIME

INSTALLATION DIFFICULTY

INSTALLATION INSTRUCTIONS

Pg 7 DISPOSAL INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

- Mishimoto recommends you use safety glasses and protective gloves during the install of their products
- Raise vehicle only on jack stands or on a vehicle lift
- Allow vehicle to cool completely prior to attempting installation
- Do not run the engine or drive the vehicle while overheating; serious damage can occur
- Please dispose of any liquids properly
- Mishimoto is not responsible for any vehicle damage or personal injury due to installation errors, misuse, or removal of Mishimoto products
- If you need any assistance while installing our products,

PARTS BREAKDOWN

DESCRIPTION	QUANTITY
TURBO BLANKET	1
COIL OF STAINLESS STEEL WIRE	1
TAB	1

INSTALLATION TIME 6 HOURS

INSTALLATION DIFFICULTY 

INSTALLATION INSTRUCTIONS

01. Remove the engine cover.




02. Remove the airbox and intake tube.




CONTINUED ON FOLLOWING PAGE

03. Remove the PCV hose.

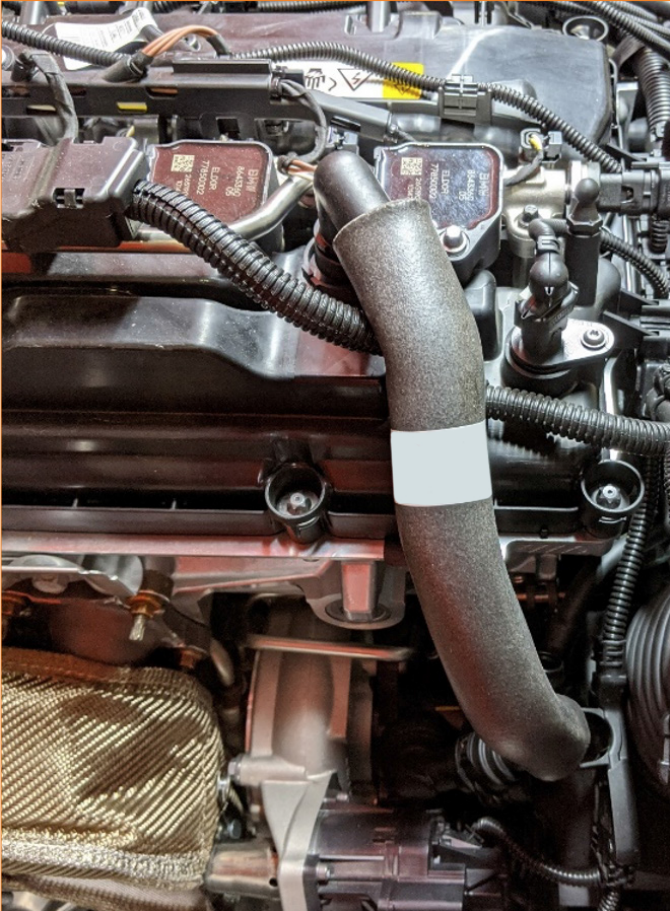

04. Remove the downpipe.

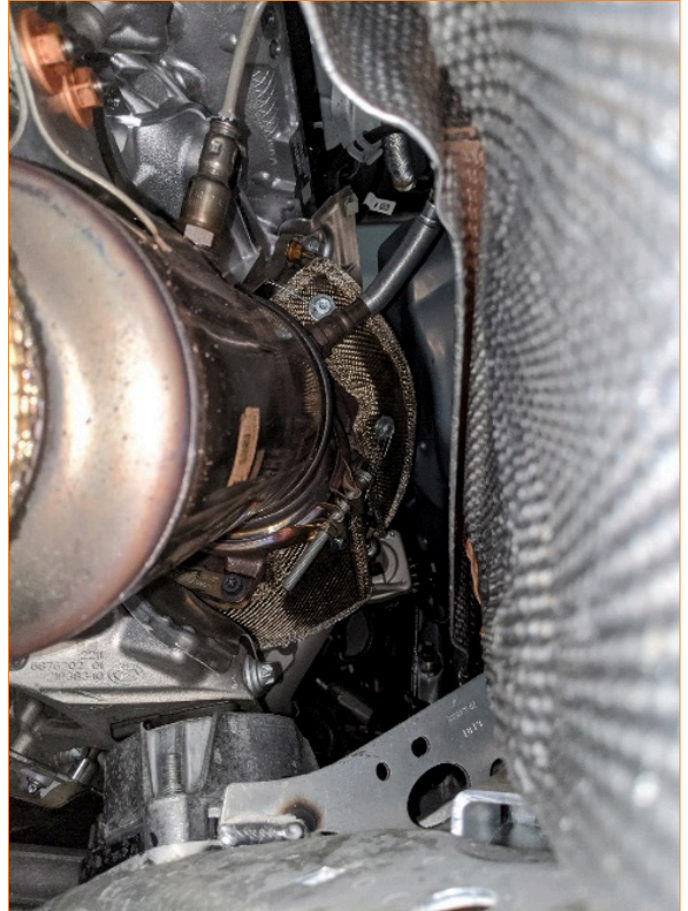


CONTINUED ON FOLLOWING PAGE

05. Drain the coolant.




06. Remove the turbo.

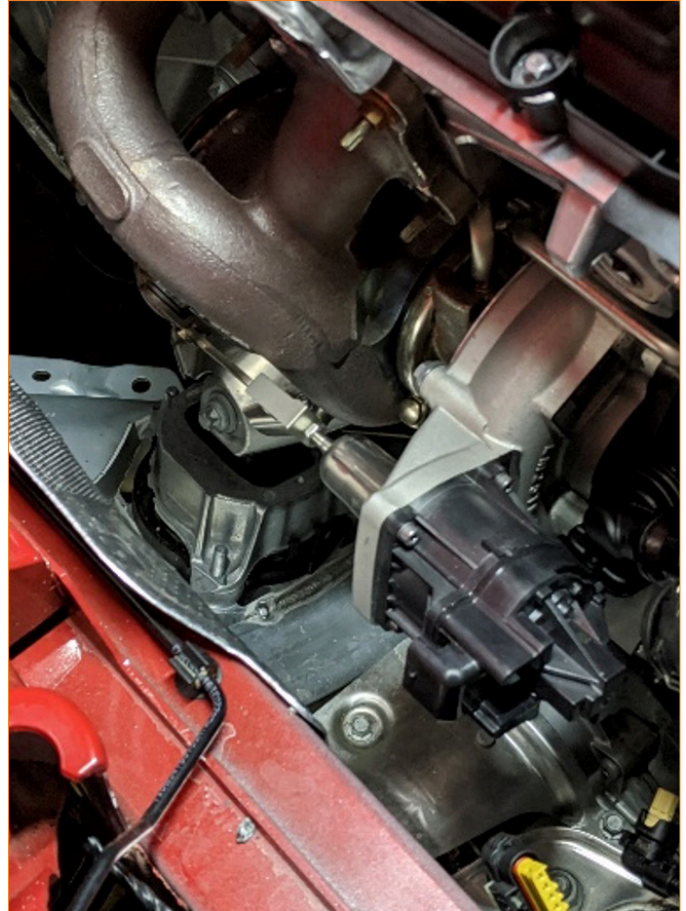


CONTINUED ON FOLLOWING PAGE

07. Wrap the turbo blanket around the turbo and secure with included wire at these two locations. Ensure the turbo blanket and wire do not interfere with the wastegate actuator arm.

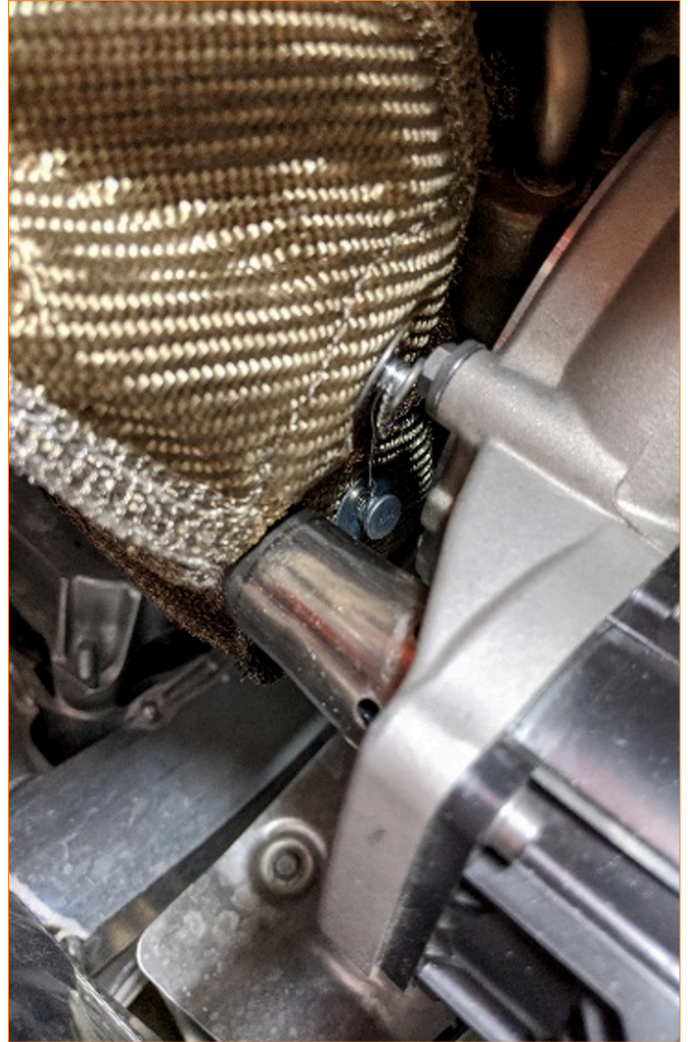

CONTINUED ON FOLLOWING PAGE

08. Reinstall the turbo. Before tightening all the manifold nuts, be sure to install the included bracket on the correct manifold stud. Then wire the turbo blanket to the bracket.

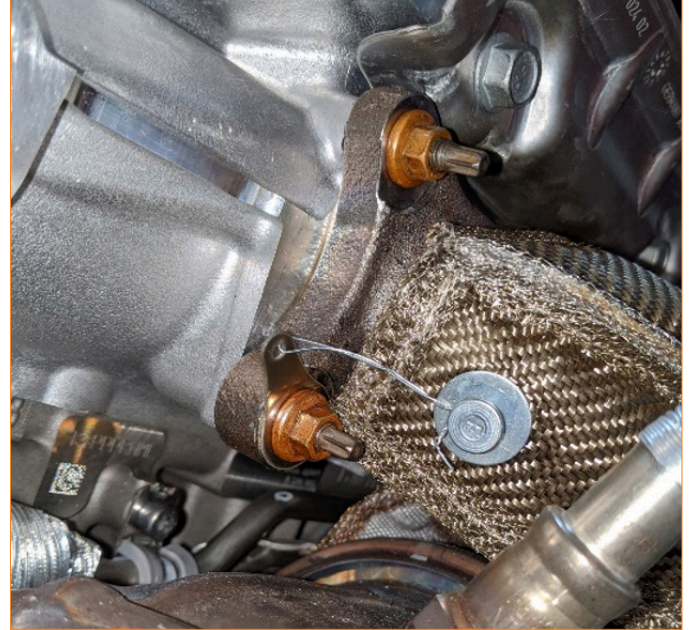

09. Reinstall all parts in reverse order.

Congratulations! You have finished installing the Mishimoto 2020+ Toyota Supra 3.0 Titanium Turbo Blanket.