





MOOG®
ENGINEERED
GREASEABLE
DESIGN

THE PROBLEM SOLVER®

PROBLEM:

Premature Failure/Excessive Play/Joint Separation

- Non-serviceable socket design is unable to flush away contamination entering into the socket assembly.
- Contamination remains in the assembly, causing corrosion and accelerated wear.

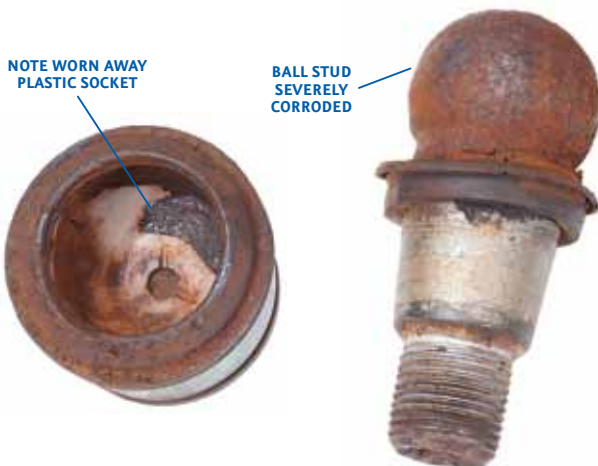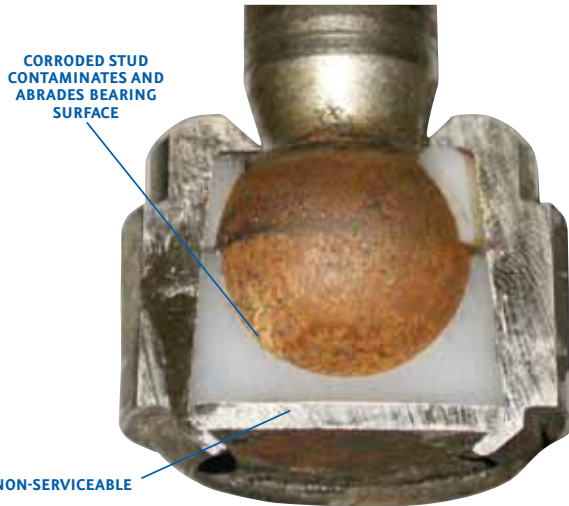

SOLUTION:

MOOG® Greaseable Design

- Greaseable design works with the MOOG sealed boot to keep contamination away from the socket assembly.
- Porous powdered-metal bearings hold grease between the ball and the bearing.
- Grease grooves in the ball or bearing (depending on application) allow grease flow to critical areas to ensure lubricated ball stud movement and to keep contaminants and wear to a minimum.
- The flow of fresh grease is directed across the bearing surfaces, displacing any accumulated debris away from the ball and bearing assembly.
- The grease-relief valve in the sealed boot shuts out moisture and debris, while ensuring proper fill levels by releasing excess grease away from vital brake components

