



THE AUTOMOTIVE LIGHTING BENCHMARK

INSTALLATION INSTRUCTIONS

15+ MUSTANG LED TURN SIGNALS

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its distributors make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS




2X TURN SIGNAL ASSEMBLIES

INSTALLATION PROCESS

1. Begin by removing the eight (8) clips securing the plastic radiator cover to the radiator support and remove it from the vehicle.



2. Remove the six (6) 8mm and two (2) 5.5mm bolts securing the bumper cover to the radiator support.

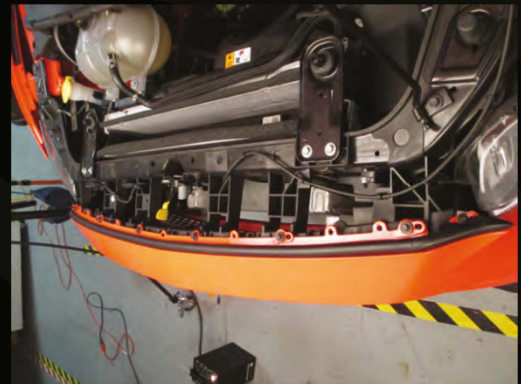

3. Support the front of the car so you can access the bumper's splash shield and remove it.
Note: Style of splash shield may vary.



4. On each side of the bumper, remove the plastic clips holding the fender liner to the bumper.




5. Fold back the fender line so that you can access the one bolt that holds the bumper to the fender. Once removed, firmly pull the sides of the bumper away from the fender.



6. With the splash shield pulled back, you can access the plugs for the turn signals and fog lights. Then remove the bumper.




7. Remove the signal bracket from the bumper using a 7mm socket wrench. Use a flat head screwdriver to assist in releasing the clips.

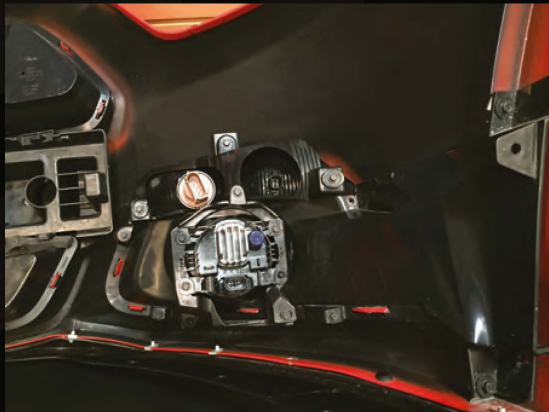

8. Remove the three (3) 7mm screws holding the turn signal to the bracket, then remove the turn signal housing.



9. Using the existing hardware, install the new sequential turn signals. Note: Be careful to not pinch any wires. Reinstall in reverse order.

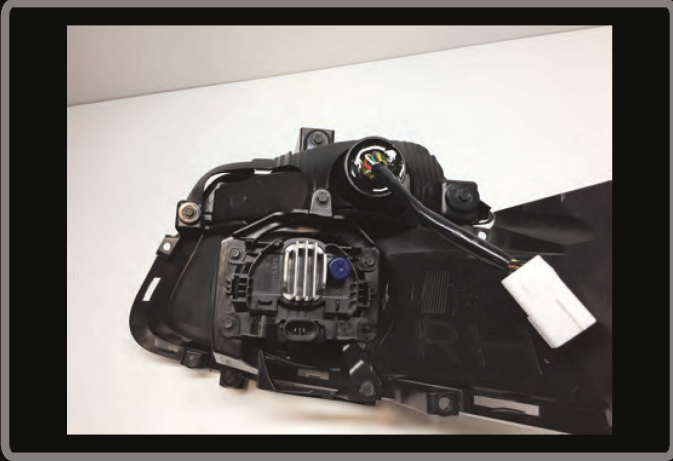

10. Connect the wiring of the lights to the wires on the vehicle, reinstall bumper in reverse order, and enjoy!

