




**HOLLEY SLIP LINK 1:1 RATIO
P/N 65444
INSTALLATION INSTRUCTIONS**

This link requires that the throttle arm be modified for proper operation.

Drill out the hole indicated on the diagram and insert the new link.
Secure the link in place with the original washer and cotter pin.

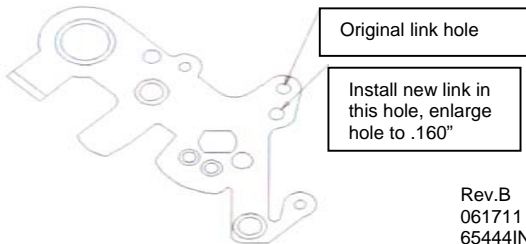

Rev.B
061711
65444INST