

7063-BH-C346 - mountune [Brake Hose Kit](#), Focus ST 2014+

The mountune Brake Hose Kit for the 2013+ MK3 Focus ST offers enhanced braking performance and driver feel all while maintaining DOT compliance for road legality.

You will need to gain access to the underside of the vehicle to install this hose kit. Please consult the Ford factory service manual for proper vehicle lifting and support procedures.

DISCLAIMER AND WARNING: All brake system work should be performed by a certified mechanic. If you are unfamiliar with brake components and/or the servicing of brake components, we recommend that you do not perform the installation of this brake hose kit.


The removal and installation procedure within the Ford factory service manual should be followed. The illustrations below are only for the reference of fastener torque.

FRONT:

NOTICE: Make sure that the brake hose is not twisted and correctly aligned when tightening the brake hose fitting or damage to the brake flexible hose may occur.


Torque :

- 1.: 97 lb.in (11 Nm)
- 2.: 133 lb.in (15 Nm)
- 3.: 159 lb.in (18 Nm)

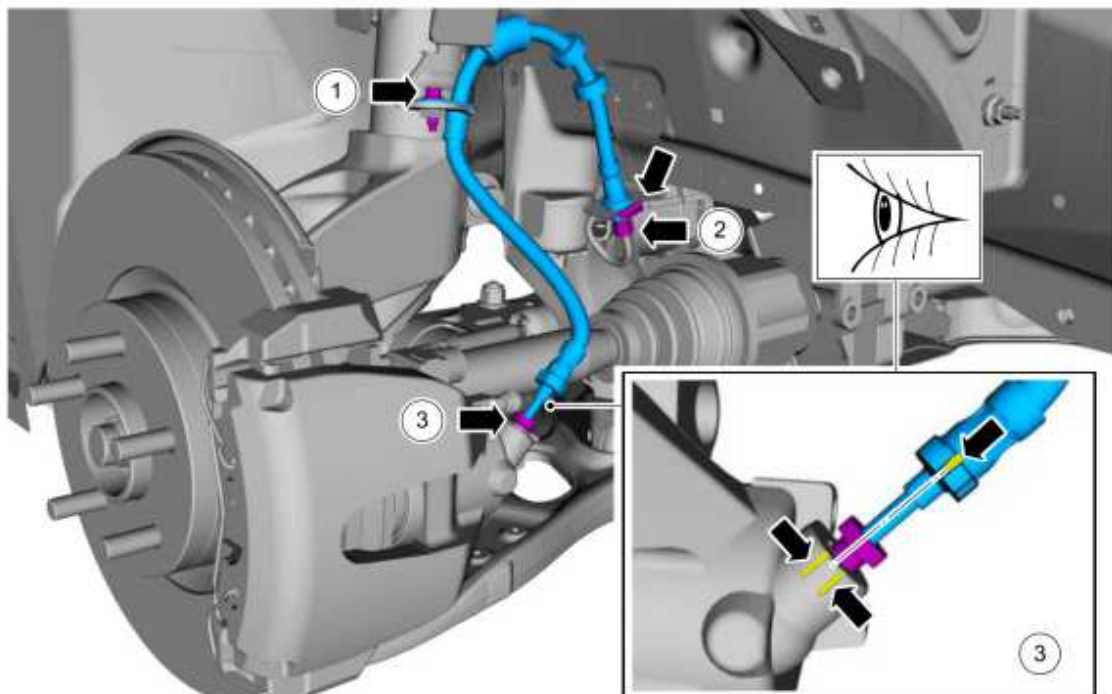


REAR:

Torque : 133 lb.in (15 Nm)

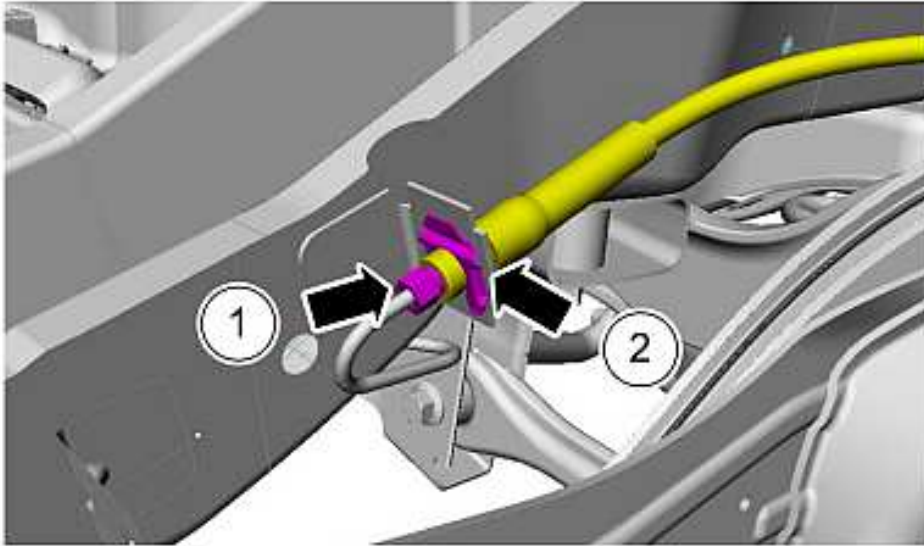


Torque :

- 1: 97 lb.in (11 Nm)
- 2: 22 lb.ft (30 Nm)

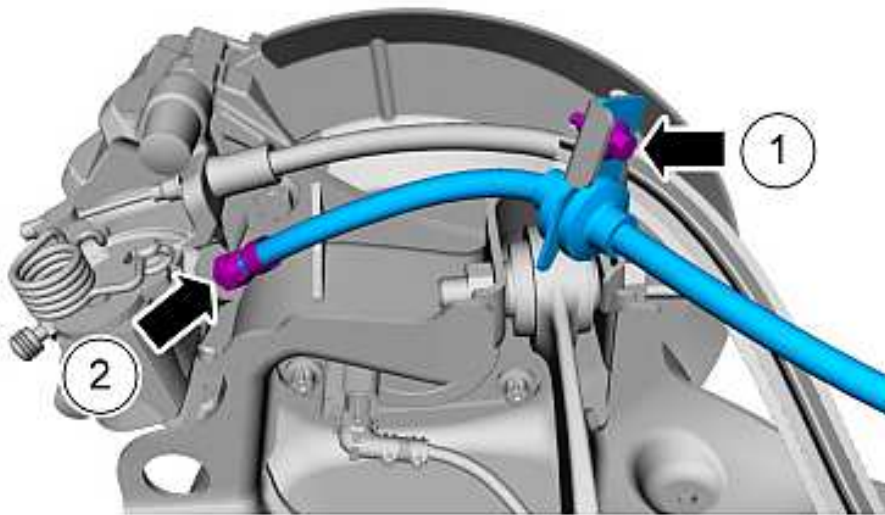

Finally while bleeding the brakes, we recommend flushing the system with Ford PM1C fluid or other high performance brake fluid. During the bleeding process, do not allow the brake fluid level in the reservoir drop below the “MIN” mark or the bleeding process may need to be redone.

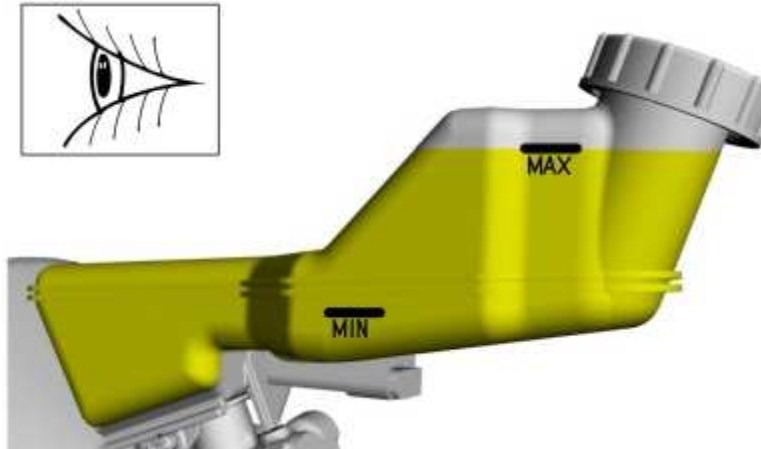

Before reinstalling wheels, clean all traces of brake fluid using a brake parts cleaner or other solvent. Then carefully check for brake fluid leaks and repair as necessary.