



INSTALLATION INSTRUCTIONS

Street Fire Blaster TFI Coil **PN 5527**

IMPORTANT: Read instructions before attempting the installation.

Parts Included:


1 - Street Fire TFI Coil

1 - Parts Bag

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

The Street Fire TFI Coil is designed to produce increased voltage and energy over the stock Ford TFI Coil. To improve your vehicle's ignition, try a set of Street Fire Spark Plug wires!

1. Disconnect the stock coil connectors and the spark plug wire.
2. Remove the four mounting bolts and remove the coil.
3. Install the Street Fire TFI Coil.
4. Plug in the wiring harness and connect the coil wire.

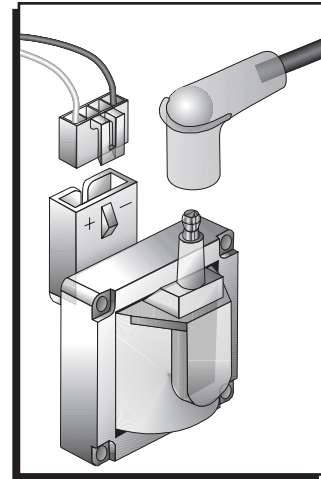

**Figure 1 Installing the
Street Fire TFI Coil.**