



THUNDERFORM[®]

J-WRANGLER-07 Installation Guide

Jeep Wrangler 4 Door JK Series (Drivers Side) 2007 - UP
(Loaded/Amplified)

STEP 1:




Locate the rooftop mounting bolts as shown (driver side, behind the rear seat above the wheel well). **Note:** Enclosure does not fit convertible version.

STEP 2:



Attach the mounting bracket to the enclosure as shown using the supplied hardware.

STEP 3:

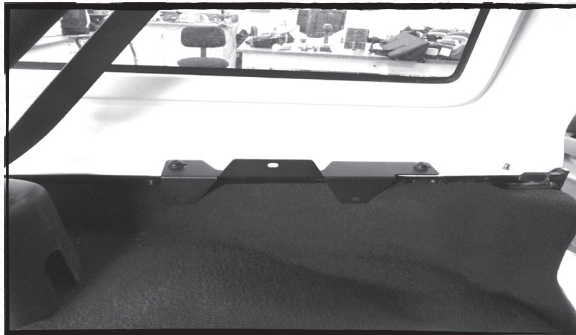

When the bracket is assembled to the enclosure, this is how the bracket mounts to the vehicle.


This is for reference only!

STEP 4:



Make all final wire connections (See Page 2), and mount the enclosure into place using the bolts removed from the rooftop mounting location in Step 1.

STEP 5:

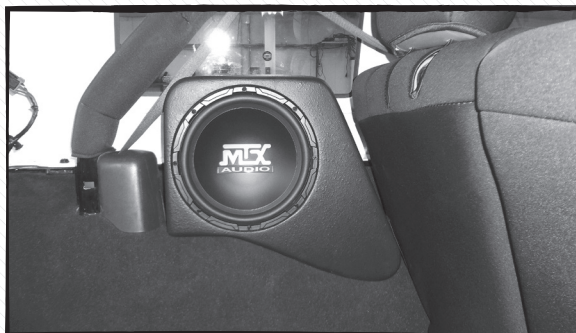


Your installation is complete. Enjoy your new bass in a small space.

J-WRANGLER-07 Installation Guide

Jeep Wrangler 4 Door JK Series (Drivers Side) 2007 - UP
(Loaded/Amplified)

Speaker Level Wiring

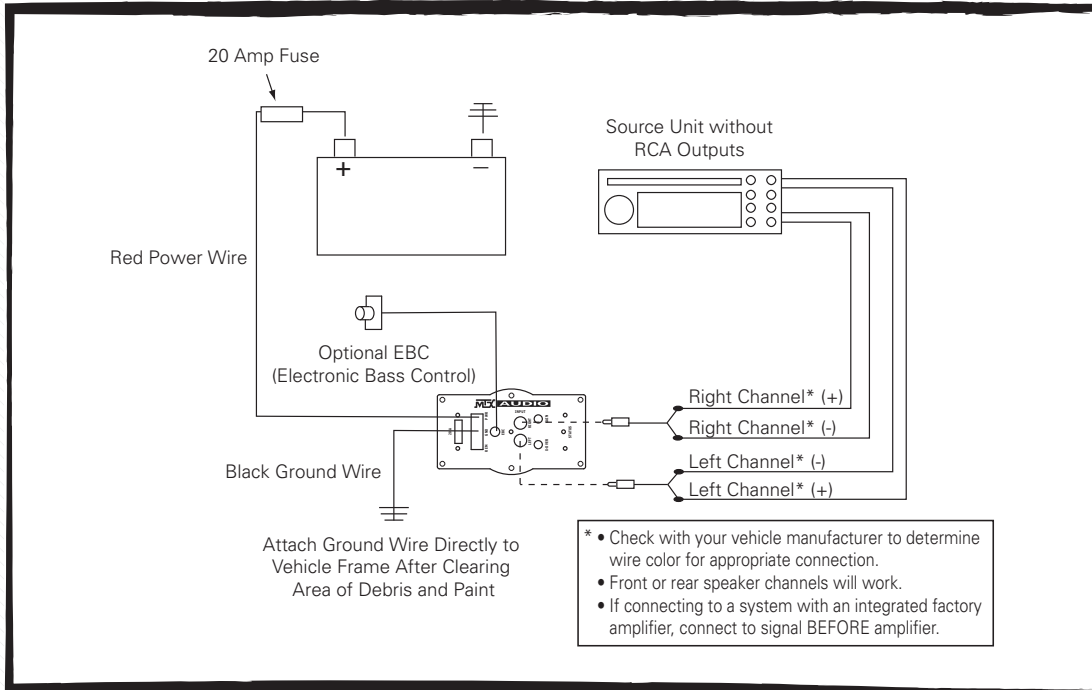

RCA Interconnect Wiring

