




Installation Instructions
Light Bar/Pre-Runner
14+ Chevrolet 1500
Part Number: C144LB/C143LH

Hardware Included
1 Light Bar
1 5" x 1/2" Bolt
1 1/2" Nylon Lock Nut

Tools Needed
Ratchet
18mm Socket
18mm Wrench
Drill
1/2" Drill Bit

CAREFULLY READ EACH STEP BEFORE ATTEMPTING INSTALLATION

- STEP 1:** Remove the front bumper and retain all hardware. **NOTE:** There are upward facing bolts that can be easily accessed if the grille is removed.
- STEP 2:** Remove the factory tow hooks using an 18mm Wrench and an 18mm Socket and Ratchet. Retain all hardware from this step.
- STEP 3:** Looking at the Passenger Side Frame Rail you will see that there are three holes that are used to hold the factory tow hooks. Using a 1/2" Drill Bit, you must drill the rear hole so that it is now straight through and showing on both sides of the frame rail. See Figure 1 to locate the rear hole.
- STEP 4:** Re-install the front bumper and grille if removed, using the factory hardware.
- STEP 5:** Slide the light bar into place through the tow hook openings and slide the tow hooks back into place. Fasten the tow hooks using the factory hardware with the exception of the rear bolt on the passenger side. Use the supplied 5" x 1/2" Bolt and Nylon Lock Nut in the rear passenger hole.
- STEP 6:** This concludes the installation.

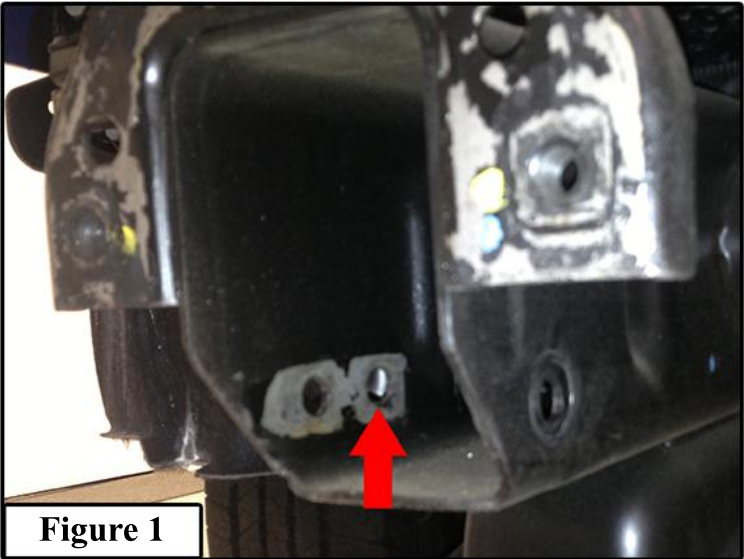

Products Licensed to N-FAB Inc. by Fichter Designs are protected by US Patent Law and International Copy Right Law. Protected Patents include US Patent #6588783, #6874801, #7416202. Other patents and continuances pending. N-FAB product configurations also protected by International Trade Dress Law. All Designs and Patent infringements will be prosecuted to the full extent of the law.