




PART NUMBER: F1730OR, F1730LD,  
F174LB, F173LH  
PRODUCT: LIGHT BAR  
APPLICATION: 17-CCRRENT  
F-250/F-350


Parts Included:	Qty
Light Bar	1
<b>Hardware :</b>	
Uses Factory Tow Hook bolts	

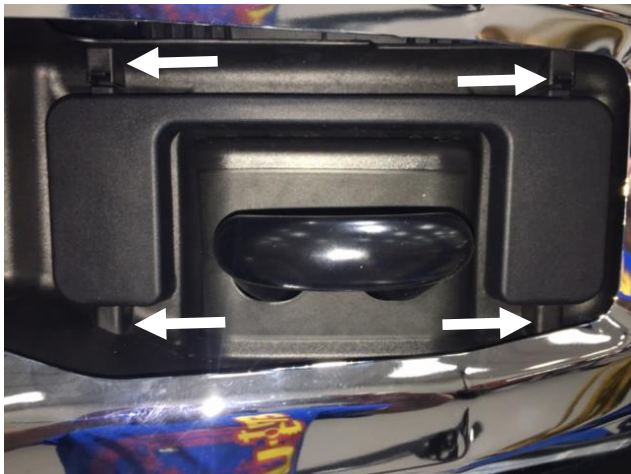

Will not be re-installed

**Step 1:** Remove the plastic tow hook cover by carefully pulling forward to release from bumper. (Both sides)

**Step 2:** Remove the two inner tow hook bolts from the jack plate and set aside. (Bothe sides)

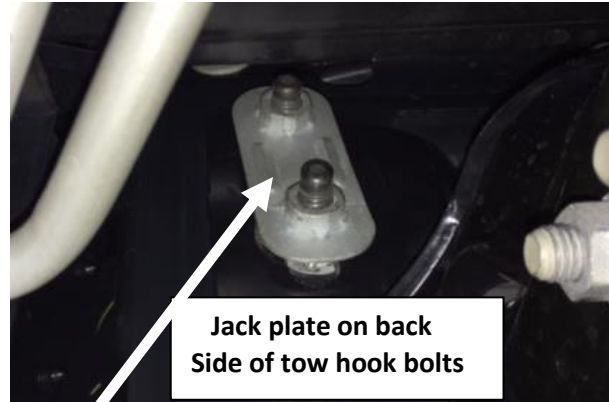



PART NUMBER: F1730OR, F1730LD,  
F174LB, F173LH  
PRODUCT: LIGHT BAR  
APPLICATION: 17-CCRRENT  
F-250/F-350

**Step 3:** Using the factory tow hook bolts and the jack plate, install Light Bar and tighten hardware. **Note:** *alternating from upper bolt to lower bolt will ensure a proper seat when tightening.*

