




# Installation Instructions: N-Fab Podium Nerf-Steps

HPC0773CC-TX / HPC0773CC-SS

GM  
2007-2013  
1500 EXTENDED CAB

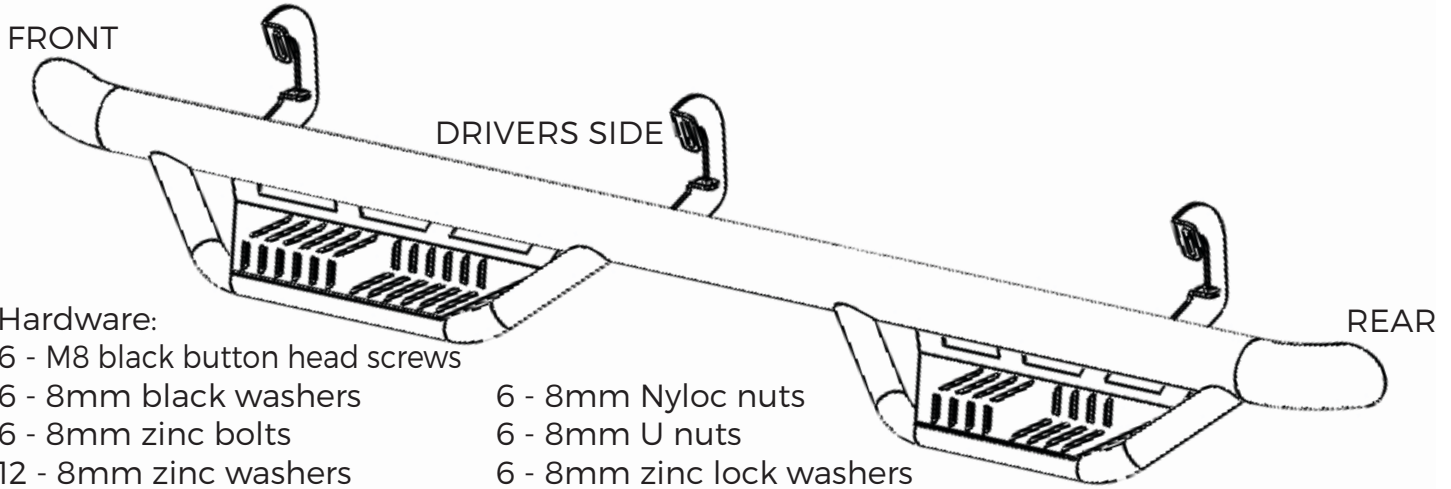


**Hardware:**

- 6 - M8 black button head screws
- 6 - 8mm black washers
- 6 - 8mm zinc bolts
- 12 - 8mm zinc washers
- 6 - 8mm Nyloc nuts
- 6 - 8mm U nuts
- 6 - 8mm zinc lock washers

**STEP 1:**

Identify the driver and passenger bars. The center bracket is closer to the front of the truck.

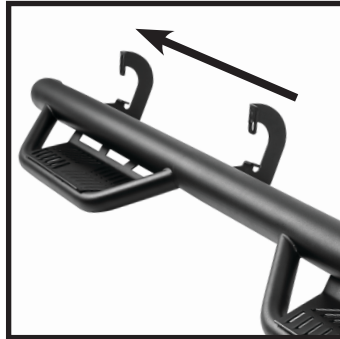

**STEP 2:**

Each mounting bracket consist of 2 mounting holes. The upper large hole mounts to the body of the truck and the lower smaller hole to the pitch weld.



**STEP 3:**

Insert spring loaded U nuts to the body of the truck. Install only one at the rear of the truck on 1500 models.



**STEP 4:**

Carefully place step into place. Use bolt, washer and begin hand tightening all 3 upper mountings. Best to have a assistant to lift and hold board in place.



**STEP 5:**

Insert button head bolt and washer through pinch weld hole and secure with locking nut and washer. With some 1500 models the pinch weld will have a OE nut welded to the truck.



**STEP 6:**

**Avoid using power or air tools.** Tighten pinch weld mounts first then upper bolts. Tighten to 20ft lbs torque to secure the board to the truck. Repeat the same procedure to the other side.

