




Installation Instructions: N-Fab Podium Nerf-Steps

HPC0773CC-TX / HPC0773CC-SS

GM
2007-2013
1500 EXTENDED CAB

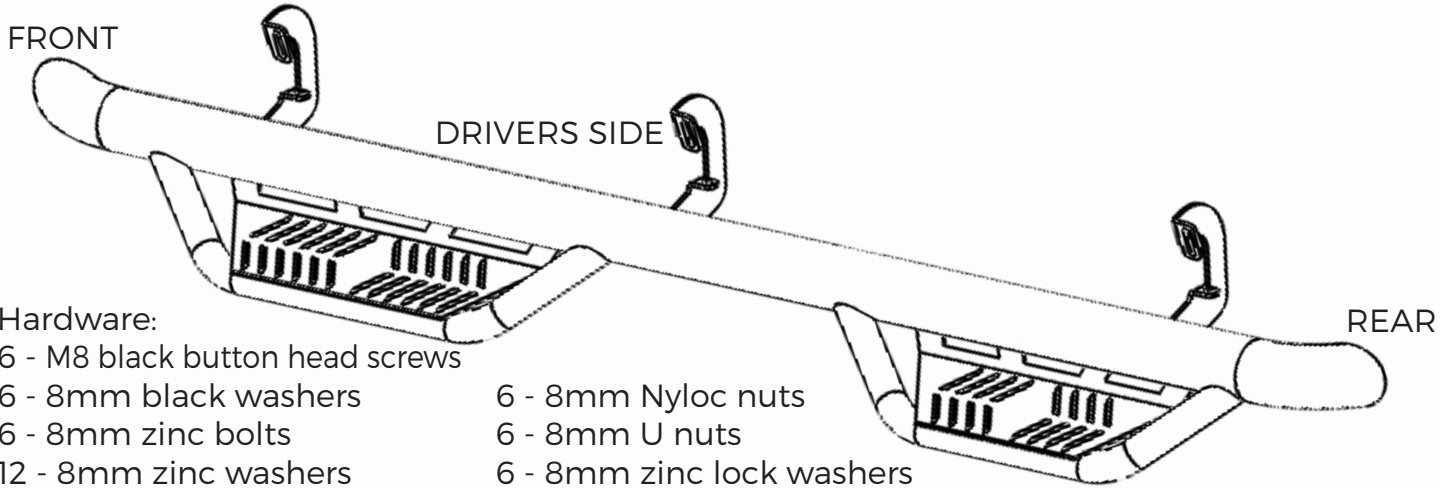


Hardware:

- 6 - M8 black button head screws
- 6 - 8mm black washers
- 6 - 8mm zinc bolts
- 12 - 8mm zinc washers
- 6 - 8mm Nyloc nuts
- 6 - 8mm U nuts
- 6 - 8mm zinc lock washers

STEP 1:

Identify the driver and passenger bars. The center bracket is closer to the front of the truck.

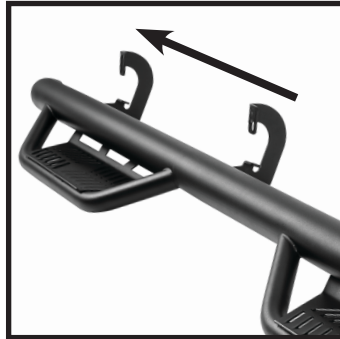

STEP 2:

Each mounting bracket consist of 2 mounting holes. The upper large hole mounts to the body of the truck and the lower smaller hole to the pitch weld.



STEP 3:

Insert spring loaded U nuts to the body of the truck. Install only one at the rear of the truck on 1500 models.



STEP 4:

Carefully place step into place. Use bolt, washer and begin hand tightening all 3 upper mountings. Best to have a assistant to lift and hold board in place.



STEP 5:

Insert button head bolt and washer through pinch weld hole and secure with locking nut and washer. With some 1500 models the pinch weld will have a OE nut welded to the truck.



STEP 6:

Avoid using power or air tools. Tighten pinch weld mounts first then upper bolts. Tighten to 20ft lbs torque to secure the board to the truck. Repeat the same procedure to the other side.

