

PART NUMBER: T071MRDS

PRODUCT: [MRDS BUMPER](#)

APPLICATION: 07-13 TUNDRA

Parts Included:	Qty
MRDS Bumper	1
Hardware Pack :	
Uses Factory Hardware	




INSTALLATION:


NOTE: Carefully read entire instructions thoroughly before attempting to install this part

Step 1: Remove factory bumper. Start by removing the front fender splash guard (both sides).


Fig. A

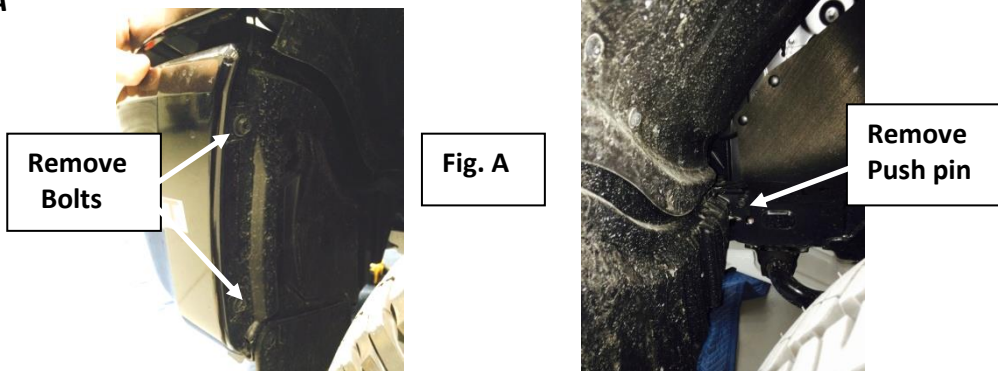

Step 2: Unplug factory fog lights and sensors. Next, remove the (4) 14mm hex nuts (both sides) from the frame studs and set aside. This hardware will be re-used in the installation. *Fig. B*

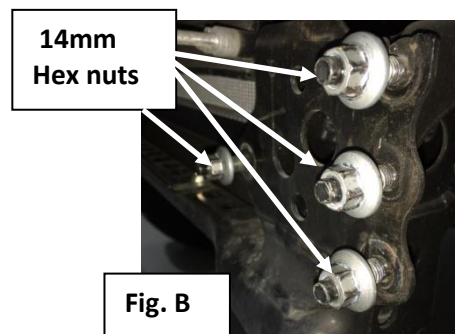

Step 3: Carefully pull bumper straight forward and away to remove from vehicle and set aside. ***Fig. C***

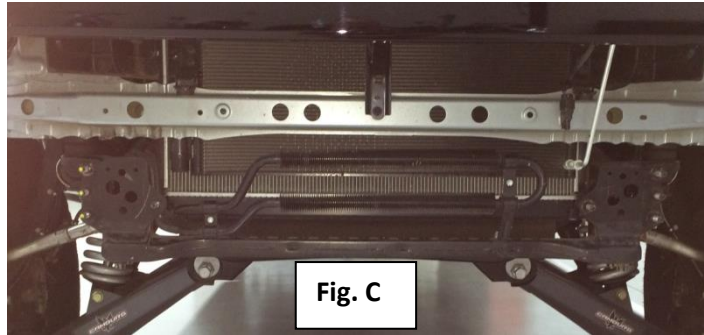

Step 4: Install MRDS bumper to factory mounting studs and loosely fasten with the 14mm hex nuts that were removed step 2.

Step 5: After final adjustment, tighten all hardware to factory specs. Your install is now complete.