




PART NUMBER: F1785CC,F17100CC  
F17105CC-6  
PRODUCT: [Hoop steps](#)  
APPLICATION: 2017-C FORD  
F250/350 CREW CAB 6.5 BED

Parts Included:	Qty
Driver Side Step	1
Passenger Side Step	1
Hardware	
8mm nuts	18



**Step 1:** Starting with the Driver Side. Remove all 8mm flange nuts from the 8mm factory threaded studs to remove the OE running boards. Repeat for passenger side. **(Fig.A)**.

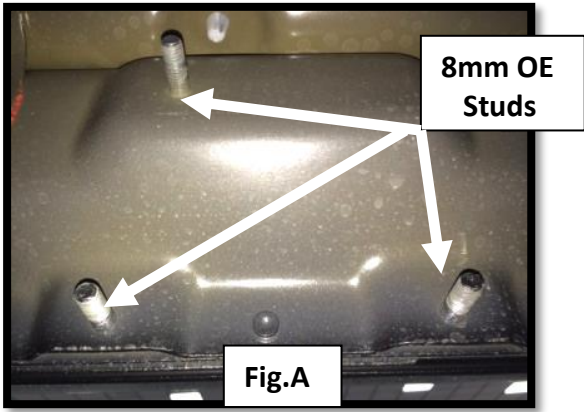

**Step 4:** Using the supplied 8mm flanged nuts, fasten all nine mounting positions. Leave loose at this time. **(Fig.B)**

**Step 3:** Carefully raise Nerf-Step into position and align the three brackets with the nine 8mm OE threaded studs.

**Fig. B**



**Step 5:** Starting with the rear bracket, push up towards the pinch weld so the 3" main bar is as high and tight to the body as possible. Tighten all three 8mm flanged nuts.

**Step 6:** Move to the front bracket and repeat same step. Finish by securing the center bracket.

**Step 7:** Repeat steps 3-6 for passenger side. Your install is now complete.

