



PART NUMBER: J9746, J9756U

PRODUCT: [NERF STEPS](#)


APPLICATION: 97-06 TJ JEEP

PARTS INCLUDED:	QTY
Driver Side Step	1
Passenger Side Step	1
Uses Factory Hardware	



INSTRUCTIONS:


Step 1: Starting with the driver side, remove the three body mount bolts with bushings. and set aside. **Fig. A**

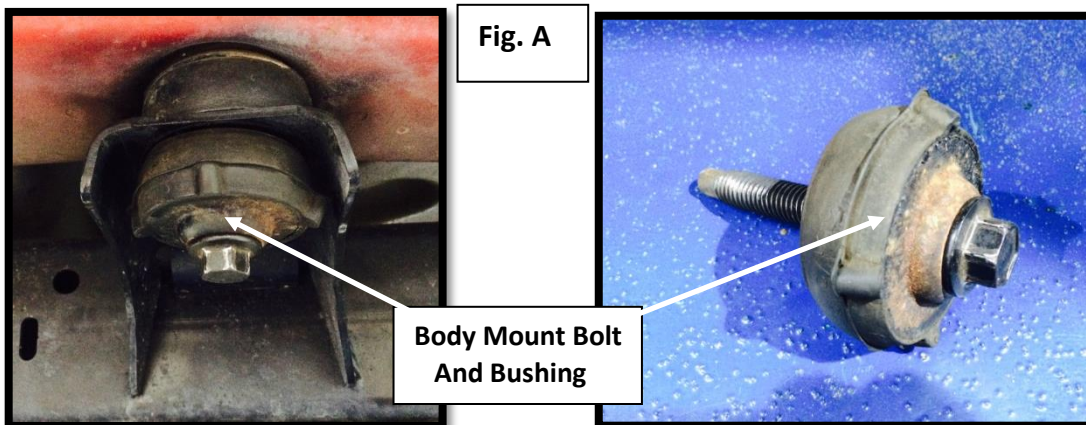


Step 2: Next, install the factory body bolts and bushings into the Nerf-steps center and rear bracket with the bushing on top of the mount creating an assembly. **Fig. B**



Step 3: Carefully raise step up into position aligning the brackets with the factory mounts and thread the bolts loosely. **Fig. C**

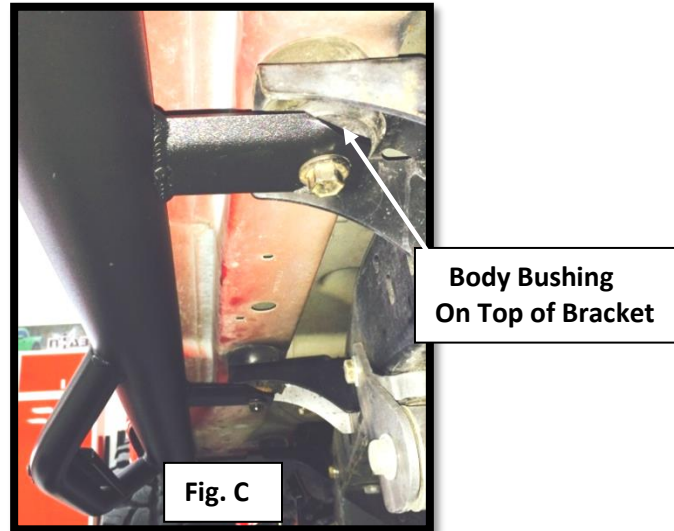

Step 4: Next, install the front body bolt and bushing and loosely tighten... **NOTE: Be sure the round opening in the step bracket fits around the upper body bushing and set s flush with body mount not to pinch the bushing. Fig. D**

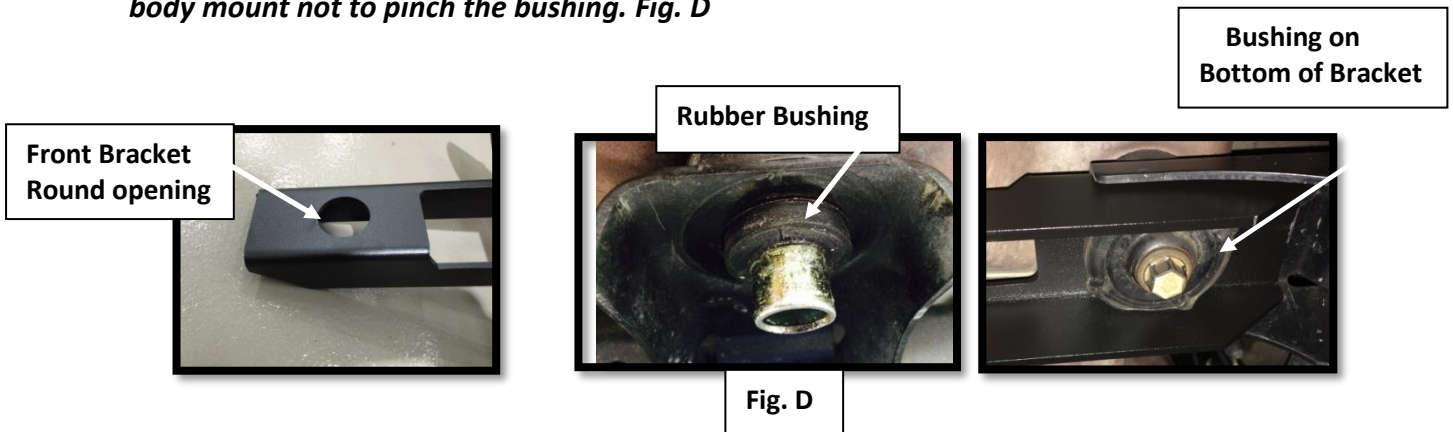

Step 5: Tighten all hardware to factory specs starting with the center bracket then front and rear.

Step 6: Repeat steps 1-4 with passenger side. **NOTE: Check all factory hardware periodically for tightness to ensure safety and longevity of steps.**