

CAUTION

- Never smoke inside the tent. Never use candles, light matches or allow any type of open flame in or near the tent.
- Do not cook inside the tent.
- · Do not store flammable liquids inside the tent.
- Allow adequate ventilation inside the tent at all times.
- Never refuel lanterns, heaters or stoves inside the tent.
- · Do not smoke inside the tent.
- NEVER run the engine when the tent is attached to the vehicle.
- When the temperature is below freezing, do not install the tent when you vehicle is wet as it may cause damage
- · Do not attempt to drive the vehicle with the tent attached

SELECT CAMPSITE

- Select a level campsite
- Park the vehicle into the chosen campsite with the vehicle in park and turned off. Apply the parking brake.


SETTING UP THE TENT

NOTE: For easier assembly, set the tent up on the ground leaving step 2-4 until the end. After the poles are inserted, lift the tent into the truck bed and strap down.


- 1) Lower the truck's tailgate.
- 2) Remove the tent from the tent bag and lay it flat on the ground. Locate the front door and place this end at the tailgate with the other end towards the cab.




3) Locate the tent side straps (3 per side). Loosely attach each strap to the truck's body.

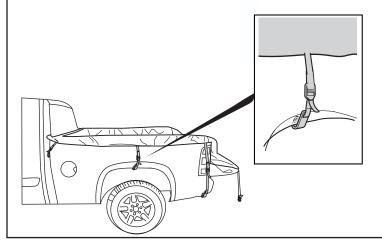

4) Locate the tent tailgate straps (3). Slide the 3 straps with male clip between the truck box and the tailgate. Connect the strap with the male clip to the corrsponding strap with the female clip.

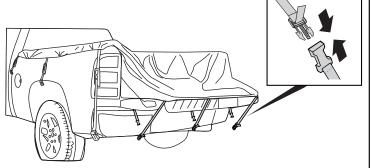


5) Assemble the tent poles by unfolding each section. Below is a list of the poles and the placement.




Pole Black poles (A) Brown Pole (B) Short Olive Green pole (C) Long Olive Green pole (D) Black Pole (for step 8) Navy Blue Pole (for step 12) Location Corner-to-Corner Side-to-side Access Cab Tailgate Inside Inside Awning

- 6) Inserting the poles into the corresponding color sleeve. Do not place the poles into the pole pockets at this time.
- A) Slide the black pole diagonally, corner-to-corner going through the pole sleeves in the roof of the tent. Repeat for the other black pole.
- B) Insert the brown pole into the corresponding brown sleeve in the roof of the tent, going side-to-side. Make sure the
- C) Slide the short olive green pole into the corresponding pole sleeves at the back (cab) of the tent.
- D) Slide the long olive green pole into the corresponding polesleeve at the front (tailgate) of the tent.

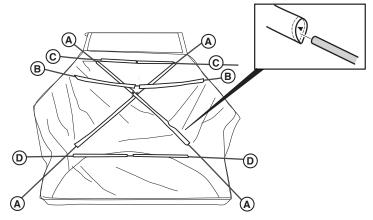


7) Insert the poles into the pole pockets in the below order.

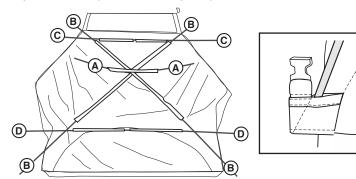


- A) Insert the brown (side-to-side) pole into the black webbing pocket above the window.
- B) Insert the black (corner-to-conrer) pole into the black pole pocket near the truck's cab. Insert the other end into the black pole pocket by the tailgate. Repeat with the other black pole.
- C) Insert the end of the short olive green (rear cab) pole into the grommet hole located on the green tab near the side of the tent. Repeat on the other side.
- D) Insert the long olive green (tailgate) pole into the orange pole pockets at the tailgate.
- E) Insert the black (inside) pole into the black pole pocket (above door and rear cab access) inside the tent. Velcro the pole to the tent using the Velcro tabs.

NOTE: The poles may get stuck on the pole sleeves. Do not force the pole, simply lead the pole through the sleeve.

8) Once the tent is assembled, attach the pole clips to the tent pole.

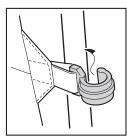


- 9) If the tent side straps are too loose, tighten the straps. Remember the straps should not be too tight.
- 10) To install the gear loft, place each corner hook of the Gear loft into the loop located on the ceiling of the tent.

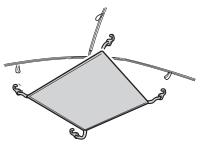


SETTING UP THE RAIN FLY

10) Locate the front of the rain fly that goes over the do or It will have a woven Napier logo tag. Place the rain fly over the tent. You may need assistance due to height.

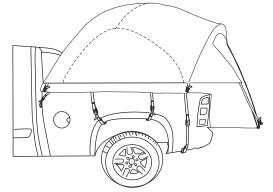


11) Attach the rain fly to the tent by clipping the 6 straps (2 per side and 2 at tailgate). Tighten the straps if necessary.

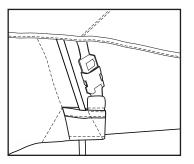

SETTING UP THE AWNING

- NOTE: If you do not want to use the awning, roll up the awning and secure it with the toggles.
- **12)** Slide the gray poles through the pole sleeve in the roof of the awning. Insert the poles into the pole pockets on each corner of the awning.
- **13)** Assemble the awning poles (4 pieces). Insert the top pole into the bottom end with clasp. Place one pointed end into the grommet hole at the tailgate. Place the other end into the grommet hole at the corner of the awning. Secure with scrap. Repeat for the other pole.

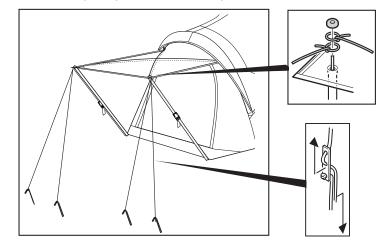

14) Insert the ring on the guide rope around the point and place the awning cap over the guide rope. Stake the other end of the ground with a peg. Adjust length of guide rope.