

# Installation Guide

## Front Lower Control Arm Rear Bushing


Z 5179

To suit: Volkswagen Golf II 1984 - 1992

*(Always refer to the current catalogue for complete application listings)*

**N.B:** This installation guide should be used in conjunction with the workshop manual.  
All fastener torque settings should be adhered to.

- Raise vehicle evenly and safely support.
- Remove the front control arms.
- Remove the old bushings utilising a hydraulic press.
- Prior to pressing, soak the new bushing in soapy water.
- Press new bushing into arm.
- Grease the ID of the bushing with the grease supplied.
- Install the larger supplied tube into bushing.
- Position control arm into place, then slide the smaller tube up inside the clevis.
- Tighten all bolts to manufacturers specification.
- Carry out wheel alignment.
- Re check bolts after initial 100km travelled.

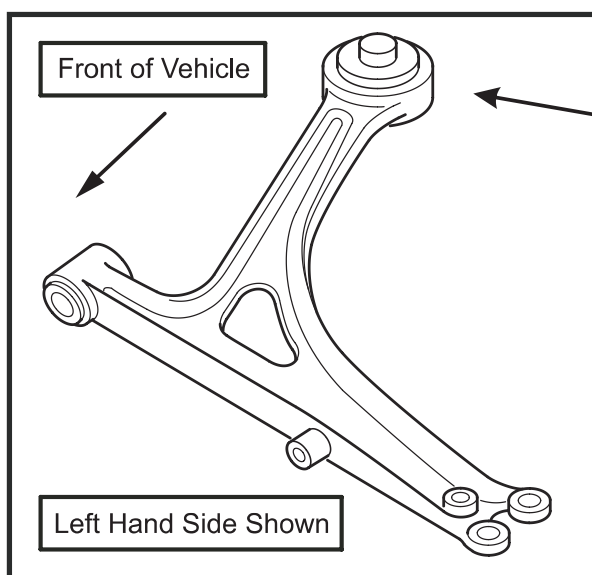

Front control arm  
lower inner rear  
bushing,

**N.B:** It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.