

Installation Guide

Front Lower Control Arm Rear bush

Z 5191

Suits: Holden cruze JG 09-on

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

Drivers side rear mount - rear view void orientation

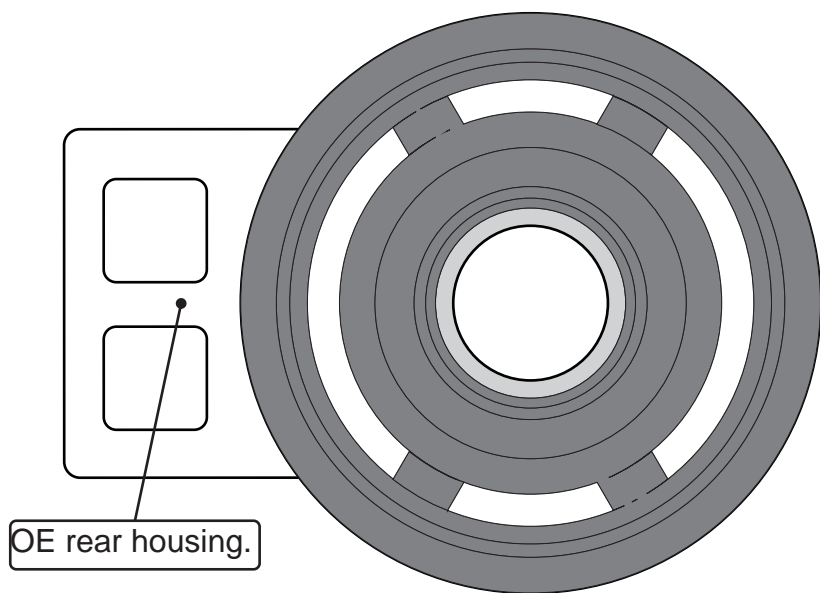



fig.1

Remove the arm from the vehicle and remove OE bush from rear housing, Press urethane bush into housing ensuring the void orientation is the same as shown in fig1. and the wider flange is facing toward front of vehicle.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Greasing note:
Where all washers and crushtubes come in contact with urethane bush all mating surfaces must be greased prior to installation.

Drivers side arm assembly diagram

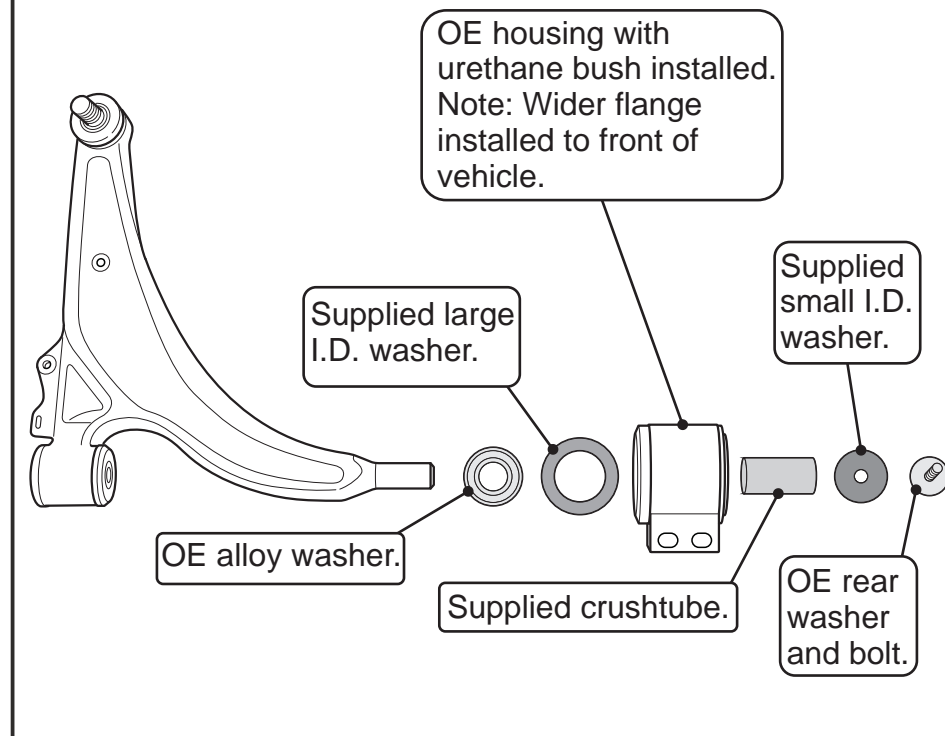

Crushtube note:
One end of crushtube I.D. is tapered, The tapered end of the crushtube must be installed toward the front of vehicle.