

Installation Guide



Front Upper Inner Bushings

Z 5311

Suits: Holden Rodeo

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

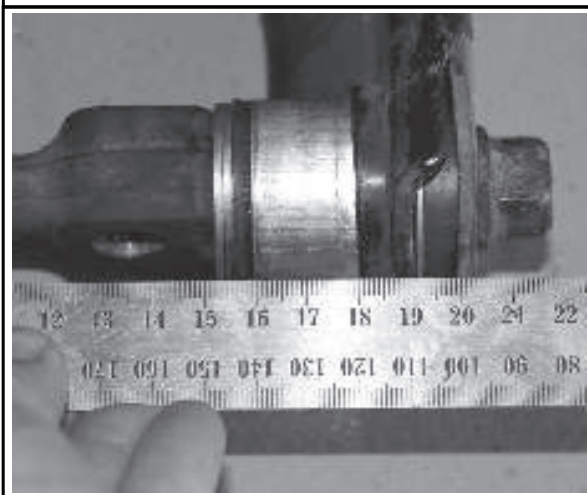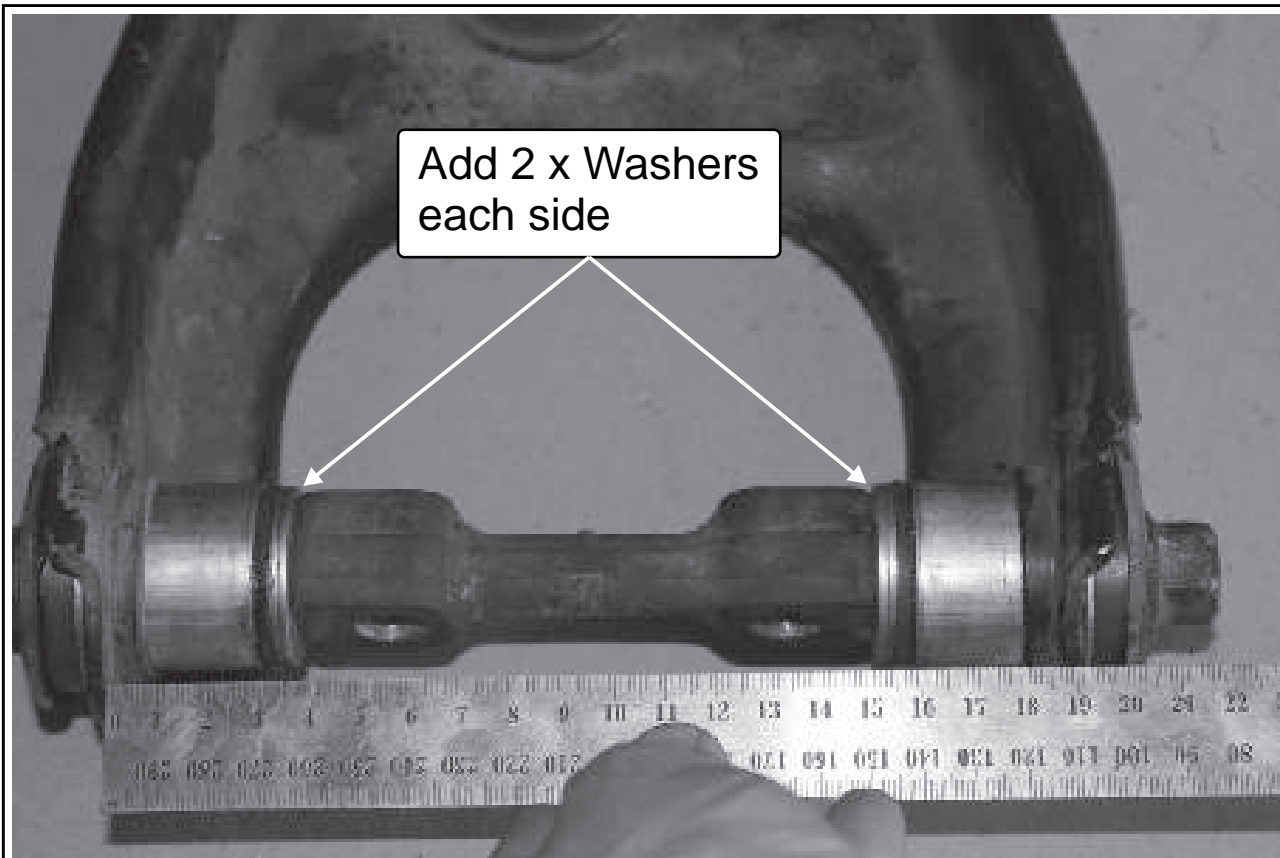

Note

Before removal of OEM bushings measure the width of the OEM arm to ensure during removal and the installation process that the arm is not damaged or bent through excessive pressure applied to the arm when using a hydraulic press.

The measurement should be approximately 187mm wide from inner face to inner face (As shown in image). The centre of the arm must be supported either with a tube cut in half or a piece of angle iron cut to 187mm in length to aid in support of the arm during the hydraulic pressing procedure.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.