

Installation Guide

Rear Subframe Mount - Insert Bush Kit


Z5198

Suits: Subaru My1 1 STI Only. 9/10 - on

(Always refer to the current catalogue for complete application listings)

N.B: - This installation guide should be used in conjunction with the workshop manual.

- All fastener torque settings to be adhered to
- It is recommended that a wheel alignment is carried out after fitment
- Top mounting washers require tabs to be flattened (Refer to Fig.1)

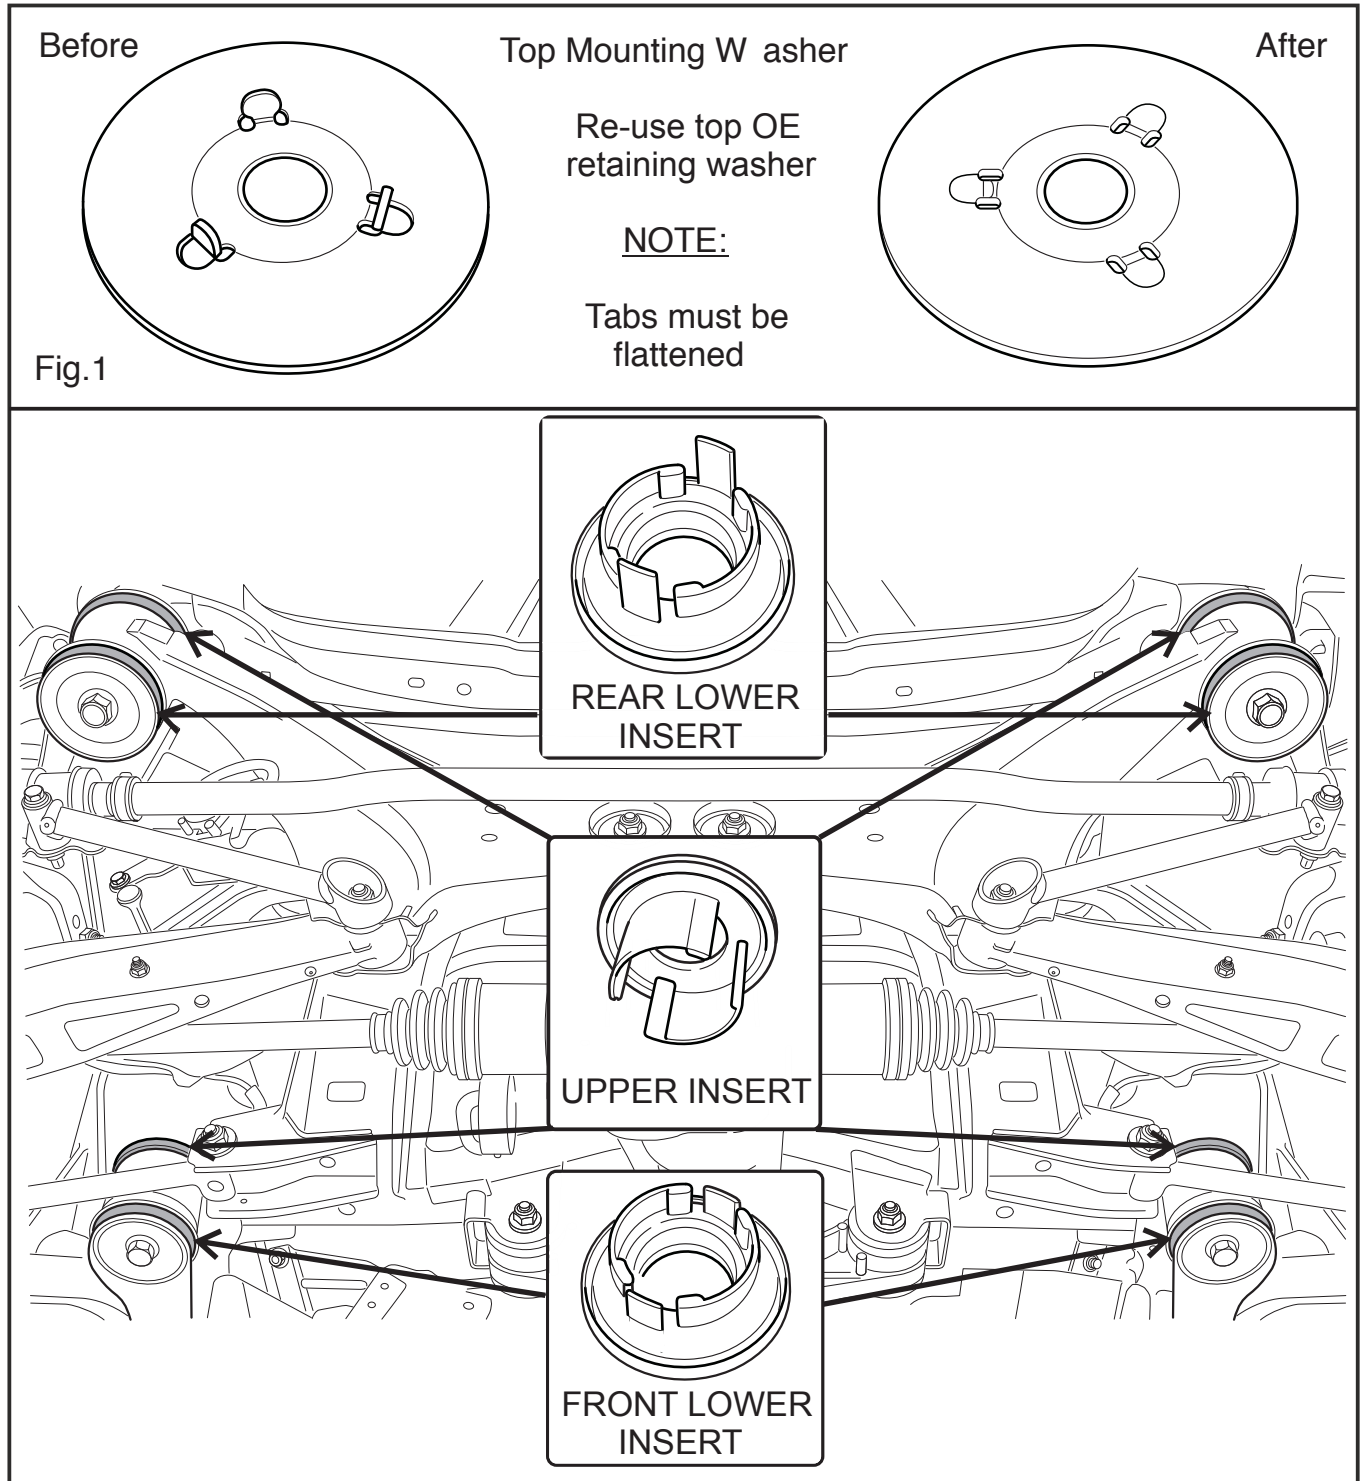

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.