



Kit Contents		
Description	Part No	Pcs
Cable ties 4,5x300		6
Cable ties 3,5x190		4
Cable ties edge clip 4,5x190		2
Screw M8		6
Connector		4
Cover		2
Seal		2
Cancellation kit		4

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

BMW M3 F80, M4 F82 EDC Cancellation Kit

35020-02

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the EDC Cancellation Kit.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported.


Front axle and rear axle:

1

Open the connector lock. Remove the standard wire out of the connector.




Connector lock

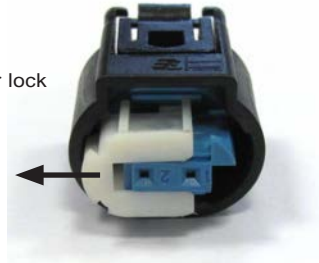

2

Insert the completed wire with sealings into the supplied connector. The pin position/ cable colour is not relevant. After this lock the connector by bringing back the plastic part in the picture above in the direction of the arrow "Connector cover".

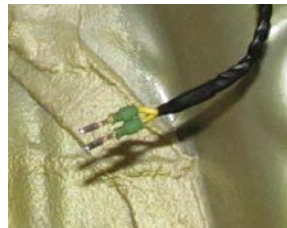

MOUNTING INSTRUCTIONS


Front axle:

Fix the front cancellation kit with the supplied cable ties on the wire harness. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties on the wire har-ness.



Rear axle

Kit includes seals, covers and screws. These are absolutely required for the installation. The original seal, cover, and the distance is no longer necessary.

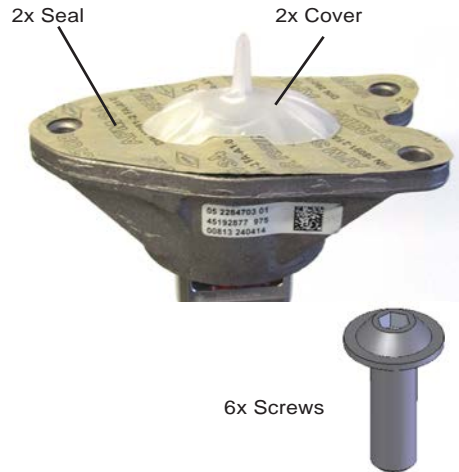

Rear axle - left:

Fix the rear cancellation kit with the supplied edge clips on the bracket as shown in the picture. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties on the wire harness.



Rear axle - right:

Fix the rear cancellation kit with the supplied cable ties on the wire harness as shown in the picture. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties on the wire harness.

