



Kit Contents		
Description	Part No	Pcs
Cable ties 3.5x190		8
Cable ties edge clip 4.5x190		4
Connector		4
Cancellation kit		4

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Cancellation kit EDC, BMW F30

35020-03

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the Cancellation Kit.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported.


Front axle and rear axle:

1

Open the connector lock. Remove the standard wire out of the connector. Use a correct tool.



Connector lock

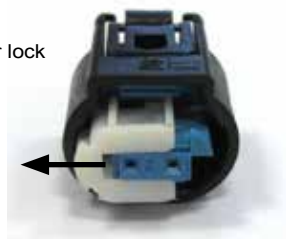

2

Insert the completed wire with sealings into the supplied connector. The pin position/ cable colour is not relevant. After this lock the connector by bringing back the plastic part in the picture above in the direction of the arrow "Connector cover".



MOUNTING INSTRUCTIONS

Front axle:

3

Mount the front axle electronic kit with the supplied edge clips and cable ties on the chassis edge. Run the shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties. Insert the standard connector into the electronic component connector until it locks.



Rear axle:

4

Mount the rear axle electronic kit with the supplied cable ties on the wire harness. Run the shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties. Insert the standard connector into the electronic component connector until it locks.

